

Seam Location

4

WARNING: The columns of this base contain high force pneumatic springs that are sized to lift a work surface and accesories. The proper sizing, handling, and assembly of this unit is a necessity to prevent damage to columns or serious injury. Only adjust table if weight is within the minimum and maximum lift rating for this unit.

WARNING: Do not operate release lever until table is completely assembled and in an upright position.


WARNING: Because of size and weight of this frame and table, make sure you have enough help (minimum two people) to safely assemble and position unit as needed.

ASSEMBLY INSTRUCTIONS

Note: Assembly should be done on a clean, flat, non-abrasive surface.

- 1. Align the Four Holes in the Mounting Plate (Item #2) with the Four Tapped Holes in the Column (Item #3) as Shown. Insert four M8 x 45mm Screws (Item #1) Thru the Mounting Plate and Thread Into the Column. With a 5mm Hex Drive, Tighten the Screws to 15 Foot Pounds of Torque.
- 2. Align the Four Holes in the Mounting Plate with the Four Tapped Holes in the Column (Item #4) as Shown. Insert four M8 x 45mm Screws Thru the Mounting Plate and Thread Into the Column. With a 5mm Hex Drive, Tighten the Screws to 15 Foot Pounds of Torque.
- 3. Align the Holes in the U-Base Assembly (Item #5) with the Tapped Holes in the Bottom of the Columns as Shown. Insert the M8 x 60mm Screws (Item #6) Thru the U-Base Assembly and Thread Into the Columns. With a 5mm Hex Drive, Tighten the Screws To 15 Foot Pounds of Torque.
- 4. If Not Pre-Installed, Press End Caps (Item #7) Into the Ends of U-Base Tubes.
- 5a. Glide: If Not Pre-Installed, Turn the Threaded End of the Glides (Item #8) Into the Threaded Holes On the Bottom Side of the U-Base Assembly.
- 5b. Casters: If Not Pre-Installed, Turn the Threaded End of the Casters Into the Threaded Inserts On the Bottom Side of the U-Base Assembly. Tighten with a 17mm open end wrench.
- 6. Turn the Release Lever Adjustment Nut until there is a small amount of play in the handle lever.
- 7. When attaching the handle to the table, place such that the cable does not kink.
- 8. Ensuring screws do not protrude thru top, attach Mounting Plate with #12 x 1" Screws (Item #10). Attach Release Lever and Mounting Clips (Item #9) with #8 x 3/4" Screws (Item #11).

Parts List		
Seq	Qty	Description
1	8	Screw, M8 x 45mm FHCS Hex Drive
2	1	Mounting Plate, Double Column
3	1	LR Column Assy w/Lockable Spring
4	1	LR Column Assy w/Non Lockable Spring
5	1	U-Base Assembly
6	8	Screw, M8 x 60mm BHCS Hex Drive
7	4	Tube End Cap
8	4	Leveling Glide or Caster
9	2	Mounting Clip, 5/16"
10	11	Screw, #12 x 1" PPH
11	6	Screw, #8 x 3/4" PPH

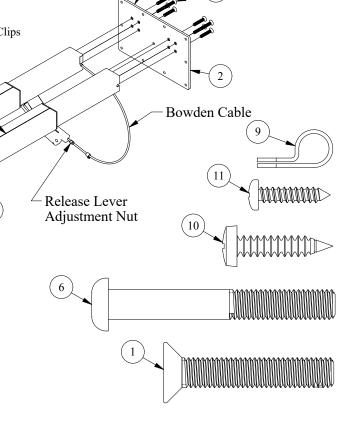

artcobell

Short Side of

Mounting Plate

