

# Shape Tables

Available in a range of shapes and sizes with adjustable leg kit options.

## 1 1/8" Particleboard Core with Banded Edge (E)

The top is constructed of a solid core 1-1/8" particle board surfaced with a high-pressure laminate and a backer sheet for balanced construction and minimize warping. 1-1/8" flat vinyl or t-mold edge is secured to the perimeter of the top. Stretcher bars are standard on all tops 60" wide or greater. The stretcher is a 1" x 1" 16-gauge tube attached to the top with five #12 x 1-3/4" Phillips head wood screws.

### Legs


Available in three height range options. Juvenile height adjusts from 15" to 20" in 1" increments. Table height adjusts from 19" to 29" in 1" increments. Standing height adjusts from 27" to 42" in 1" increments. A single 3/16" Allen set screw is used to lock the leg at the desired height. Adjustable height legs consist of a 2" diameter 16-gauge powder coat upper leg receiver and a 1-3/4" 16-gauge chrome-plated lower leg insert with a decorative polypropylene cover and 3/8"-16 threaded nut. The upper leg is welded to a 1/8" steel triangular top plate with three 14-gauge gussets for additional strength. Legs come standard with nylon glides, providing a 3/4" height adjustment range and a 3/8"-16 threaded stem. Optional 50mm dual-hard wheel locking casters with a 3/8"-16 threaded stem are available for easy field installation.

### Fixed Legs

One-piece, non-adjustable leg kits. DTLP-4F Fixed Height Legs bring the assembled height of D.H.T. (1-1/8") desktops to 25", 27", 29", 36", and 42". Legs are comprised of a 1.75" diameter 14-gauge powder coat. The leg insert is a decorative polypropylene cover. The leg is welded to a 13-gauge formed steel leg bracket with a wrap-around single-piece 13-gauge formed steel gusset for additional strength. Legs include standard 3/8"-16 threaded stem nylon glides that provide a 3/4" height adjustment range. Optional 50mm soft dual-wheel locking casters with a 3/8"-16 threaded stem are available for easy field installation.

### T-Legs

Available in four base widths: 18", 24", 30", and 36". Three height-adjustable options: Juvenile (16"-20"), Seated (20"-29"), and Standing (28"-42"), adjustable in 1" increments. T-Legs consist of a 2" diameter 16-gauge powder coat upper leg receiver and a 1-3/4" 16-gauge powder coat lower leg insert. The upper leg is welded to a 13-gauge formed full-width steel top plate with one 13-gauge formed wrap-around gusset for additional strength. Legs come standard with nylon glides, providing a 3/4" height adjustment range and a 3/8"-16 threaded stem. Optional 50mm dual-hard wheel locking casters with a 3/8"-16 threaded stem are available for easy field installation.

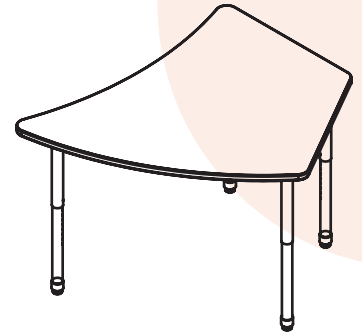


# Shape Tables

## Accessories


### Grommets

3" round grommets are available as a field installed option. Grommets have 2 cord access holes and are constructed of high impact resistant ABS with a light textured black finish. Grommets have 1" thick sleeve and a top surface flange diameter of 3.5"

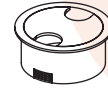

### Casters

50mm dual-soft wheel casters, 3/8" - 16 x 1" threaded stem. Standard locking 360 degree swivel. Available in grey (NXT MOV) and black. TA-CPS4 Casters are black. TA-CPMS50T4 NXT MOV Caster are two tone medium gray with dark gray tread.

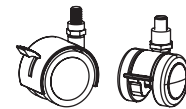

### Felt Glide Pack

3/8" - 16 x 1" threaded stem




### Compliance

- > Tested to applicable ANSI/BIFMA Furniture Standards
- > Indoor Advantage™ Gold. Indoor air quality certified to SCS-EC10.3-2014



# Shape Tables

## Curve S

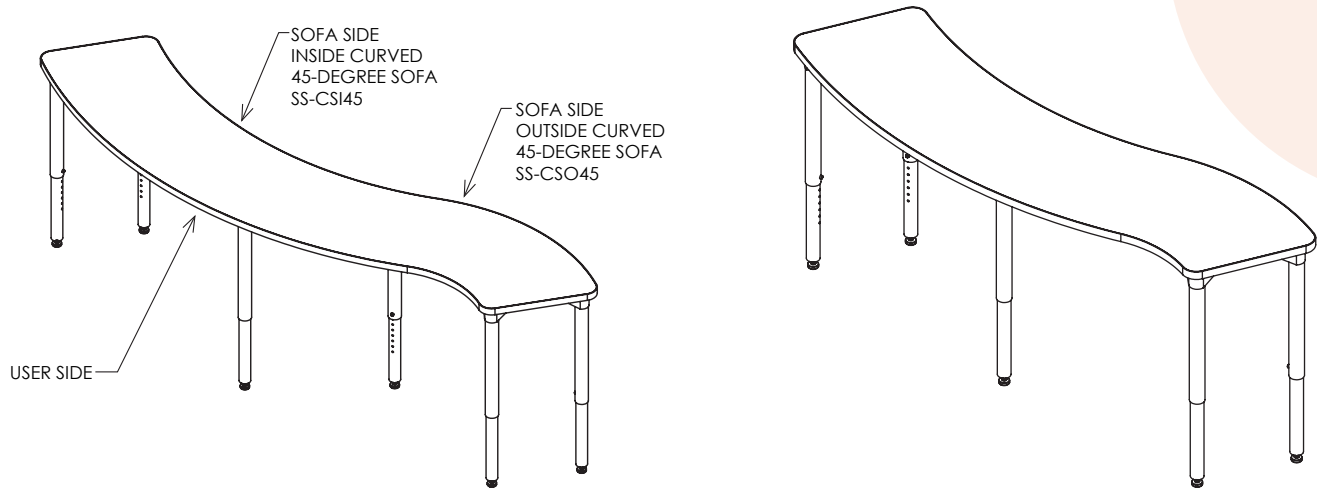


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.* USER SIDE		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-CSIO45E	18"	77.875"	30.75"	32.75"		X
DTT-CSIO60E	18"	101.875"	42.5"	44.25"		X

### Notes

\*D.B.L. (Distance Between Legs)




\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)


- Table Top:
  - 1 1/8" thick
  - 45# particleboard
  - Edge banding
  - Predrilled for DTLP legs
- Table top can use DTLP adjustable and fixed-height legs.
- Model No. DTT-CSIO45E:
  - Uses 5 legs
  - Tabletop matches inside curve sofa 45-degree radius, model no. SS-CSI45, and outside curve sofa 45-degree radius, model no. SS-CSO45.
- Model No. DTT-CSIO60E:
  - Uses 6 legs
  - Tabletop matches inside curve sofa 60-degree radius, model no. SS-CSI60, and outside curve sofa 60-degree radius, model no. SS-CSO60.
- Dashed line on models indicates where inside and outside sofas match up to each other on the sofa side.

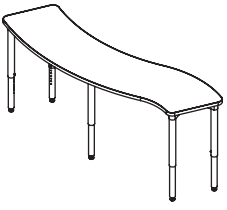

# Shape Tables




## Curve S 45°

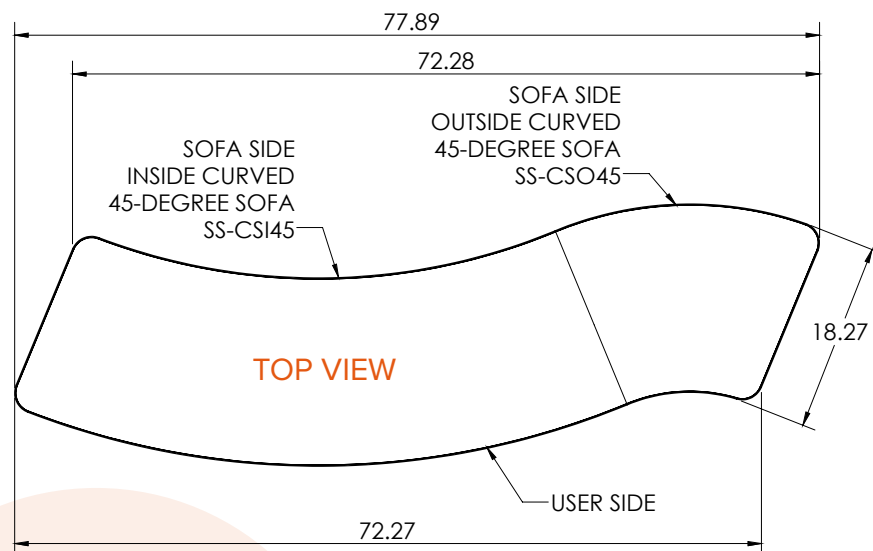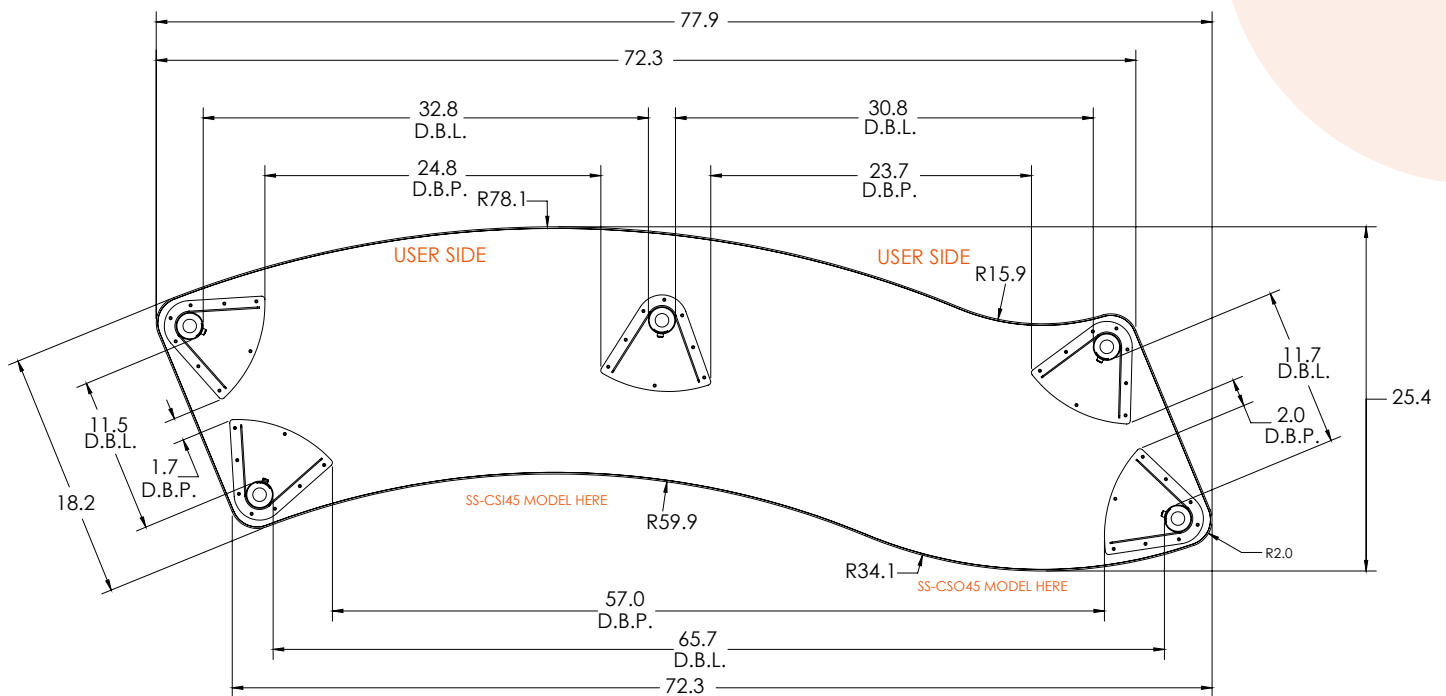

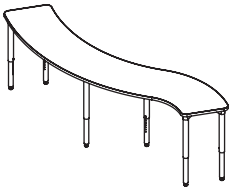


# Shape Tables

## Curve S 60°

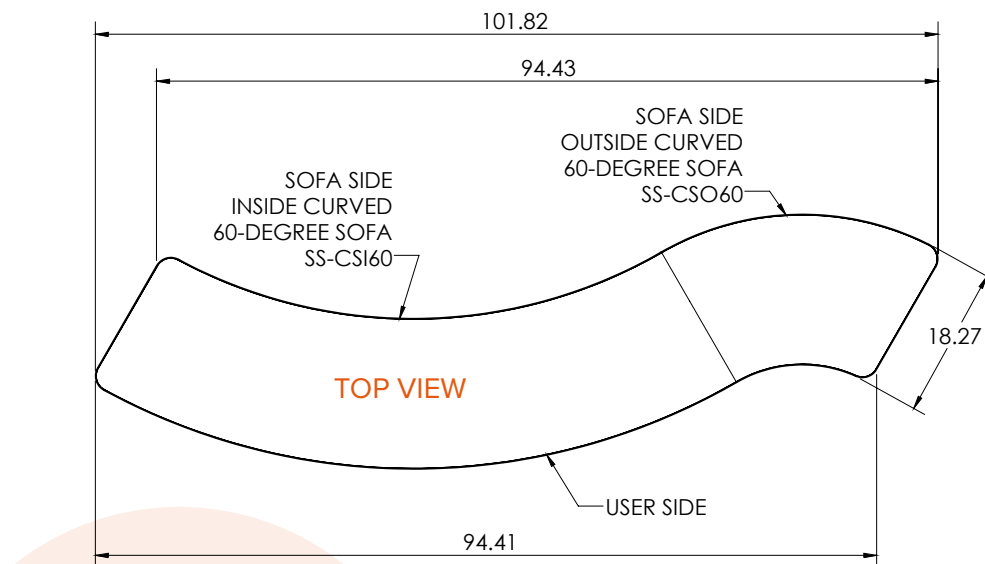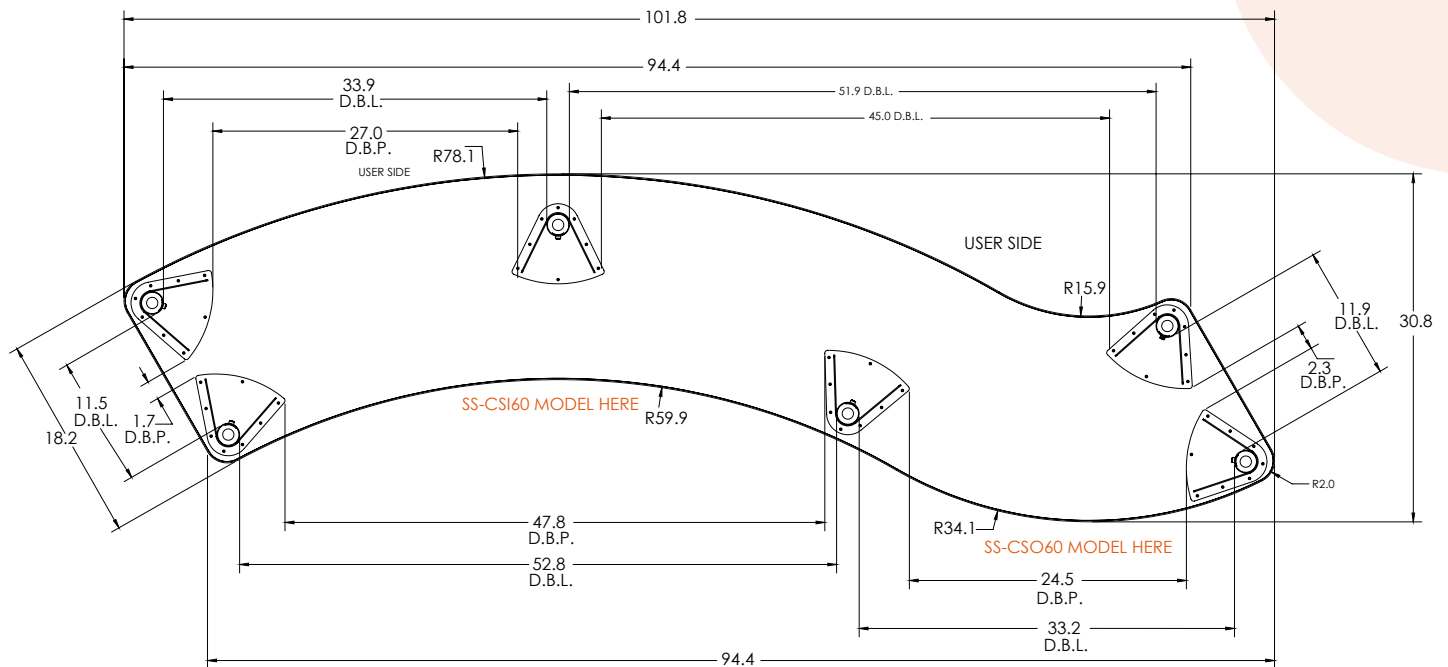

# Shape Tables

## Curve Inside

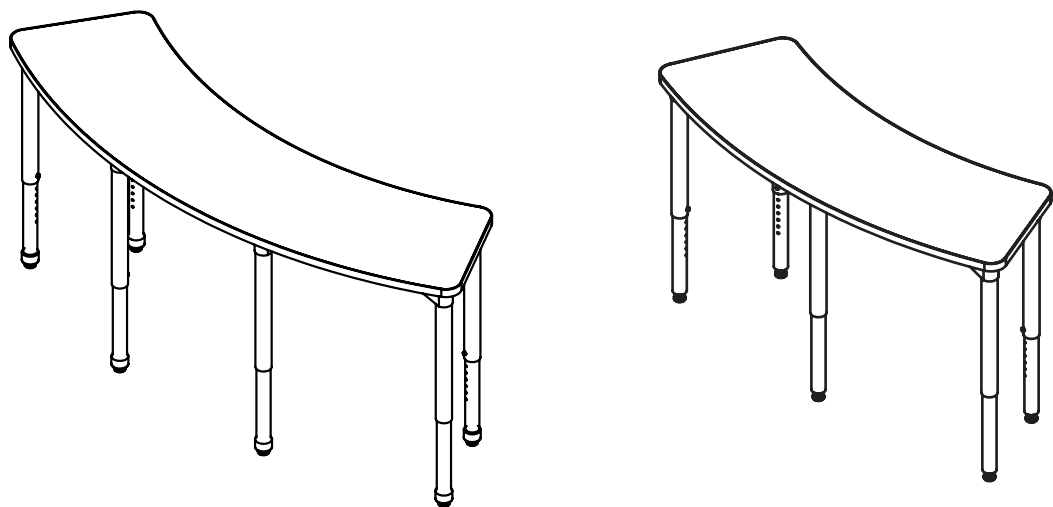

MODEL	TOP DEPTH	TOP WIDTH	D.B.L.* USER SIDE		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-CSI45E	18"	58.75"	25"	25"		X
DTT-CSI60E	18"	76.875"	34.5"	34.5"		X




**Notes**


\*D.B.L. (Distance Between Legs)

\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

- Table top:
  - 1 1/8" thick
  - 45# particleboard
  - Edge banding
  - Predrilled for DTLP legs
- Table top can use DTLP adjustable and fixed-height legs.
- Model No. DTT-CSI45E:
  - Uses 5 legs
  - Table top matches the inside curve sofa's 45-degree radius, model no. SS-CSI45.
- Model No. DTT-CSI60E:
  - Uses 6 legs
  - Table top matches the inside curve sofa's 45-degree radius, model no. SS-CSI60v.




## Curve Inside 45°

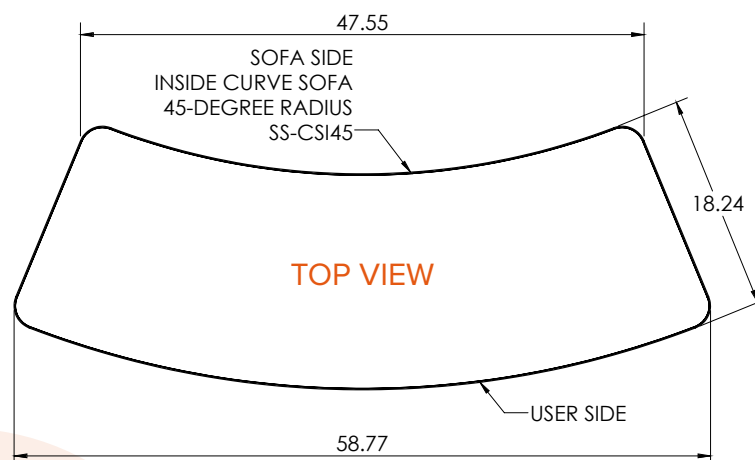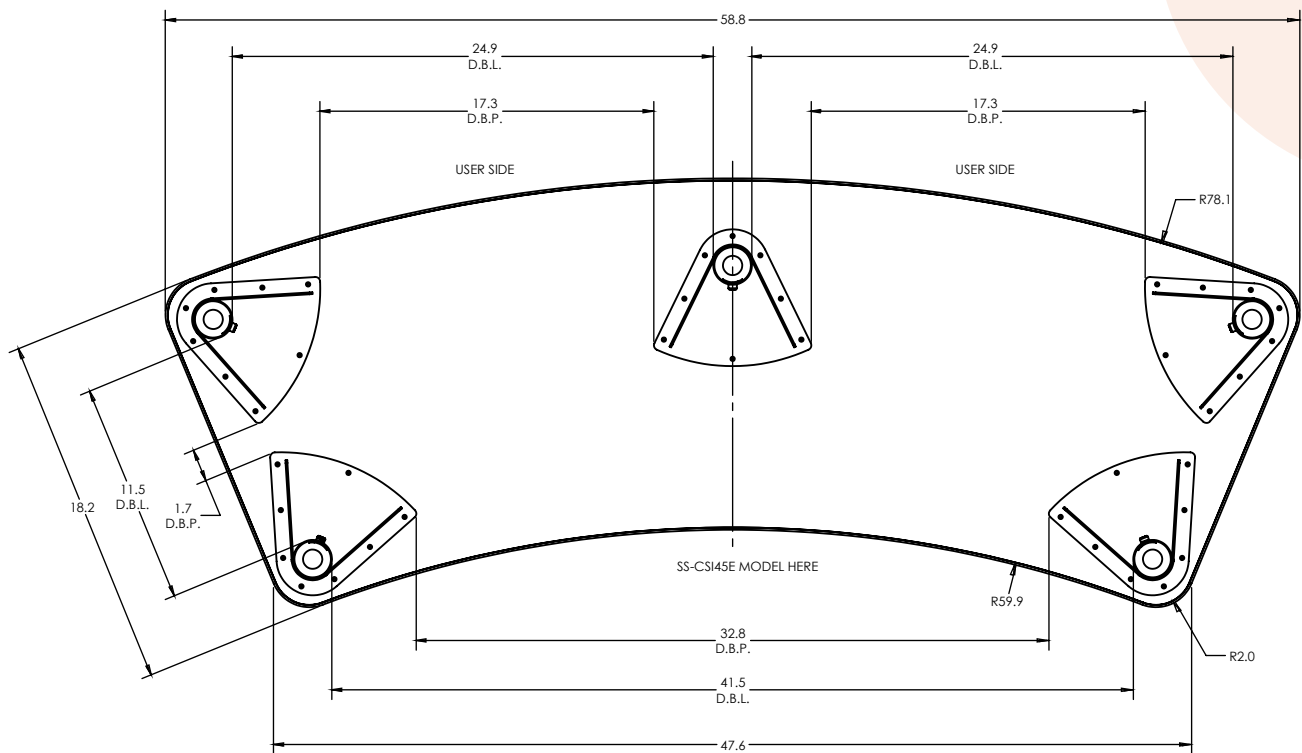

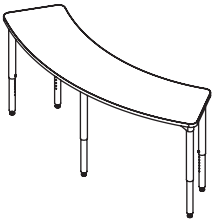

# Shape Tables


## Curve Inside 60°

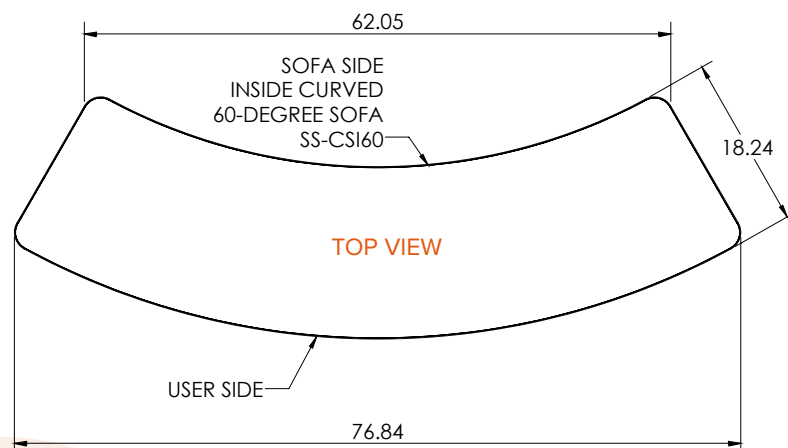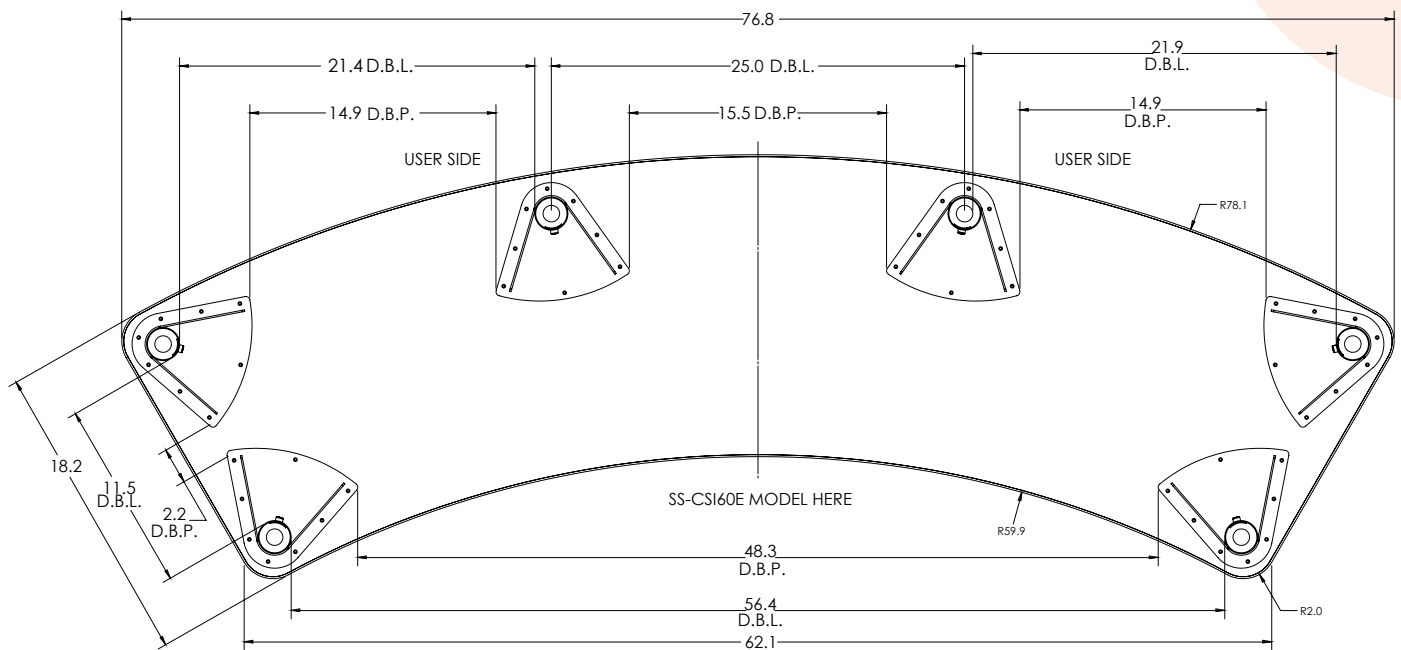




# Shape Tables

## Square

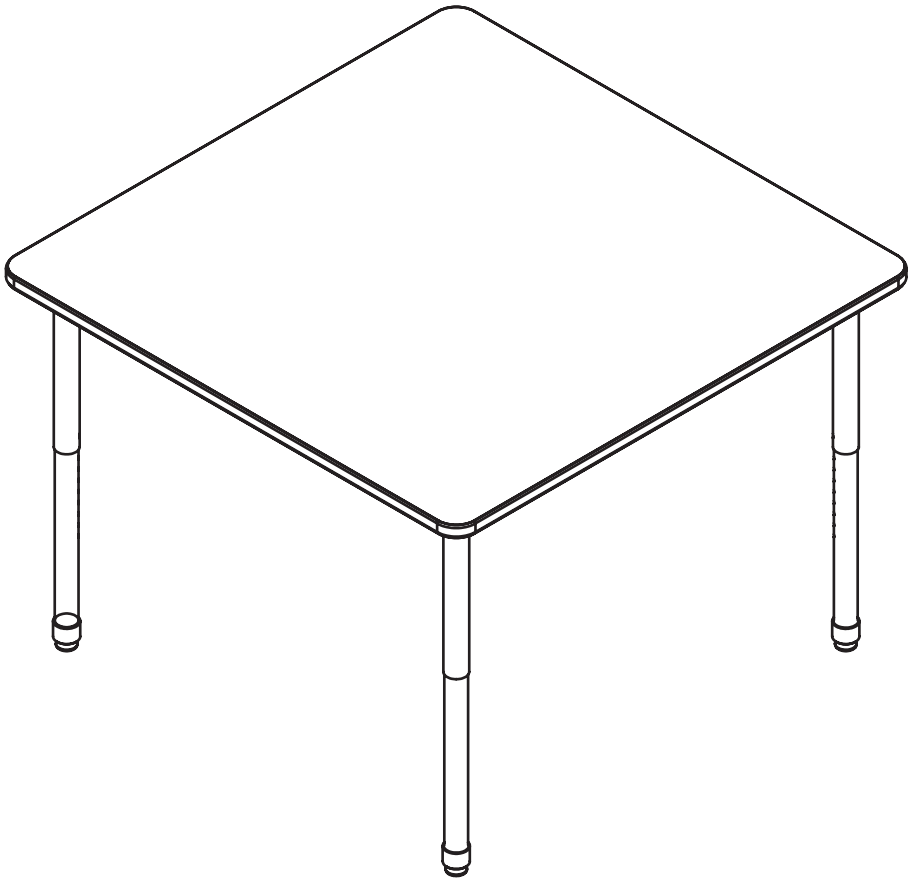


MODEL	TOP WIDTH	TOP DEPTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-SQ36E	36.0"	36.0"	26.5"	X		X
DTT-SQ42E	42.0"	42.0"	32.5"	X	X	
DTT-SQ48E	48.0"	48.0"	36.5"	X	X	


**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

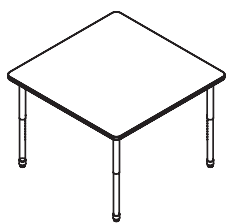

# Shape Tables


## Square 36"

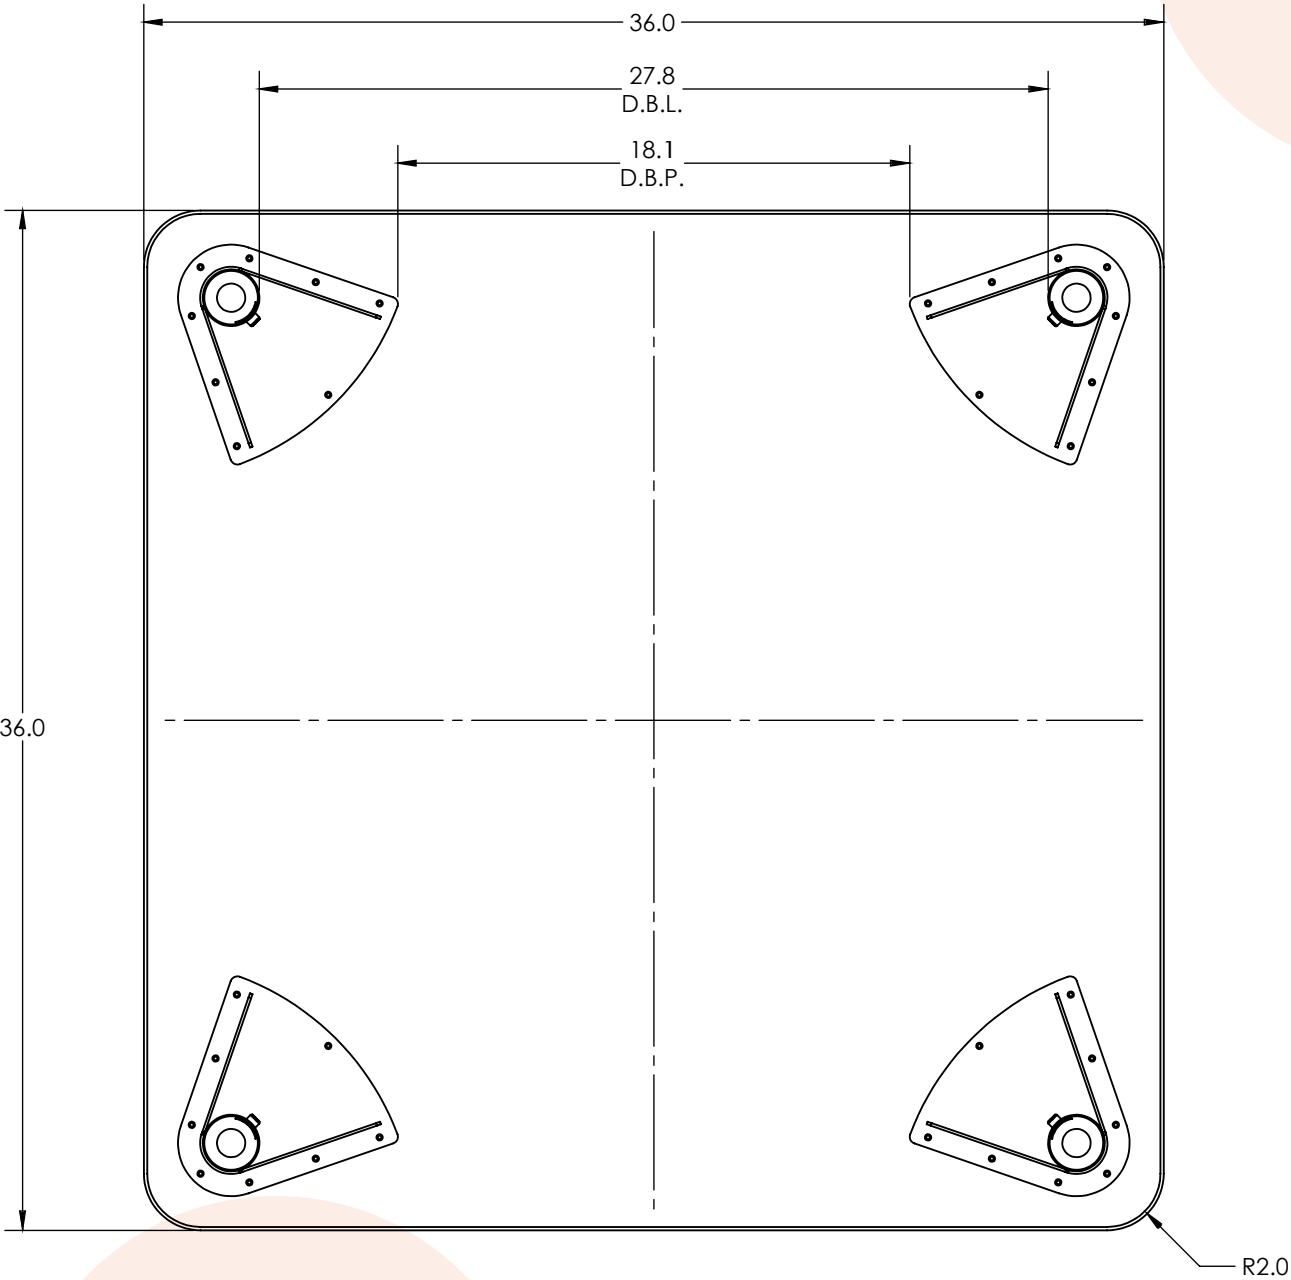


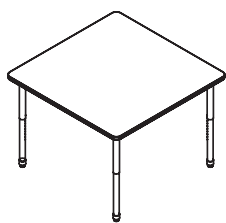

# Shape Tables


## Square 42"

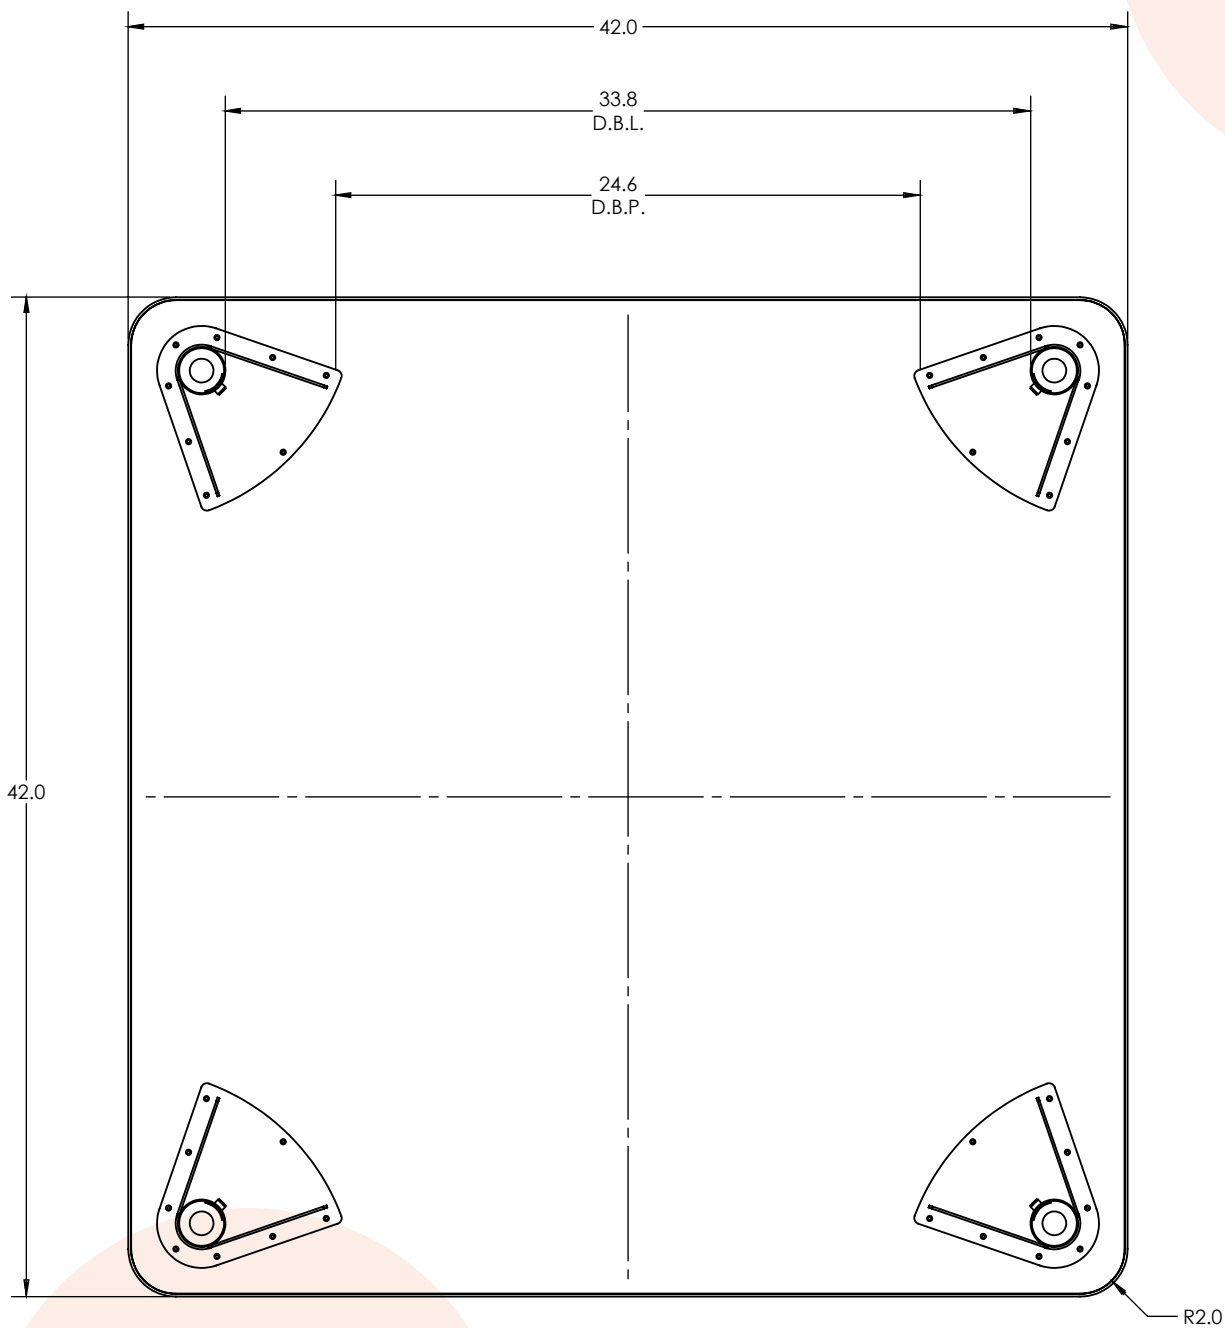

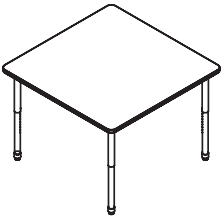


## Shape Tables

### Square 48"

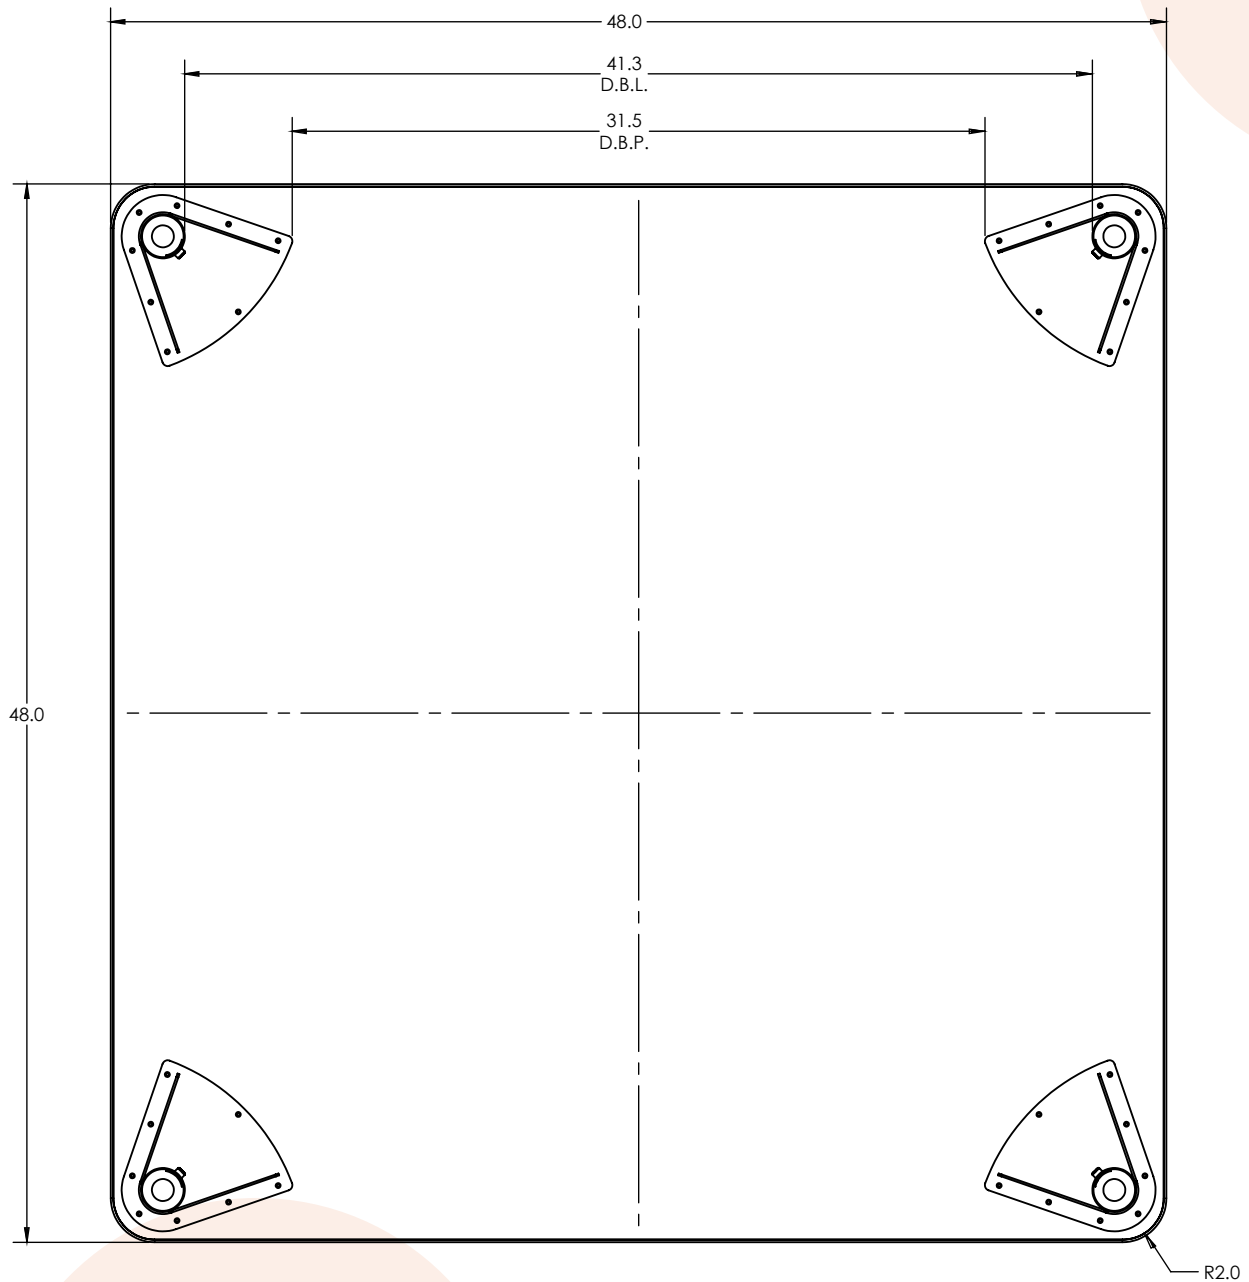

# Shape Tables

## Round

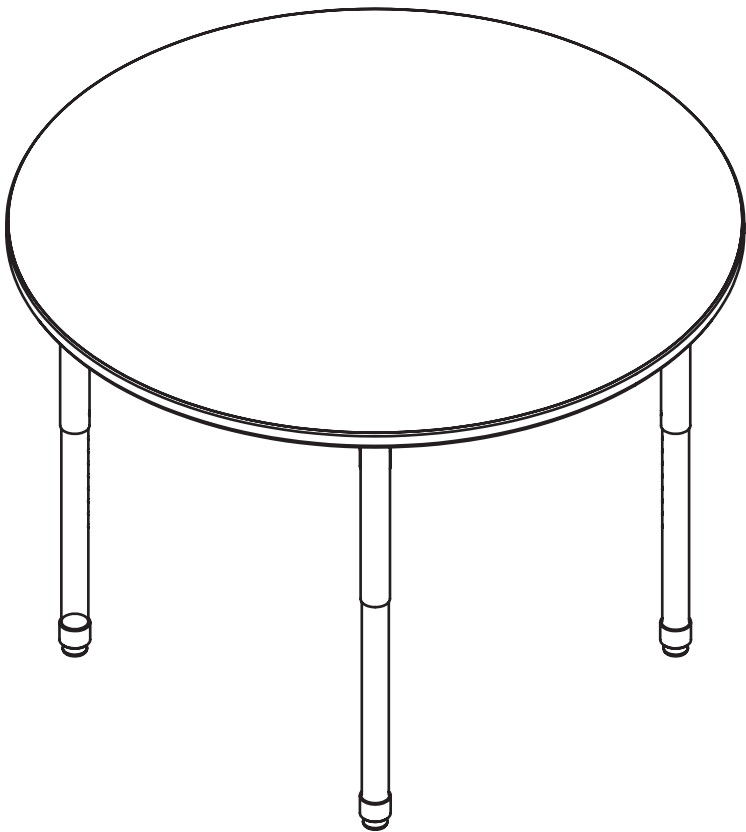


MODEL	TOP WIDTH	D.B.L.*	A.D.A. SEATING ZONE**	
			YES	NO
DTT-RD36E	36.0"	16.9"		X
DTT-RD42E	42.0"	21.3"		X
DTT-RD48E	48.0"	25.5"		X
DTT-RD60E	60.0"	35.3"	X	

**Notes**


\*D.B.L. (Distance Between Legs)


\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

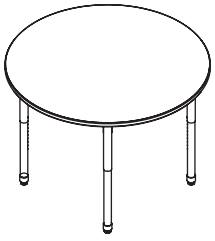

## Shape Tables


### Round 36"

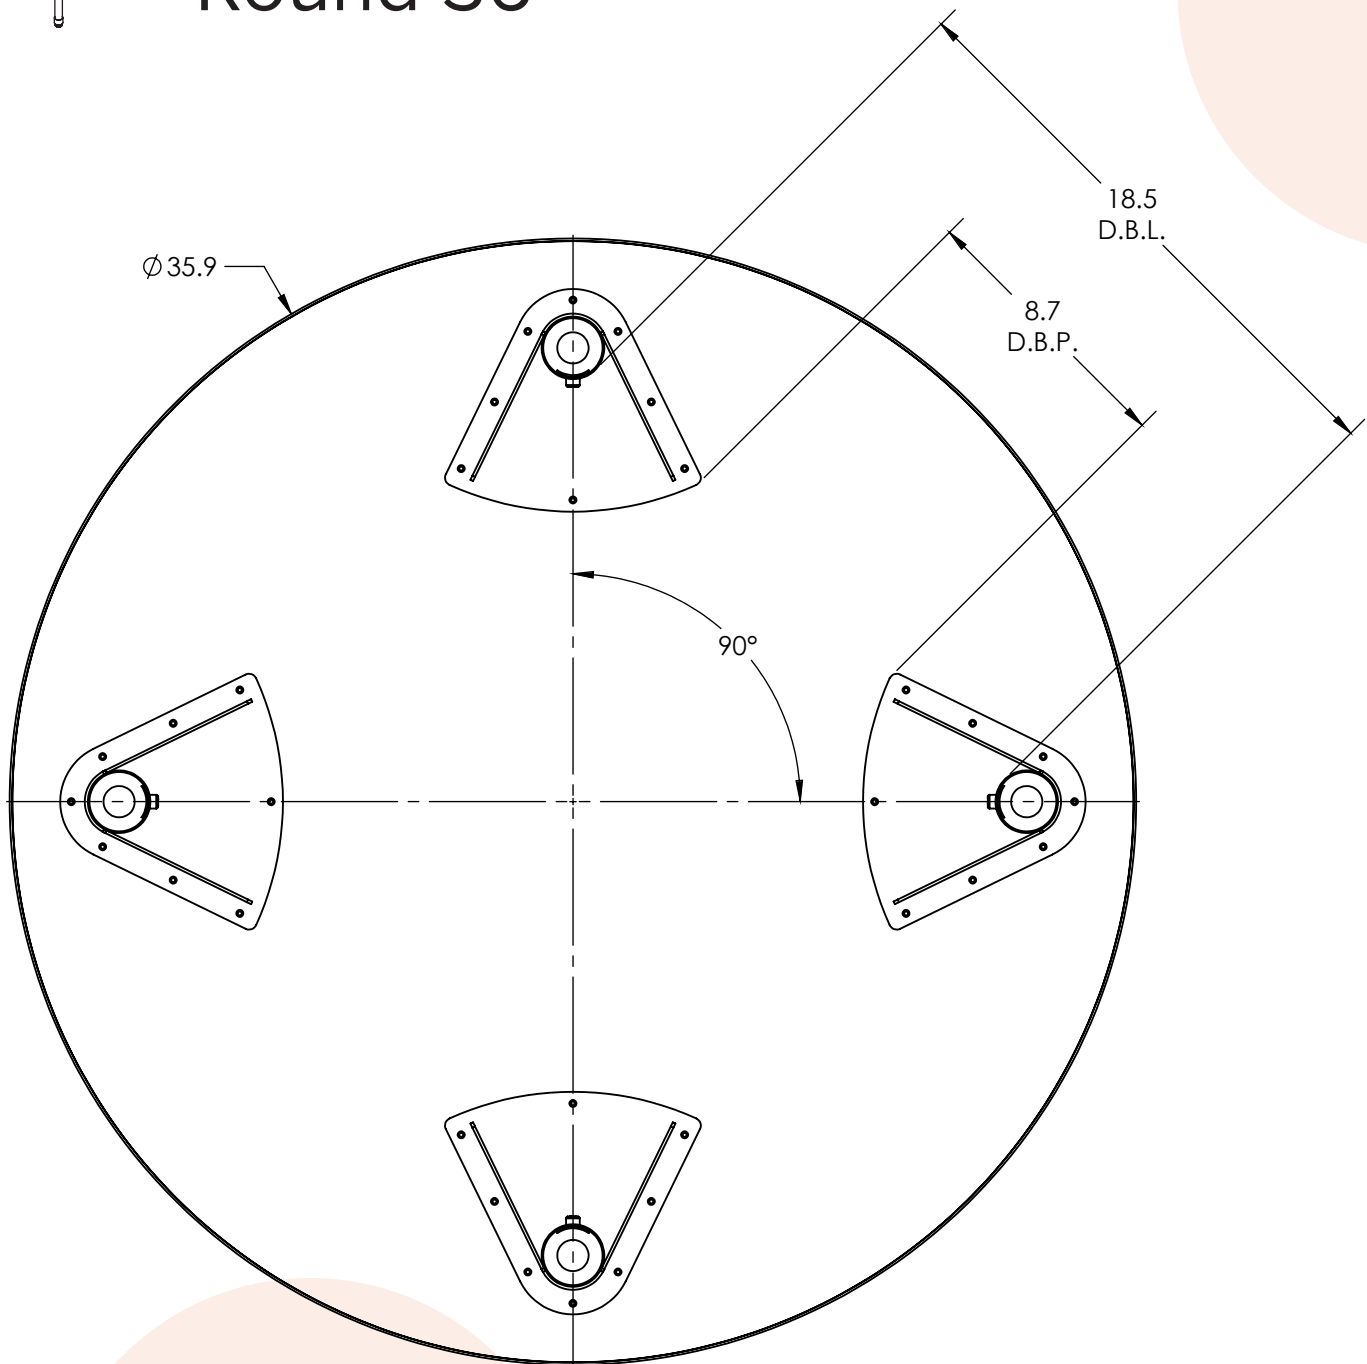


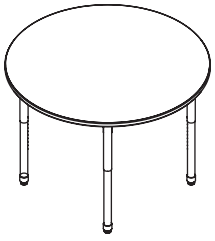

## Shape Tables


### Round 42"

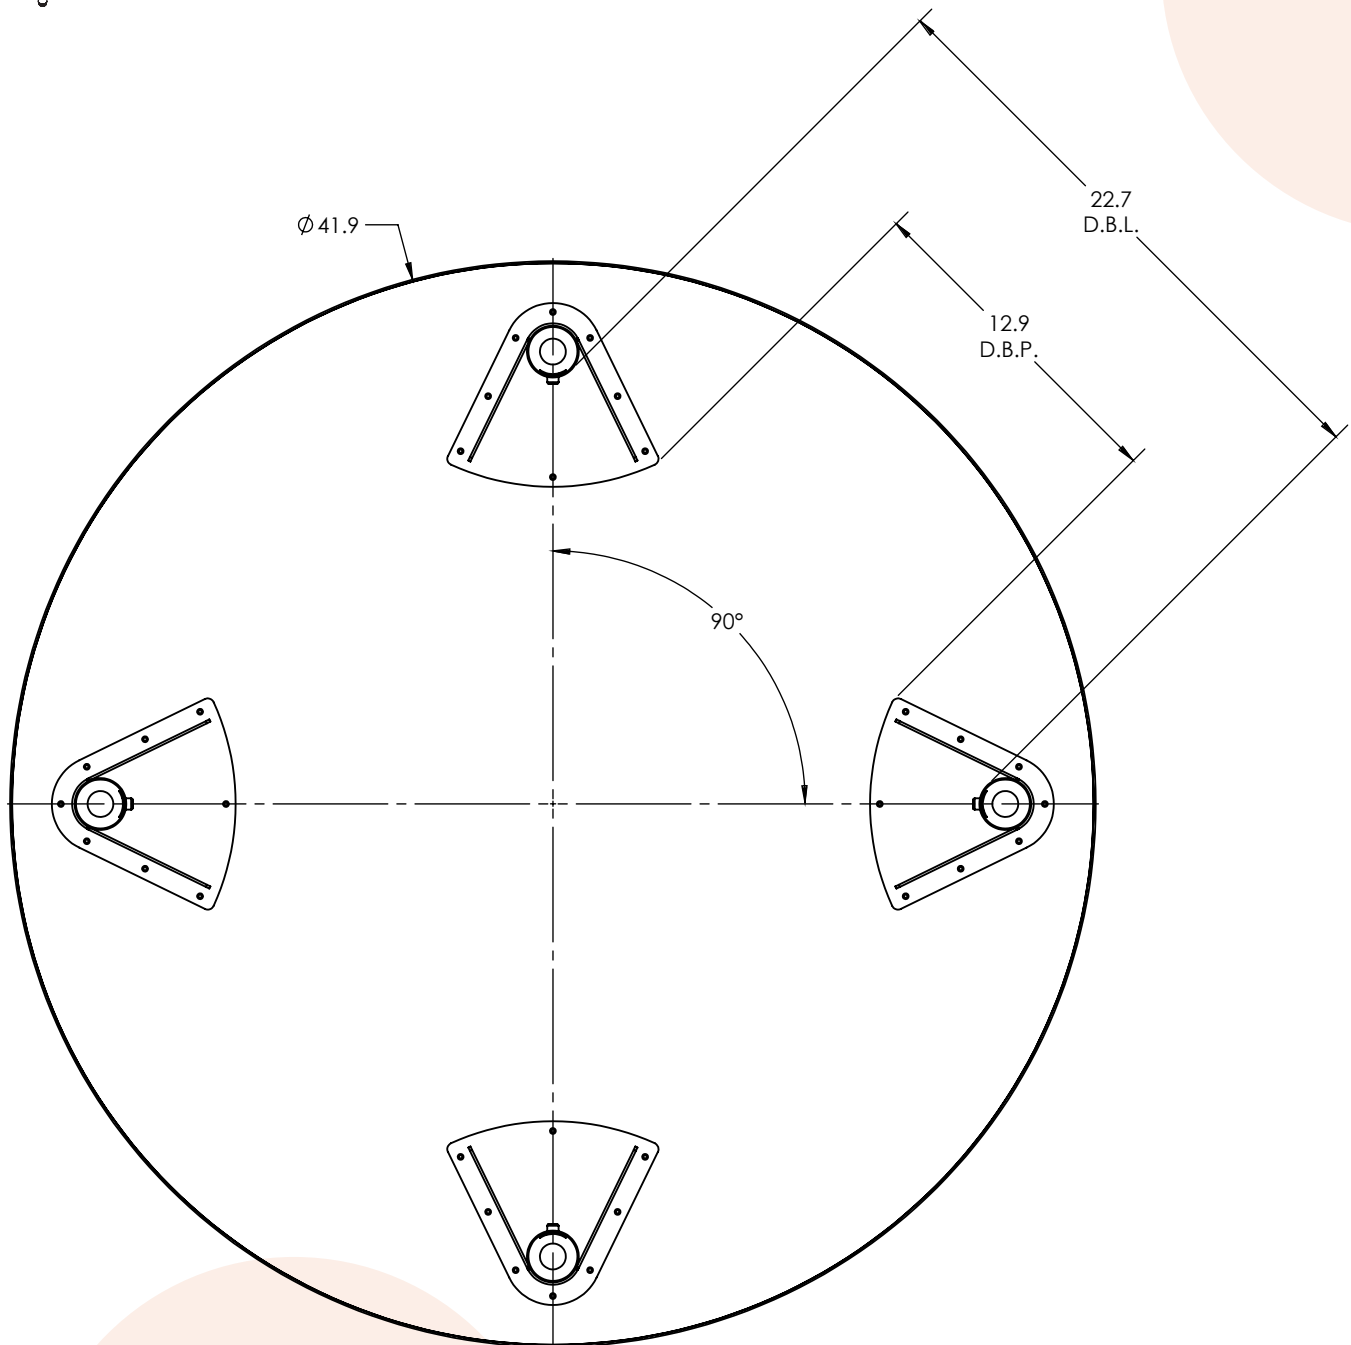

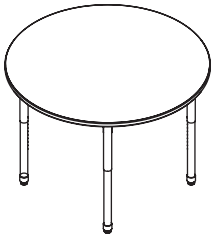


## Shape Tables

### Round 48"

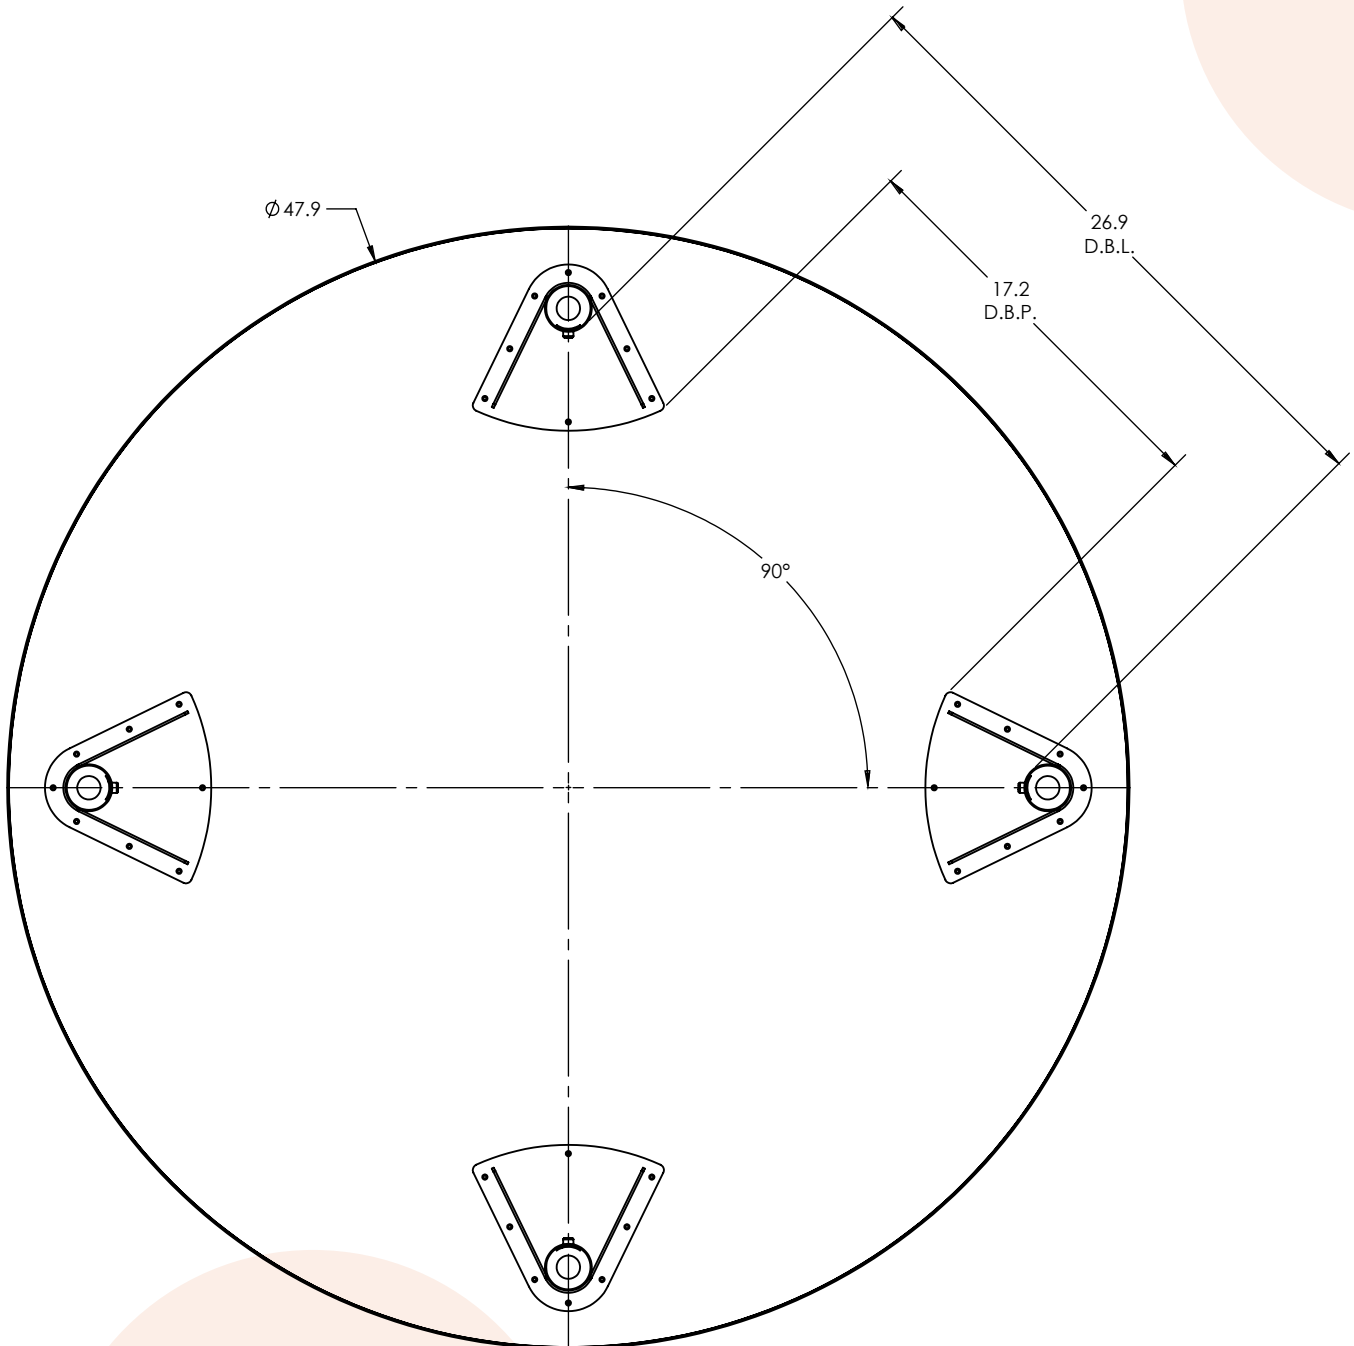




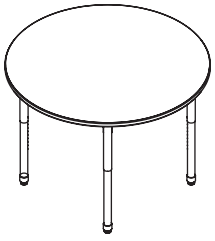


# Shape Tables

## Round 60"

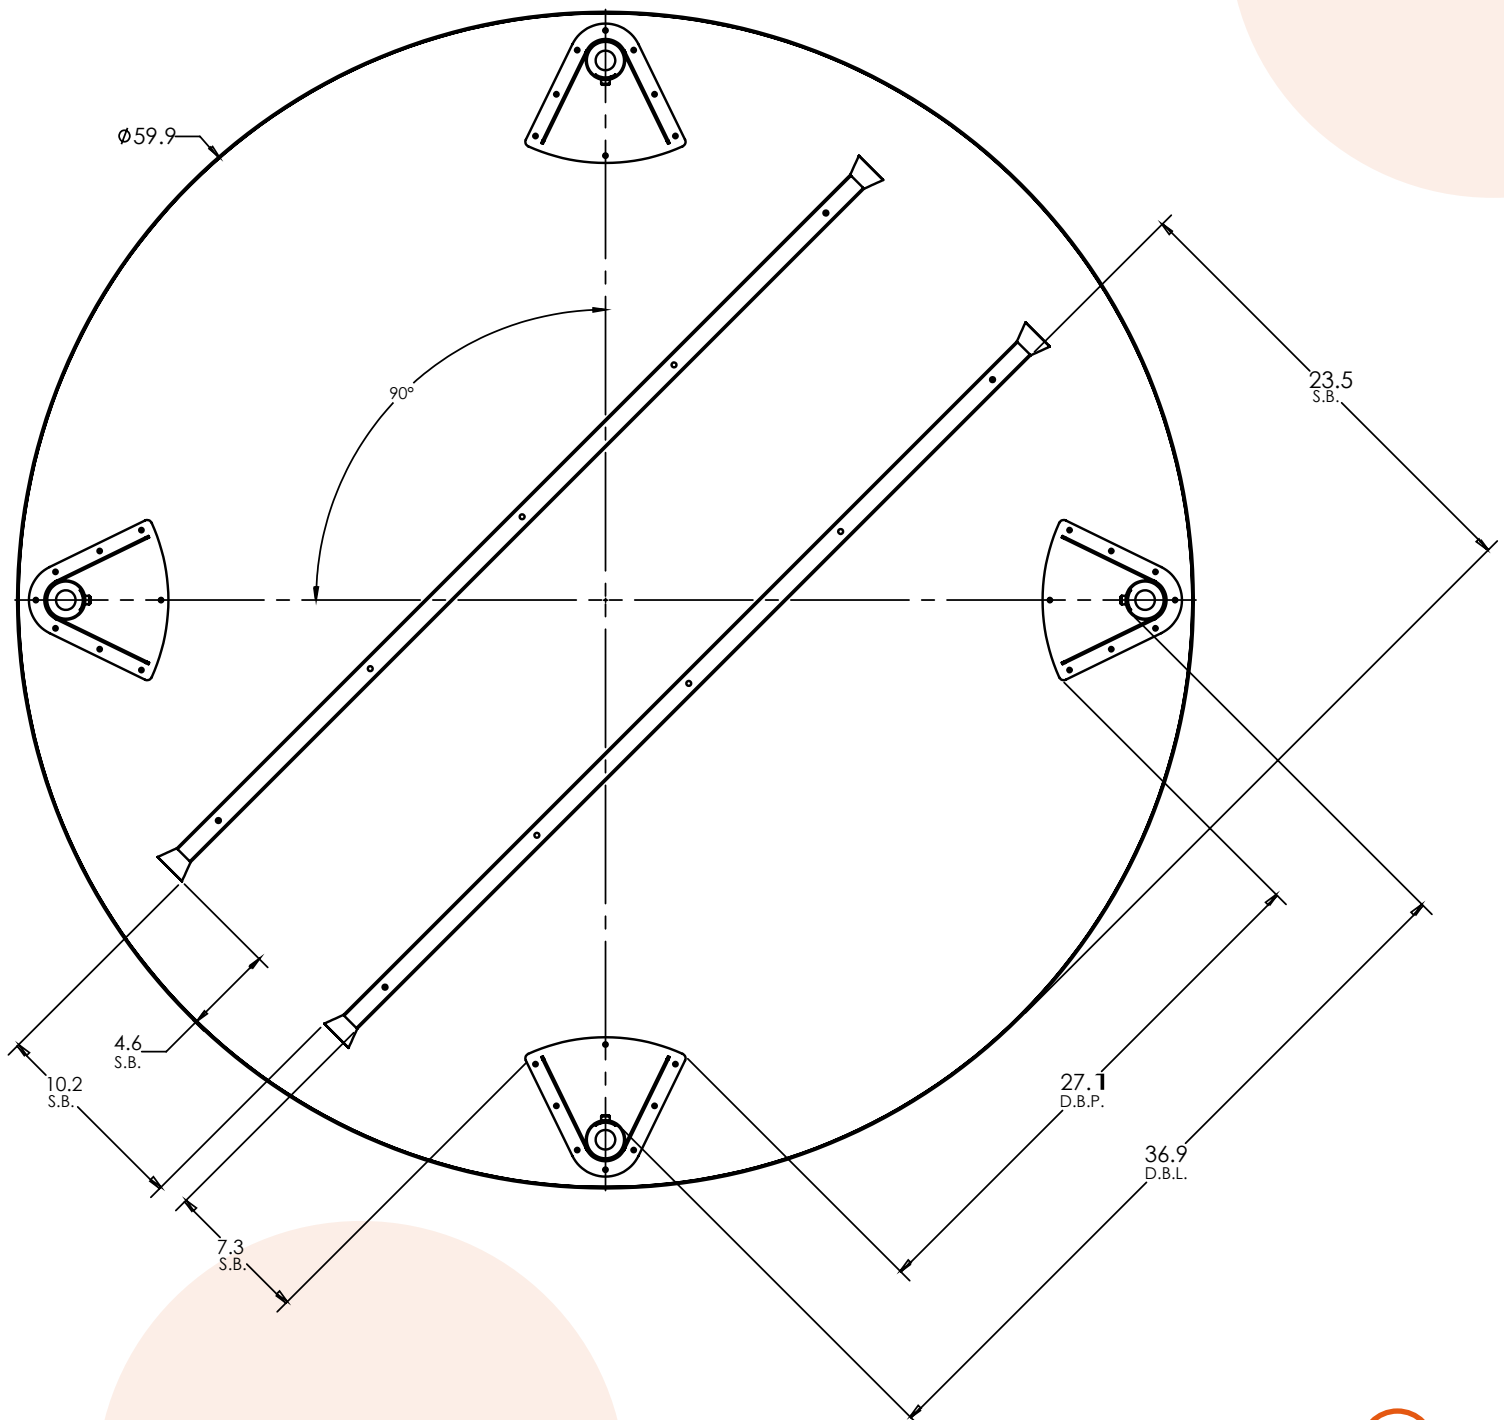

# Shape Tables

## Rectangle

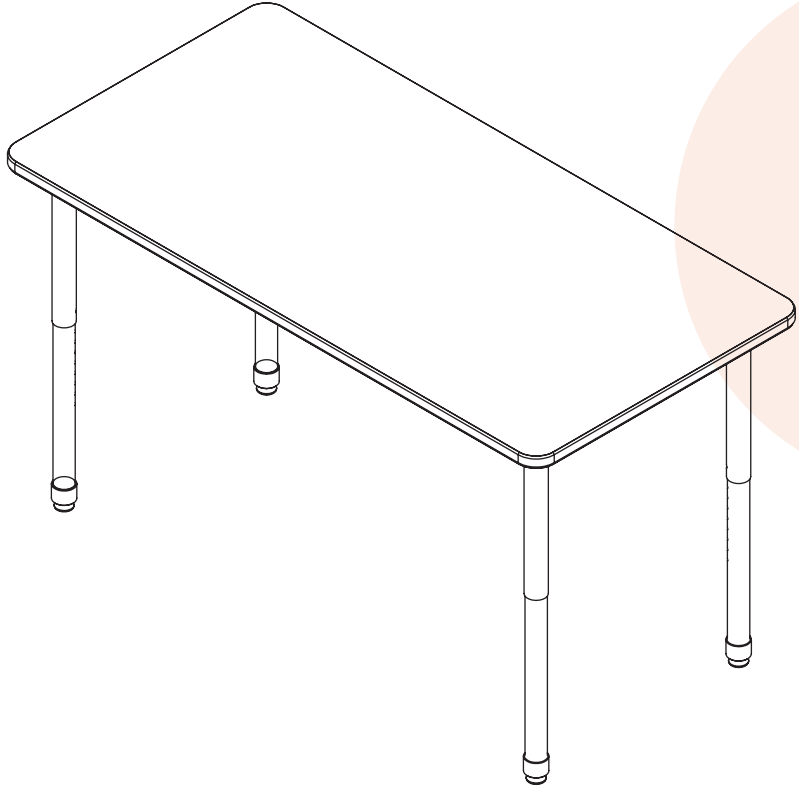


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-RC1842E	18.0"	42.0"	9.9"	33.6"		X
DTT-RC1848E	18.0"	48.0"	9.9"	39.9"		X
DTT-RC1860E	18.0"	60.0"	9.9"	51.9"		X
DTT-RC1872E	18.0"	72.0"	9.9"	63.9"		X
DTT-RC2436E	24.0"	36.0"	9.9"			X
DTT-RC2448E	24.0"	48.0"	14.5"	38.5"	X	
DTT-RC2460E	24.0"	60.0"	14.5"	50.5"	X	
DTT-RC2472E	24.0"	72.0"	14.5"	62.5"	X	
DTT-RC3048E	30.0"	48.0"	20.5"	38.5"	X	
DTT-RC3060E	30.0"	60.0"	20.5"	50.5"	X	
DTT-RC3072E	30.0"	72.0"	20.5"	62.5"	X	
DTT-RC3660E	36.0"	60.0"	26.5"	50.5"	X	
DTT-RC3672E	36.0"	72.0"	26.5"	62.5"	X	


### Notes

\*D.B.L. (Distance Between Legs)

\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)


# Rectangle 18" x 42"

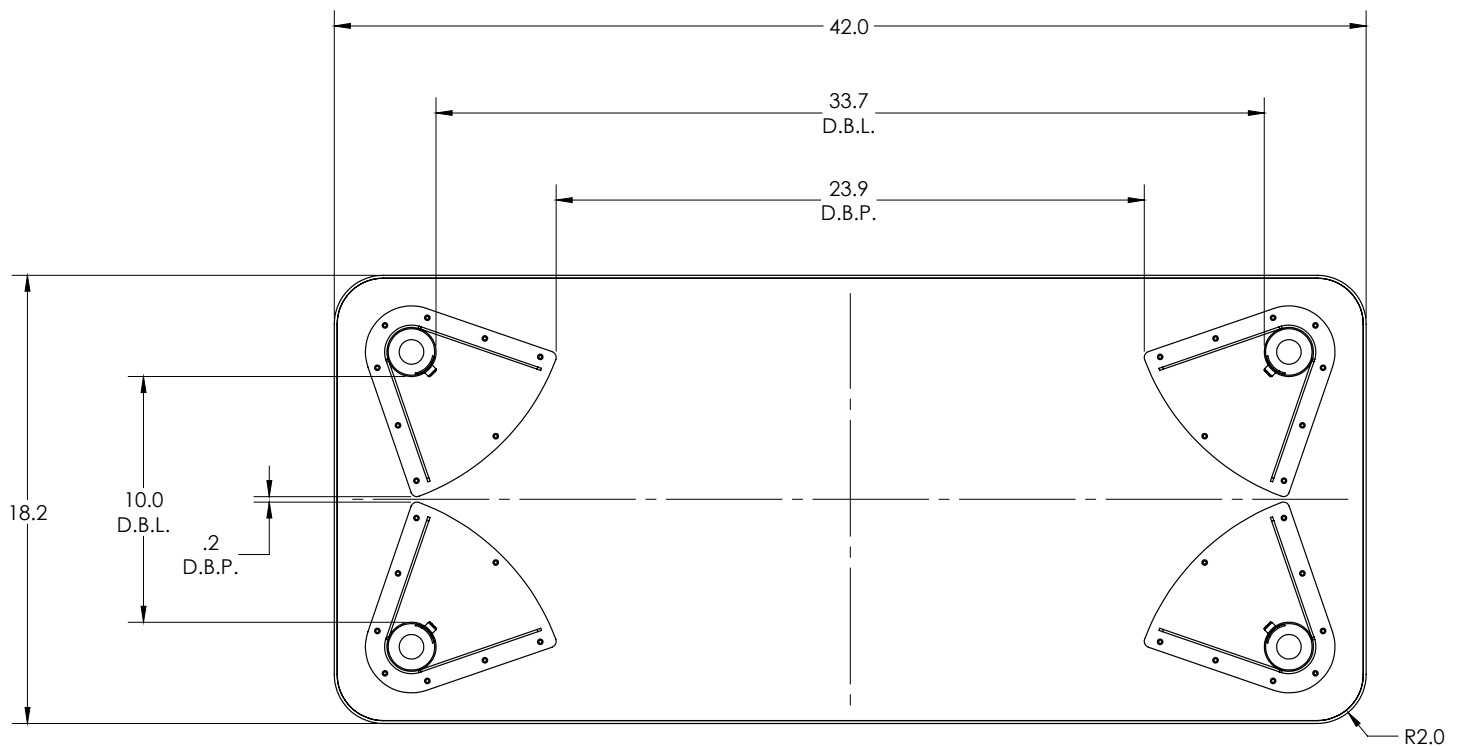


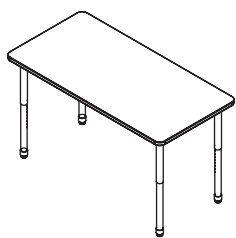

# Shape Tables


Rectangle 18" x 48"

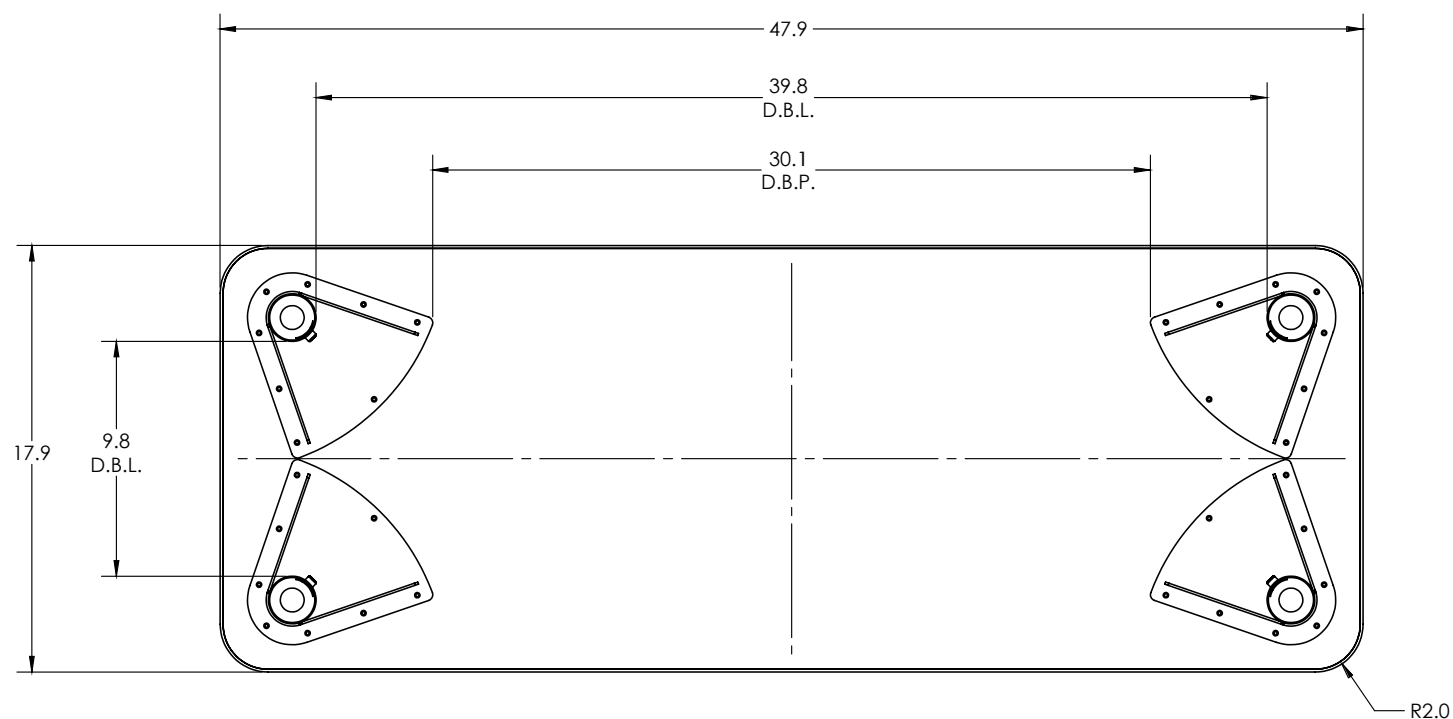


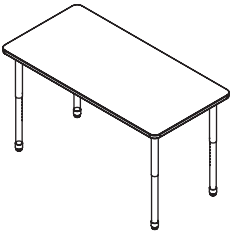

## Shape Tables


Rectangle 18" x 60"

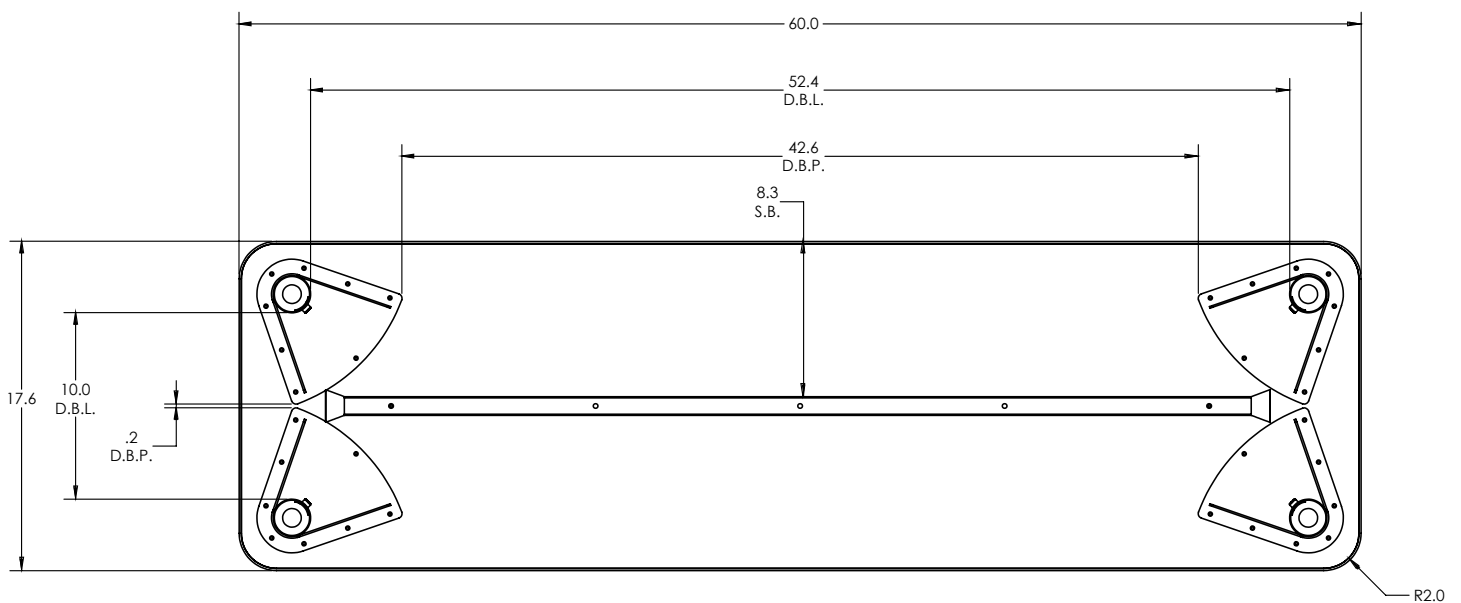


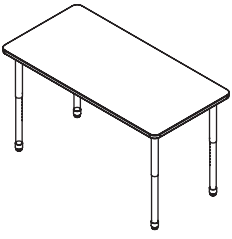

## Shape Tables


Rectangle 18" x 72"

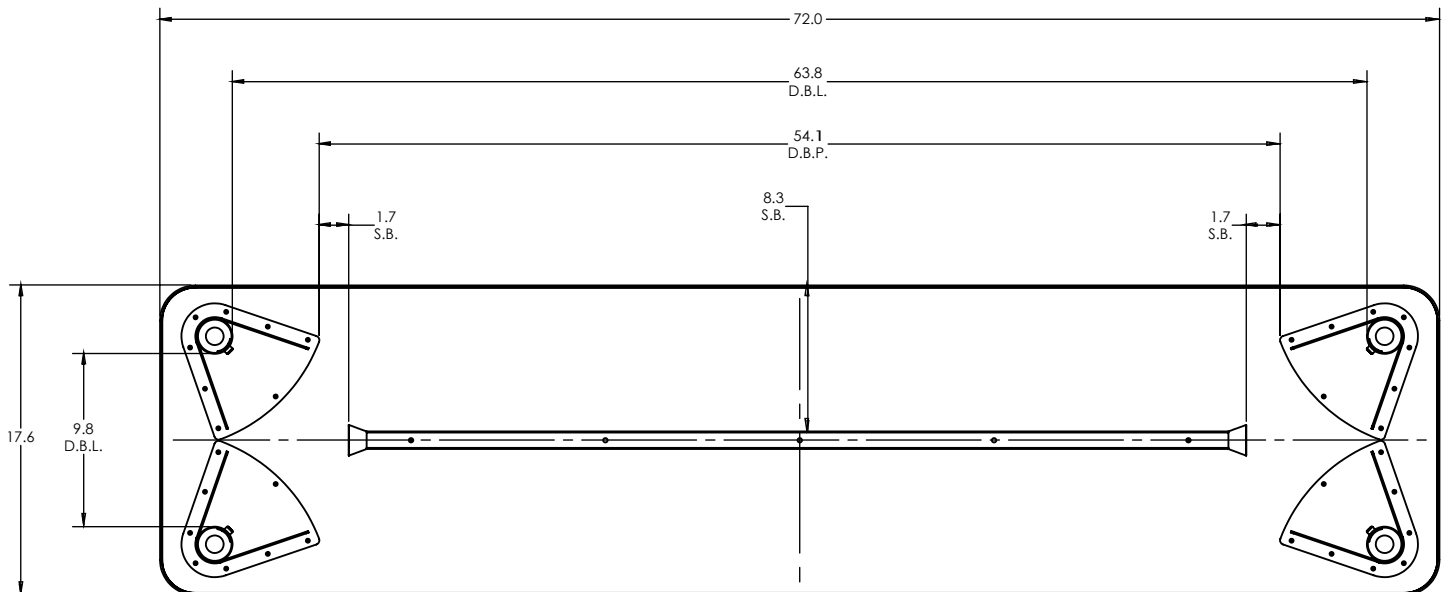


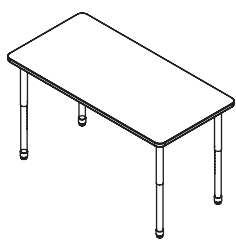

# Shape Tables


Rectangle 24" x 36"

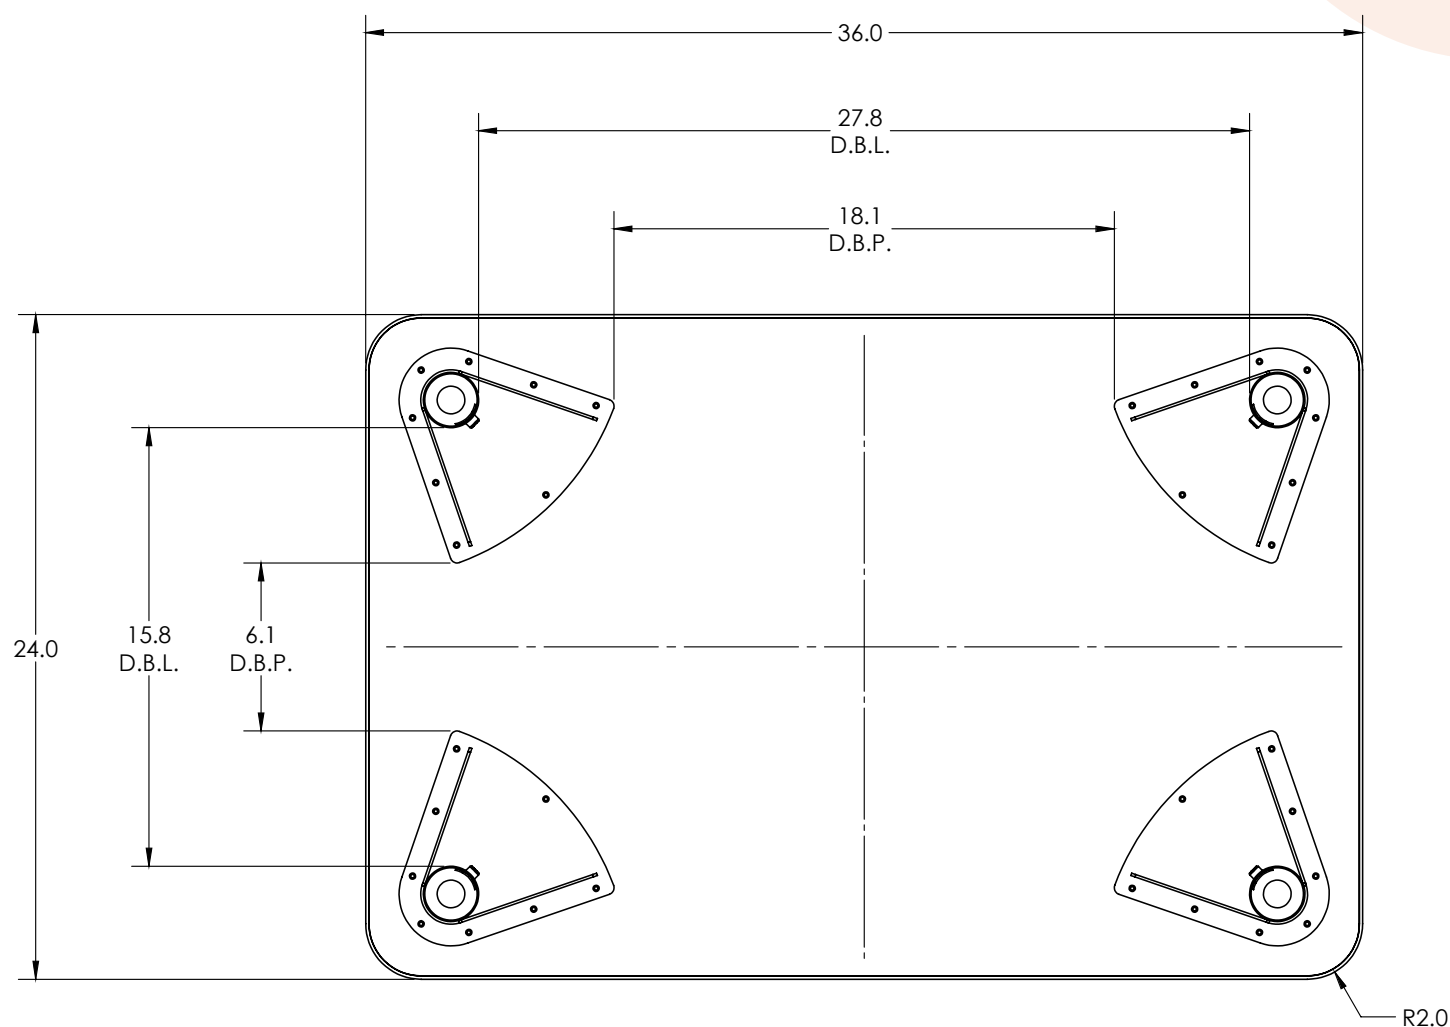

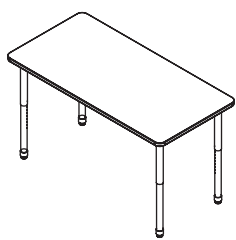


# Shape Tables

Rectangle 24” x 48”

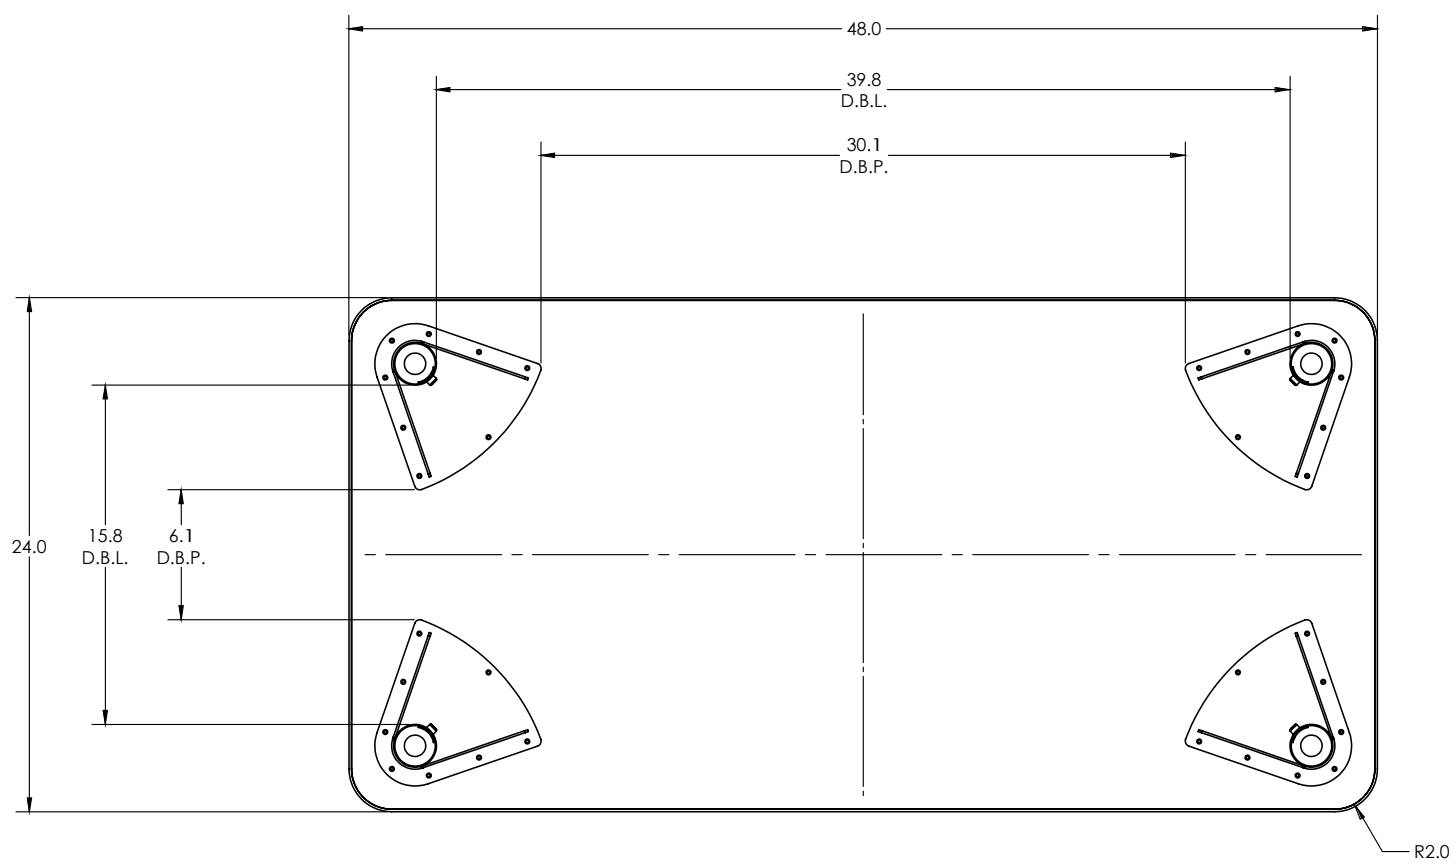





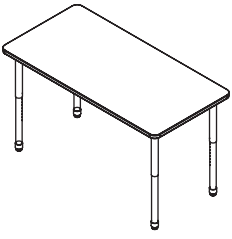

## Shape Tables


Rectangle 24" x 60"

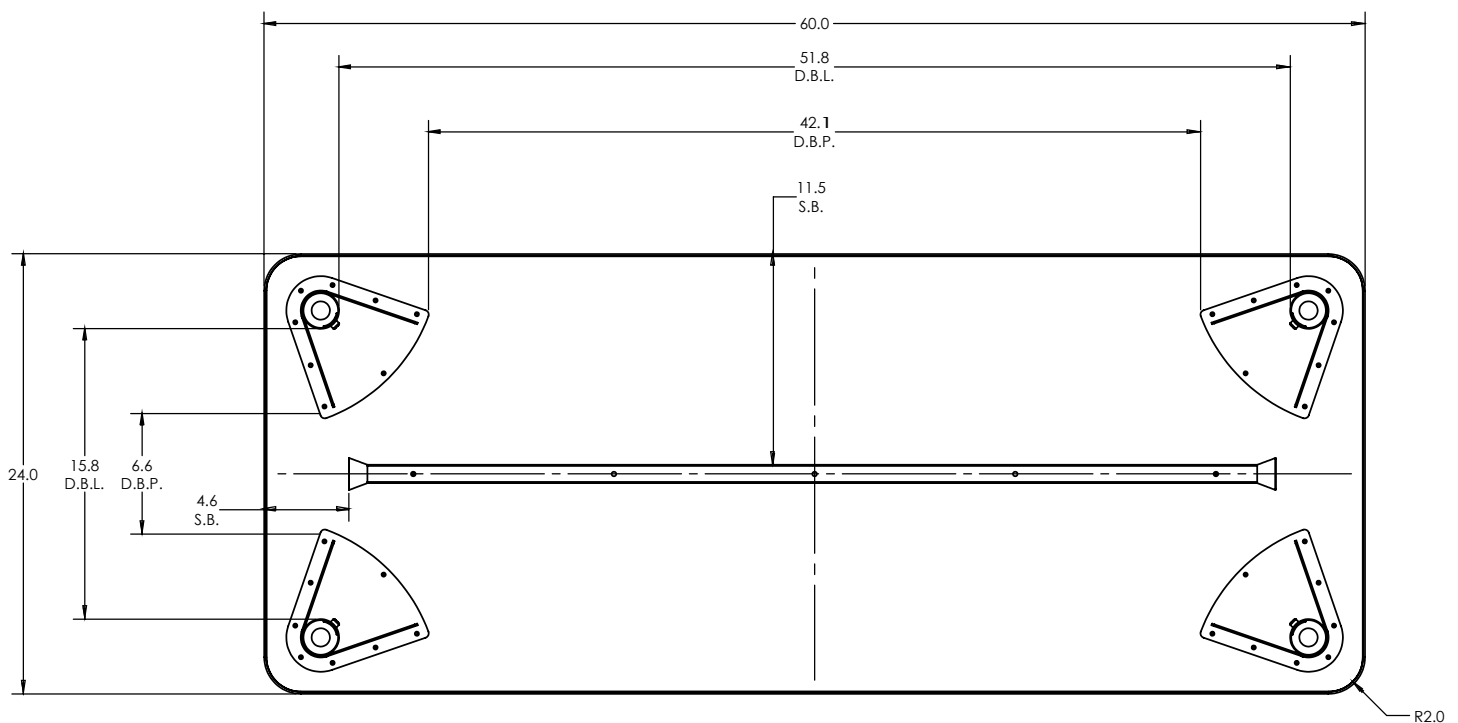


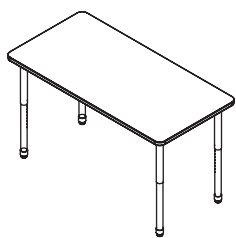

# Shape Tables


Rectangle 24" x 72"

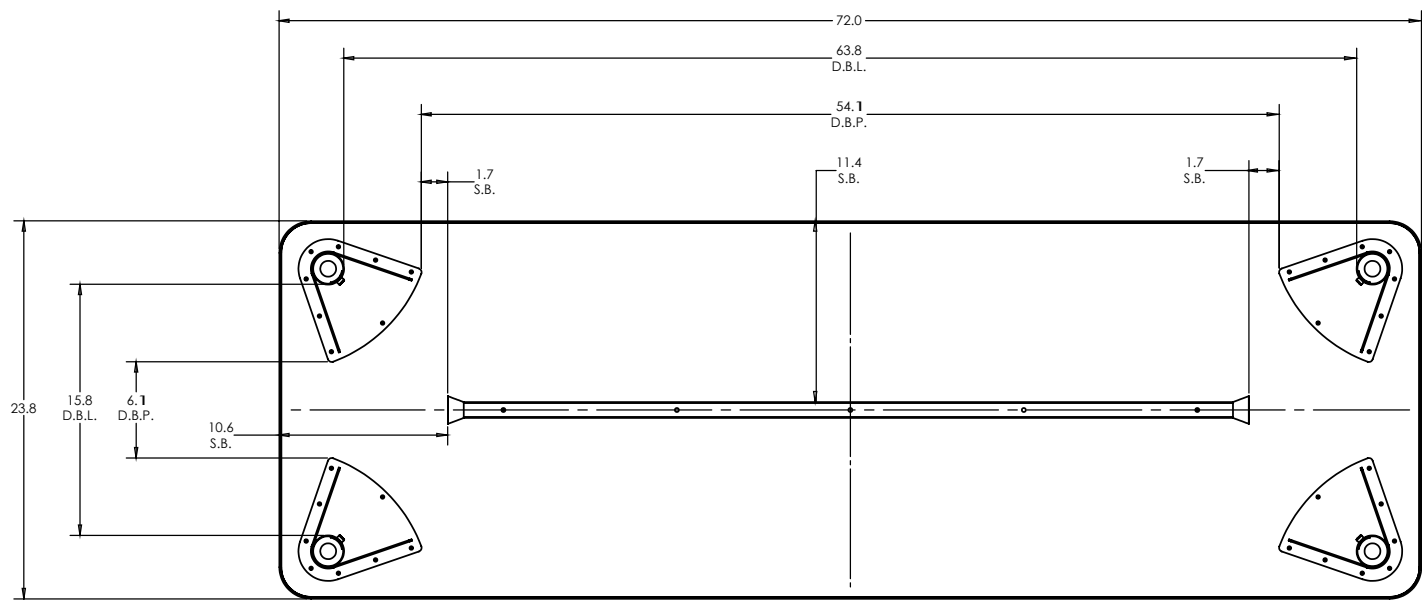


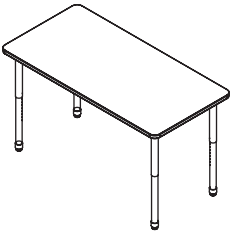

## Shape Tables


Rectangle 30" x 48"

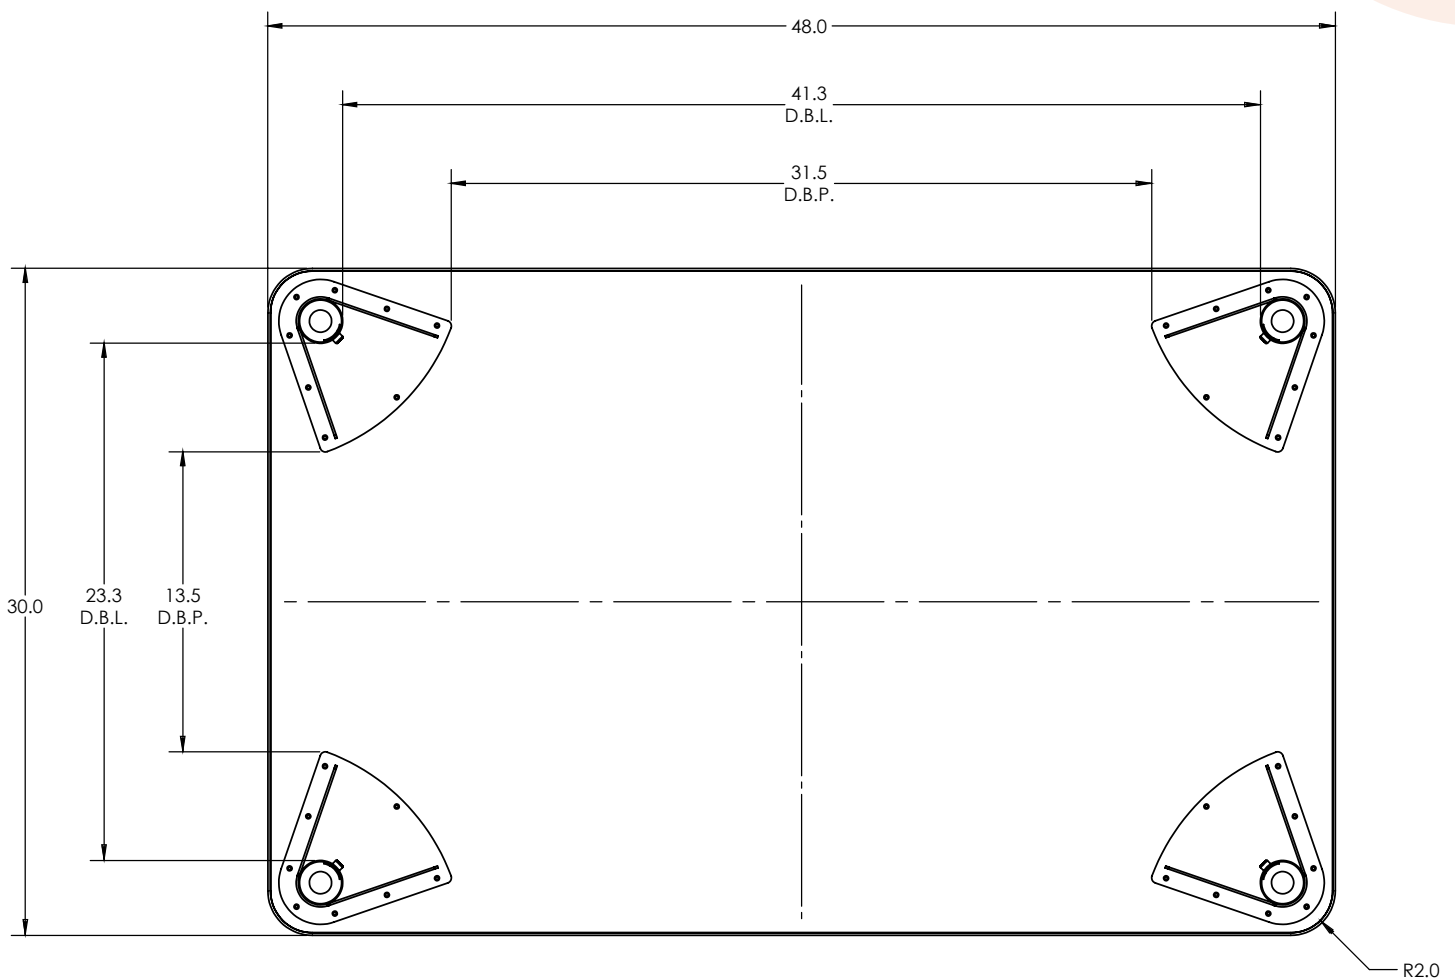


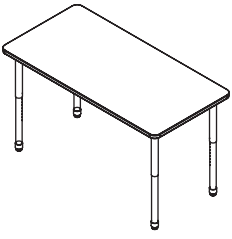

## Shape Tables


Rectangle 30" x 60"

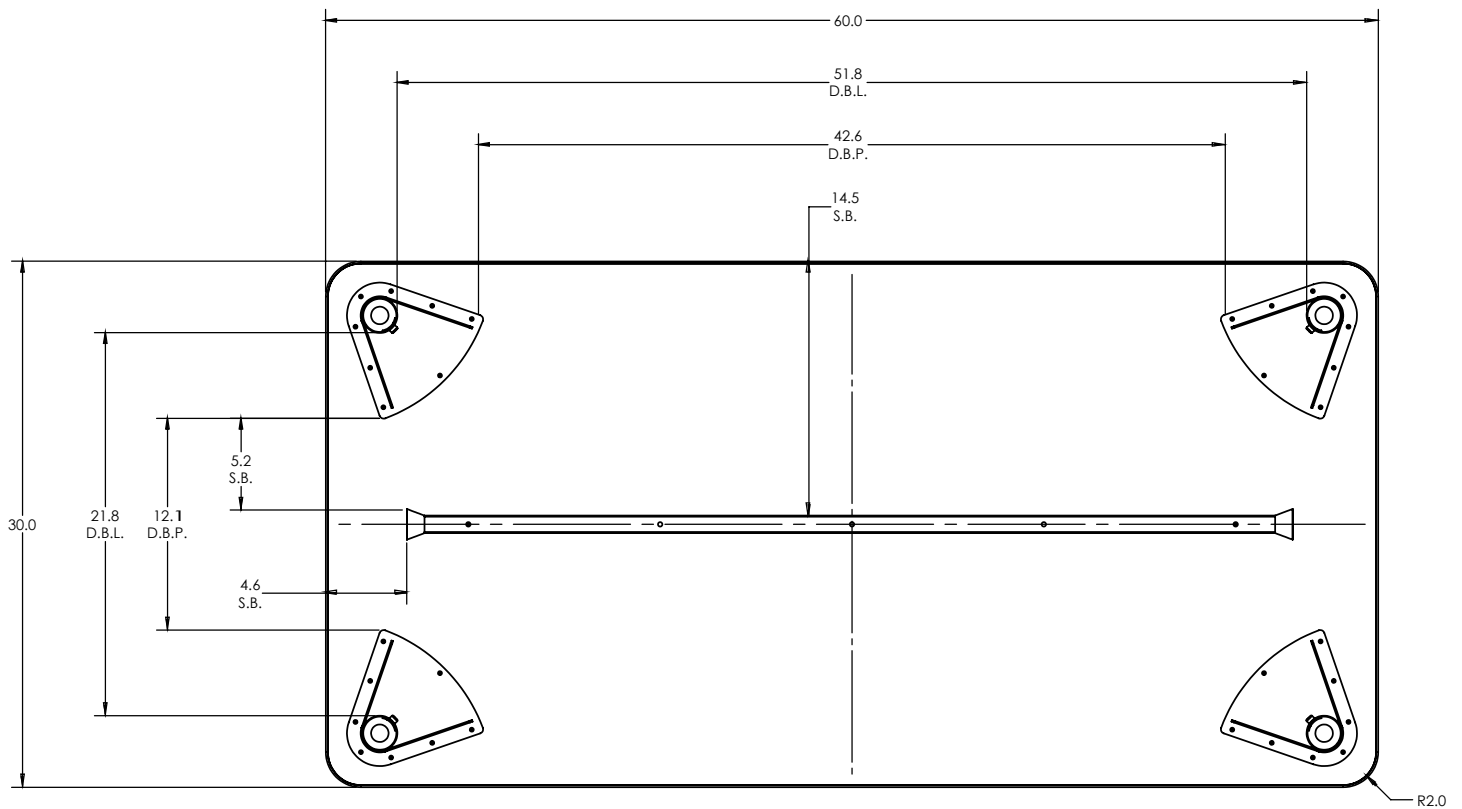

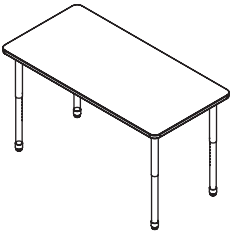



## Shape Tables

Rectangle 30" x 72"

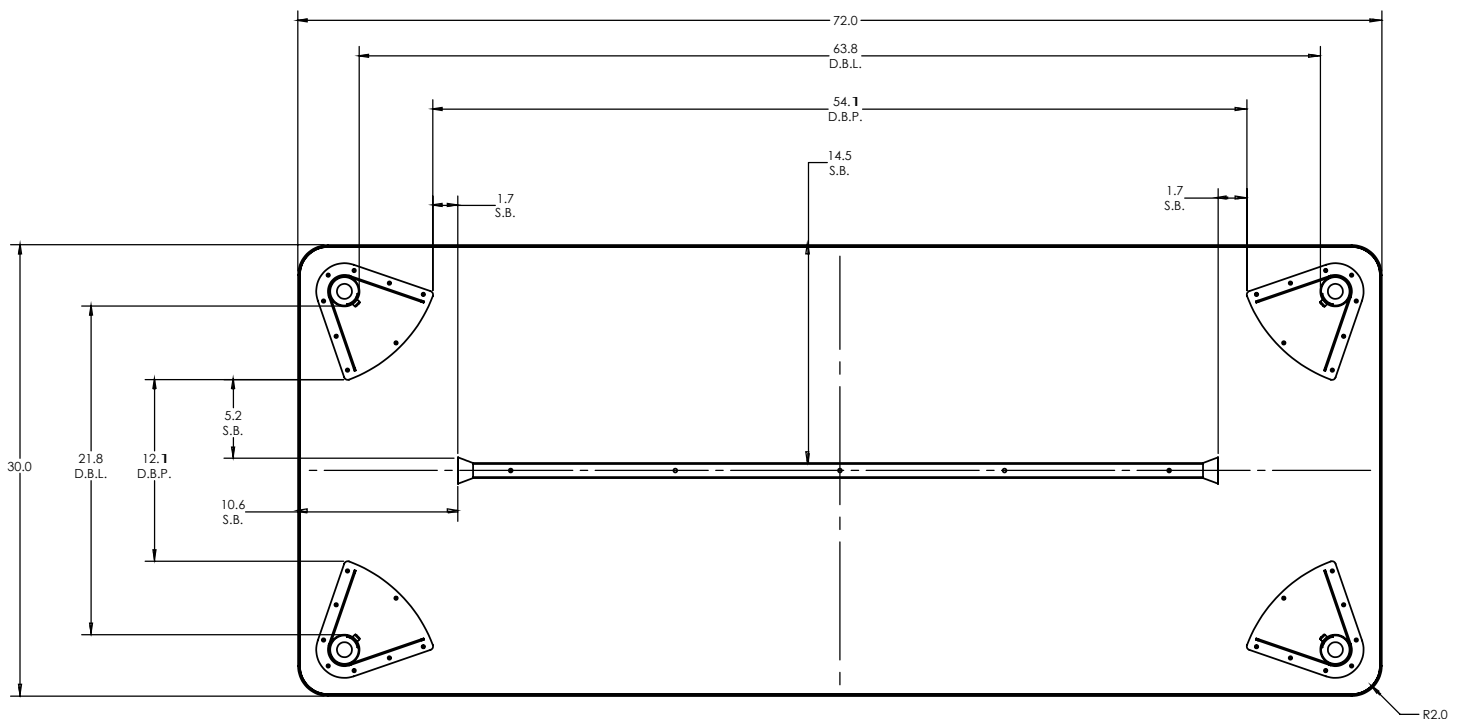


# Rectangle 36" x 60"

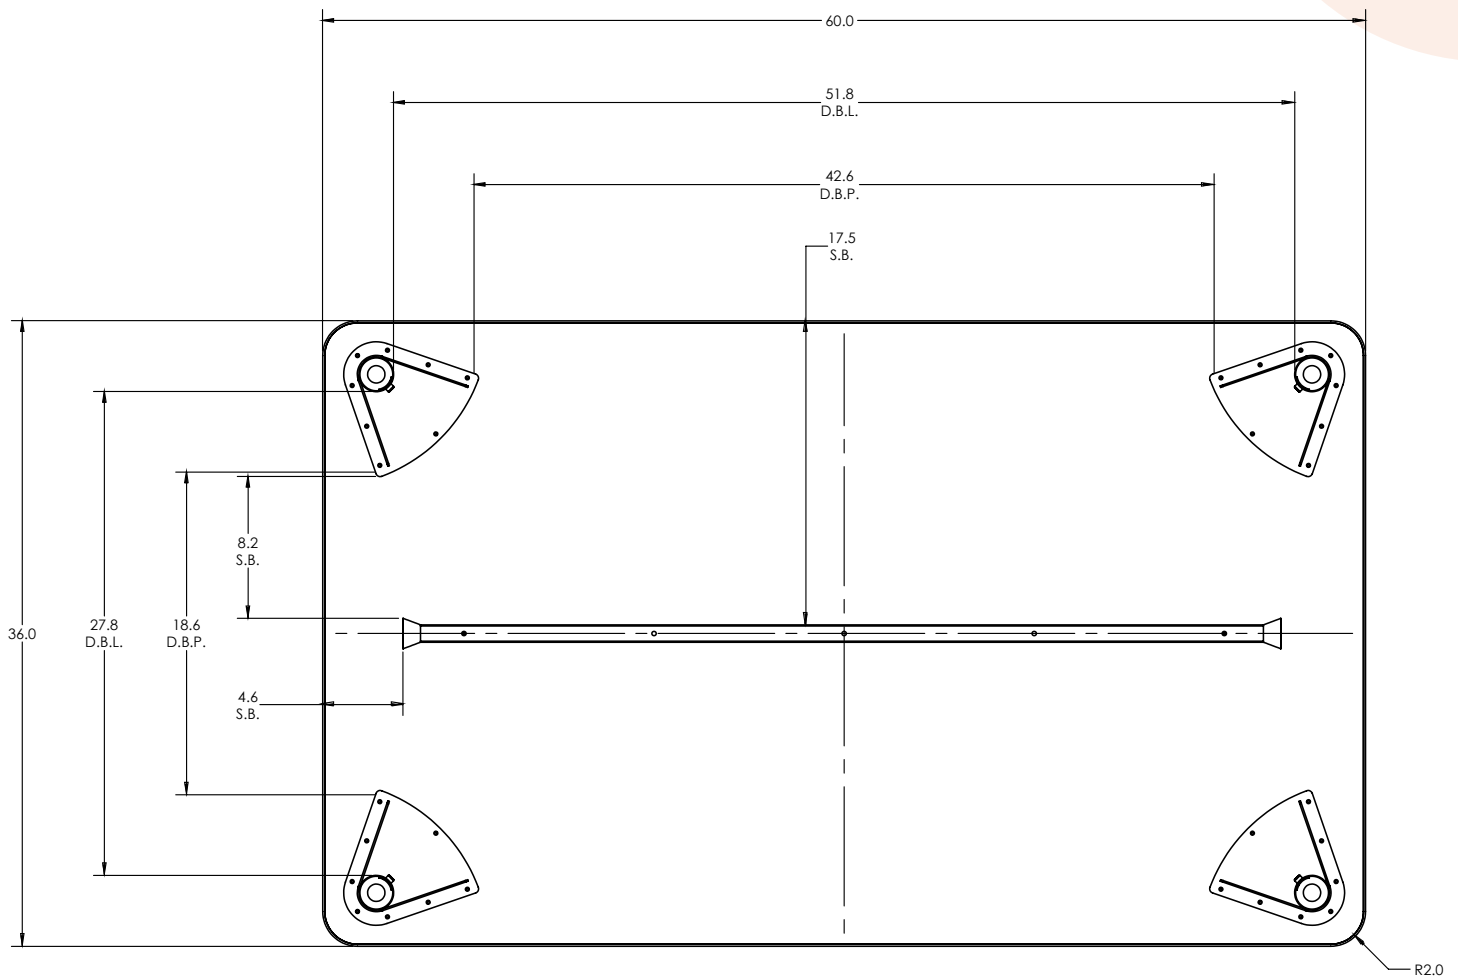


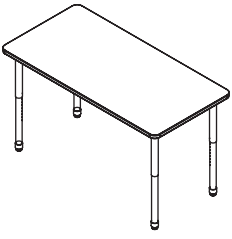

## Shape Tables


Rectangle 36" x 72"

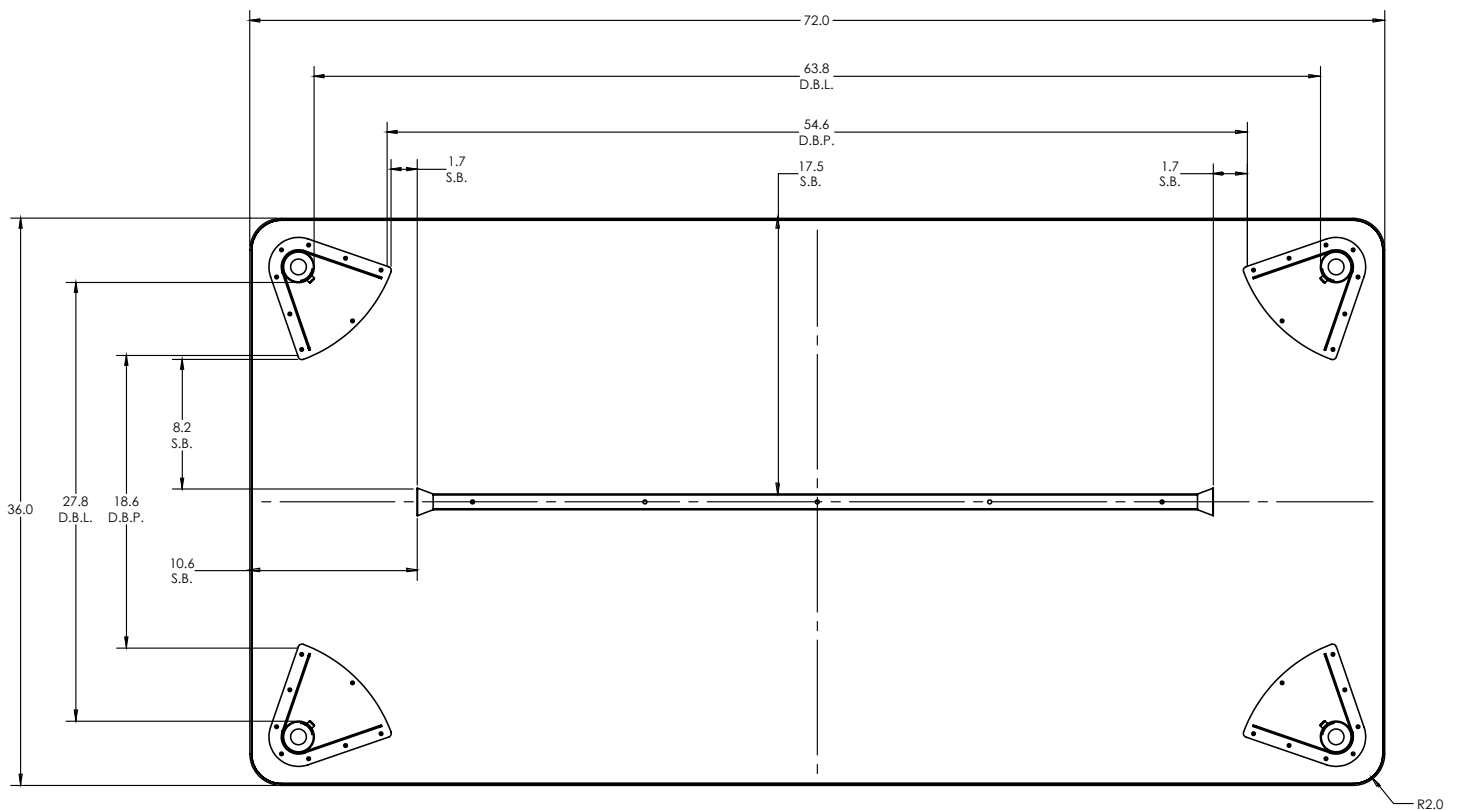

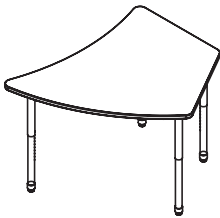

# Shape Tables

## Aperture

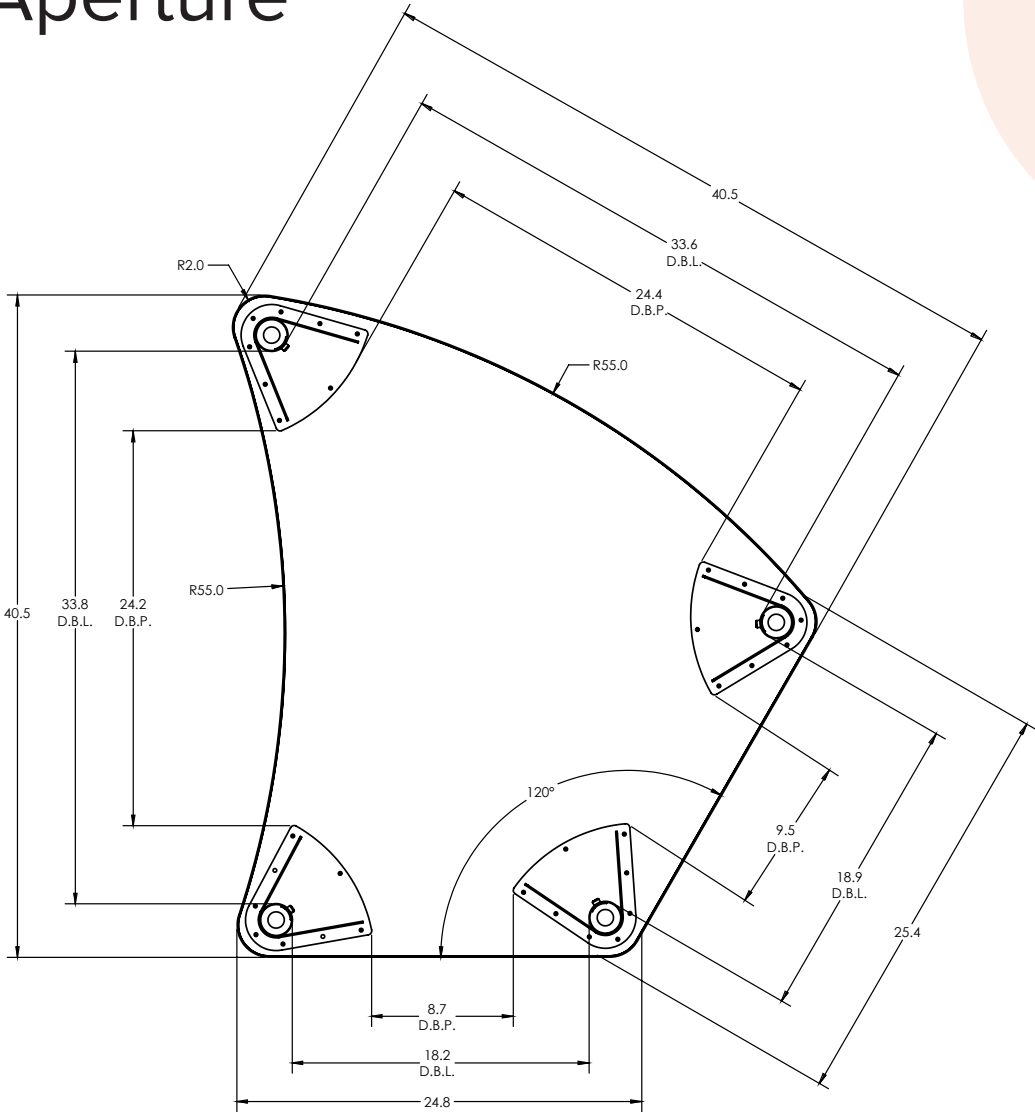

MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-AP2440E	35.5"	40.6"	14.8"	29.1"		X


**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)






# Shape Tables

## 3-Position

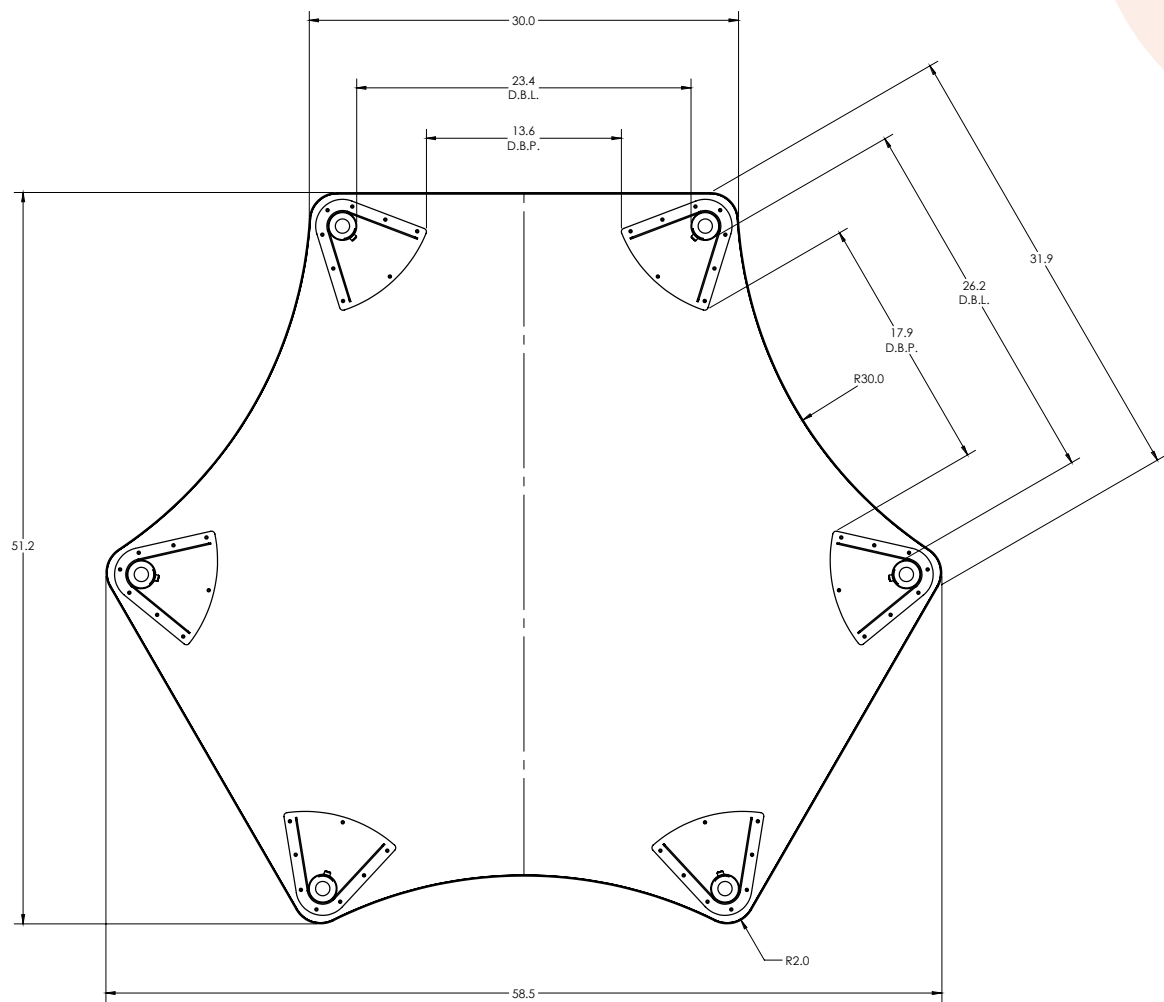


MODEL	TOP	D.B.L.*		A.D.A. SEATING ZONE**	
		MIN	MAX	YES	NO
DTT-3P3060E	60.0"	20.5"	25.3"		X

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

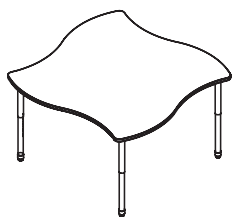

# Shape Tables

## Nova

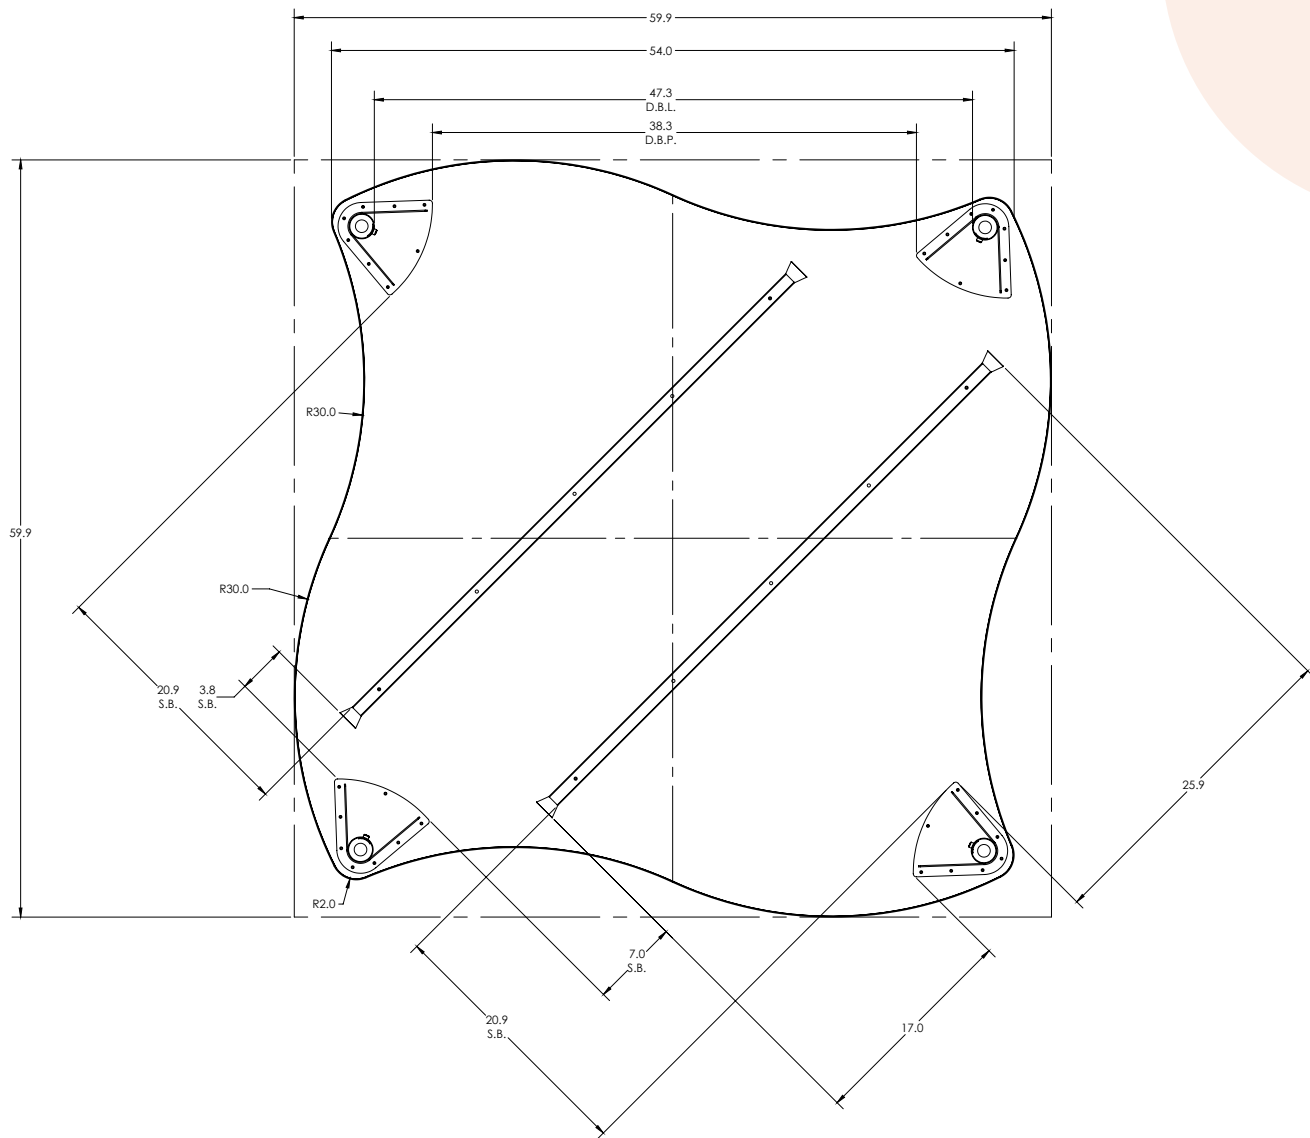


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-NV60E	60.0"	60.0"	44.8"	X		

**Notes**


\*D.B.L. (Distance Between Legs)

\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

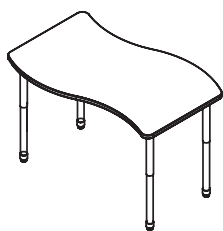


# Shape Tables

## Expanse

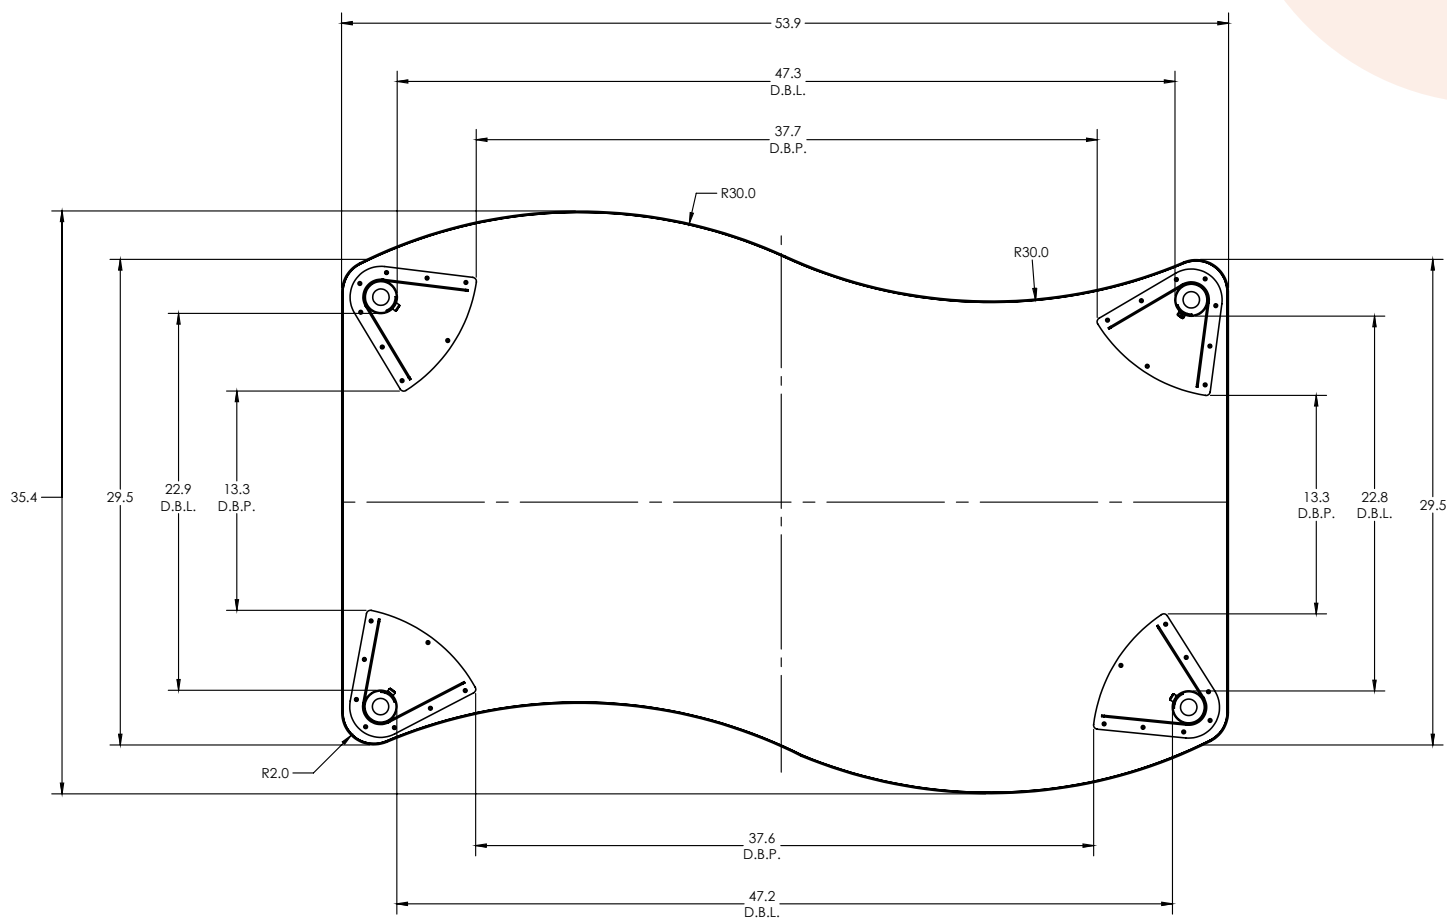


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-EX3054E	30.0"	54.0"	22.9"	47"	X	

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

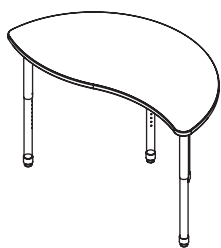


# Shape Tables

## Nebula

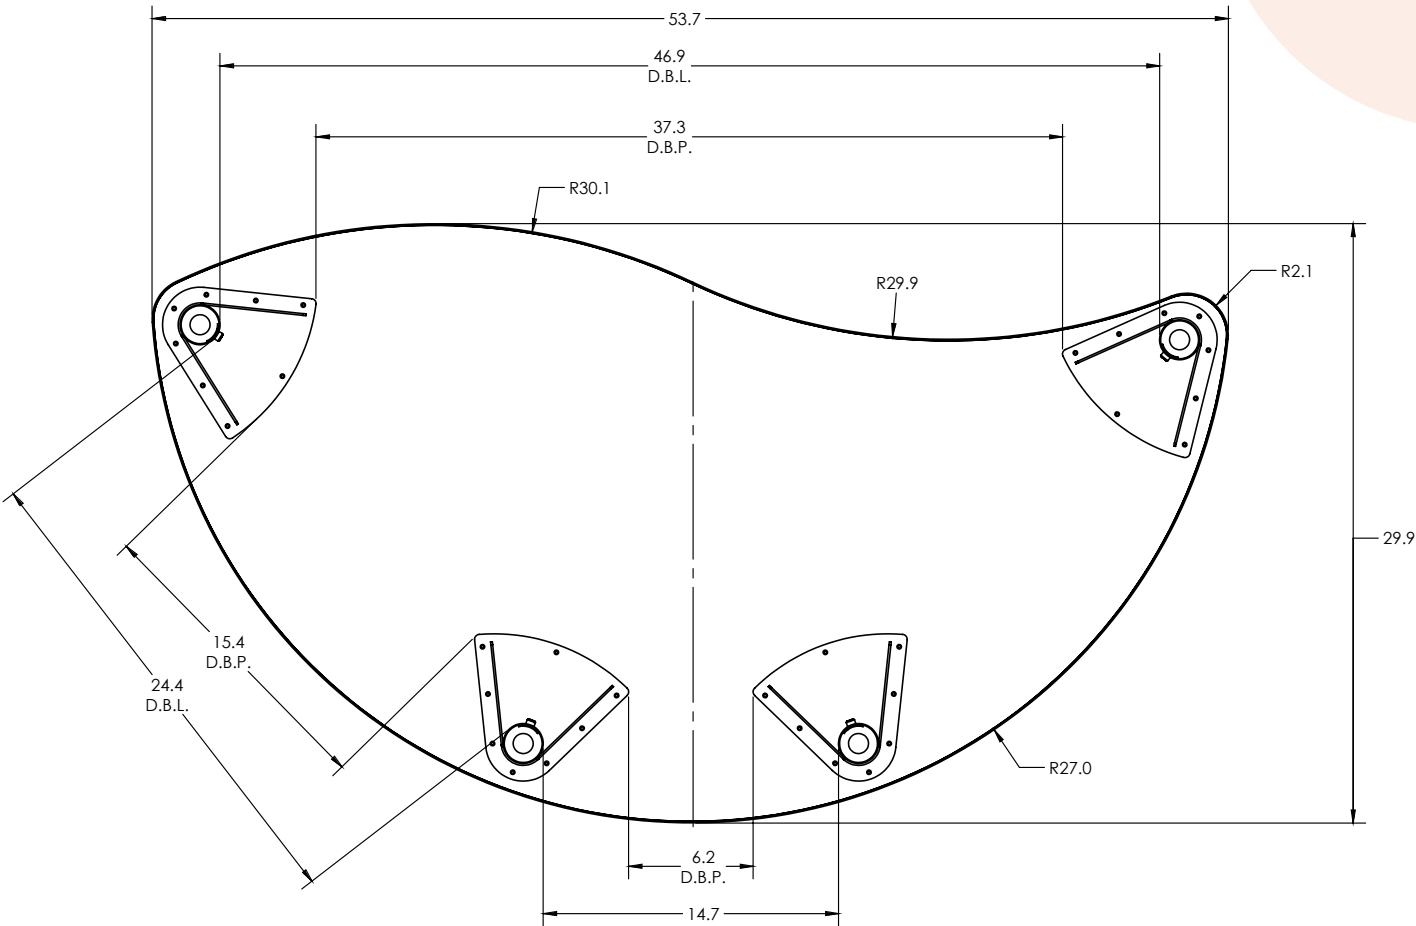


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-NB3054E	30.0"	54.0"	21.8"	42.8"	X	

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

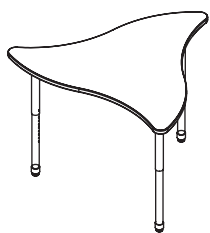


# Shape Tables

## Gravity

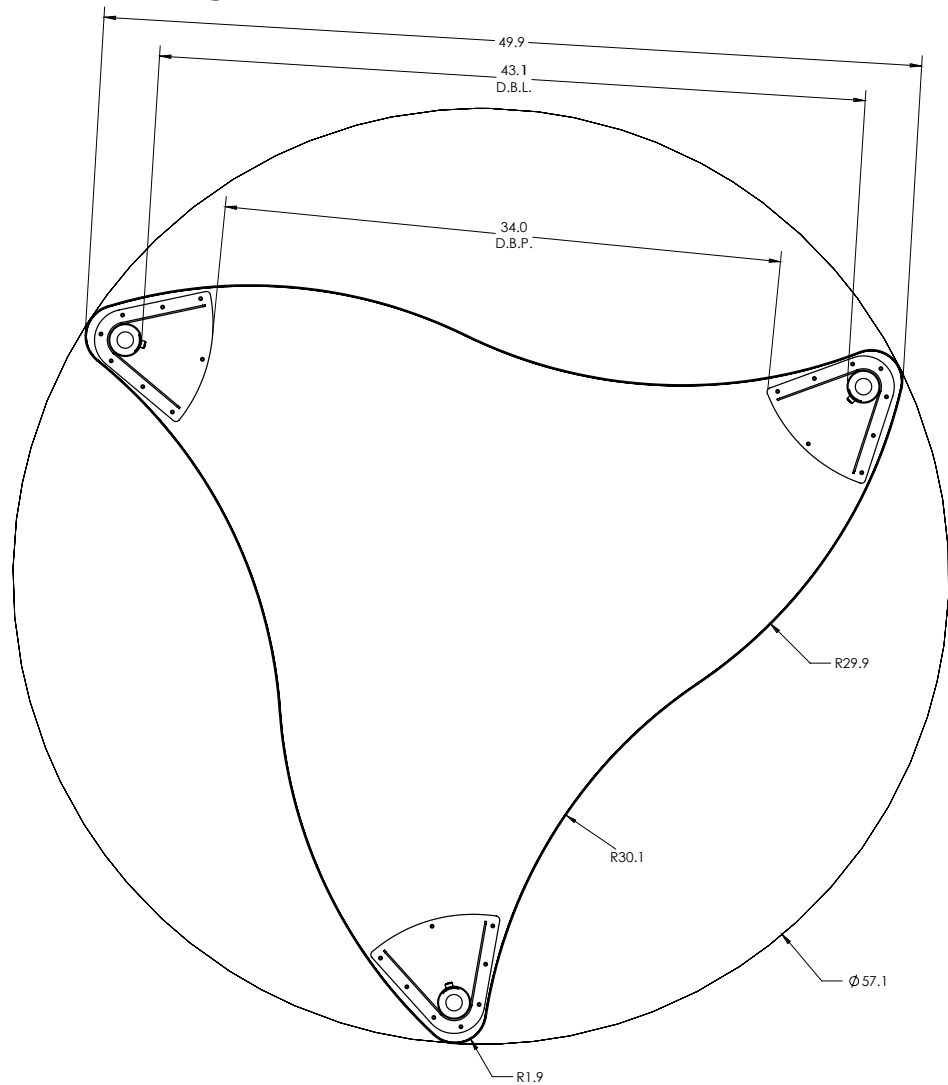


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-GV50E	50.0"	50.0"	35.5"	X	X	

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

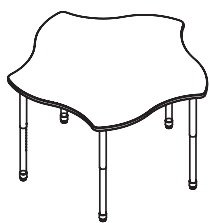

# Shape Tables

## Star

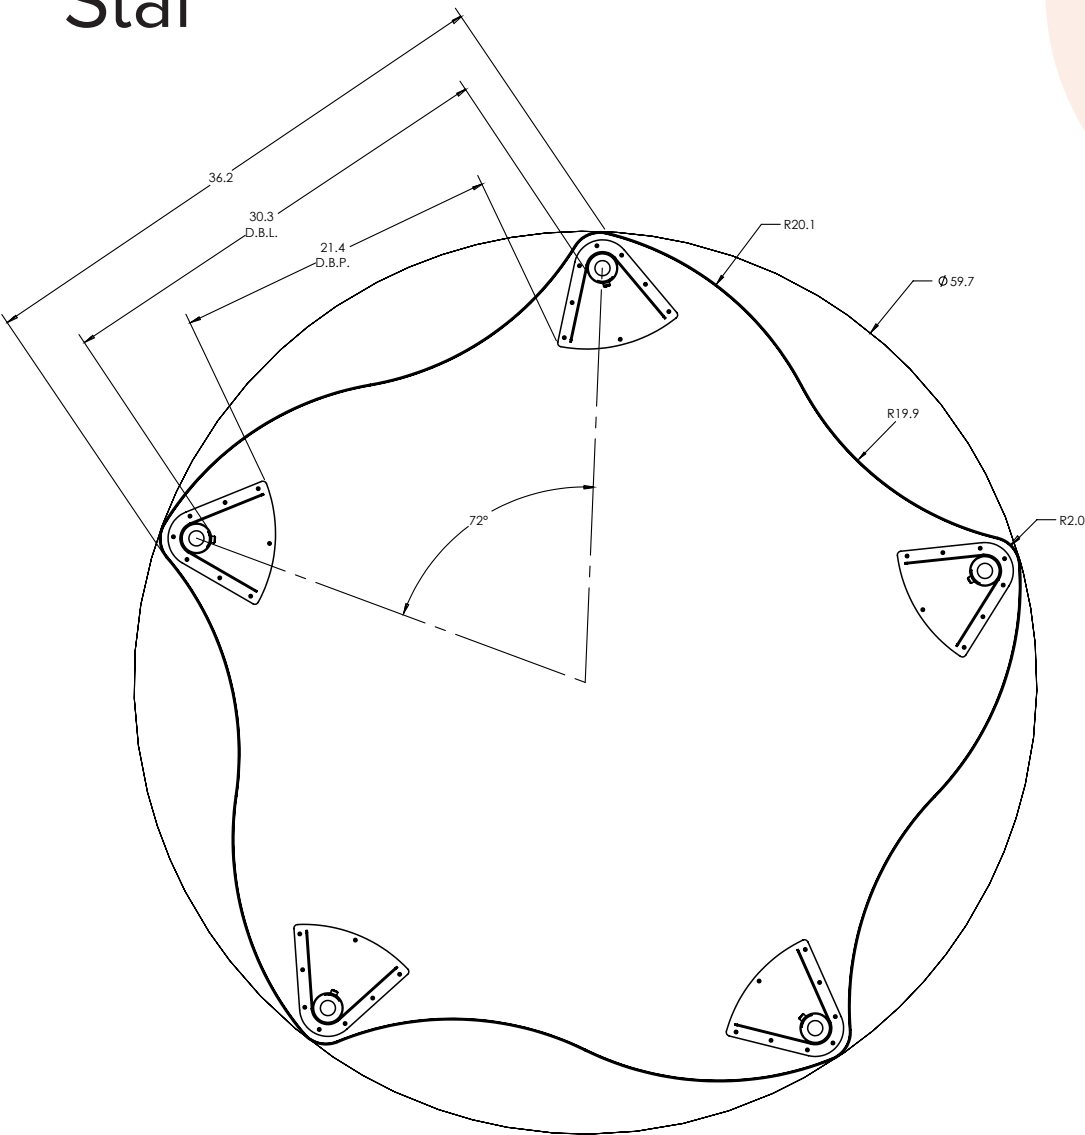


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-ST60E	60.0"	60.0"	26.6"	X		X

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)




# Shape Tables

## Kidney

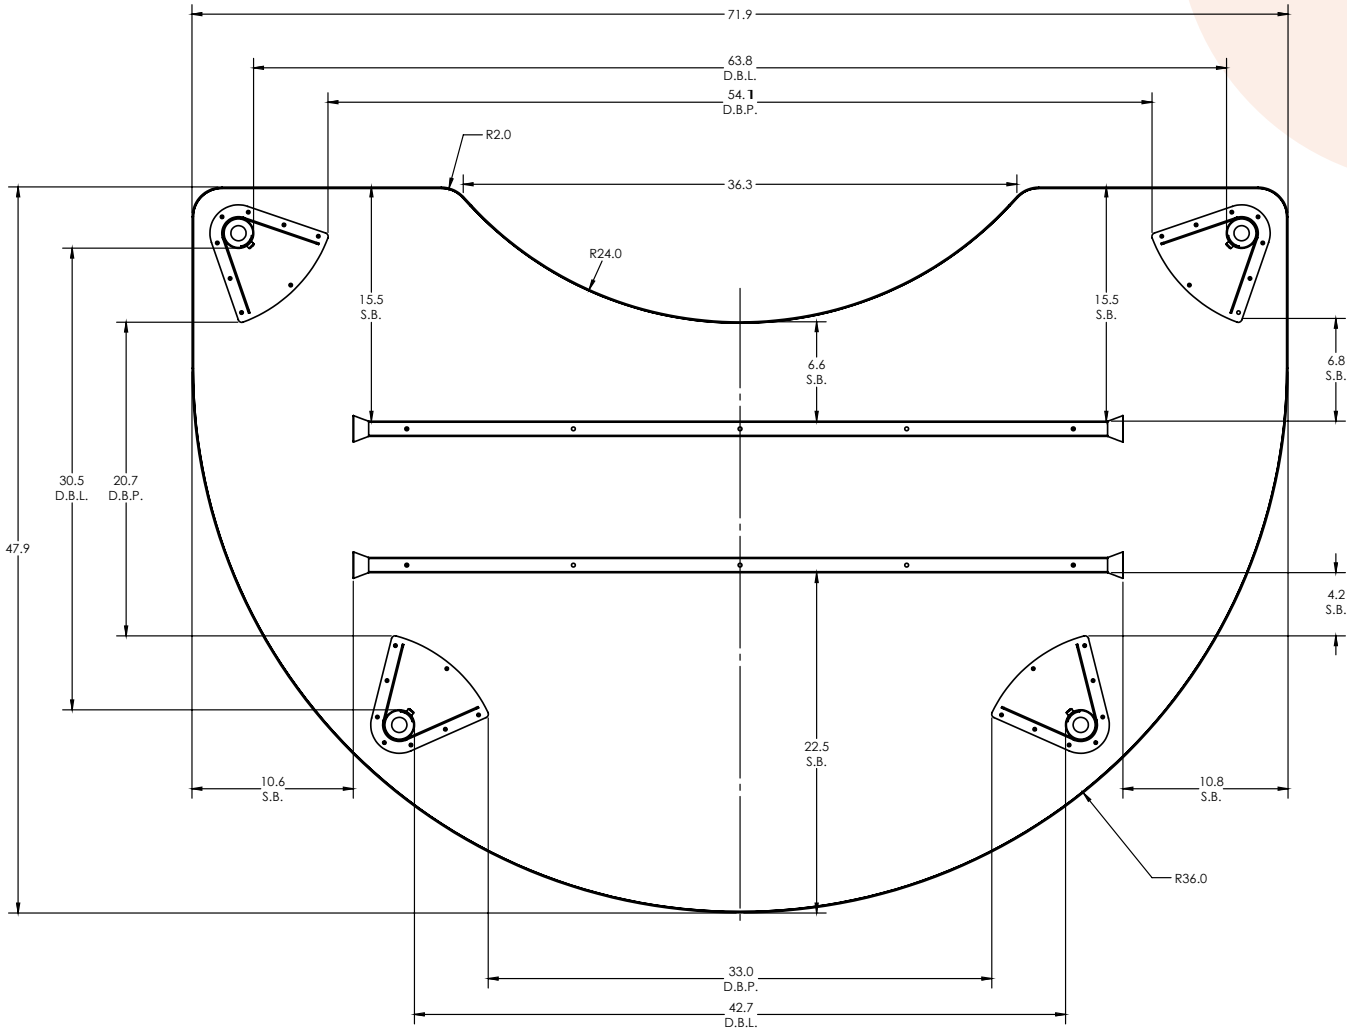


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-KD4872E	48.0"	72.0"	28.7"	60.0"	X	

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

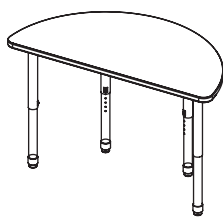

# Shape Tables

## Half-Round

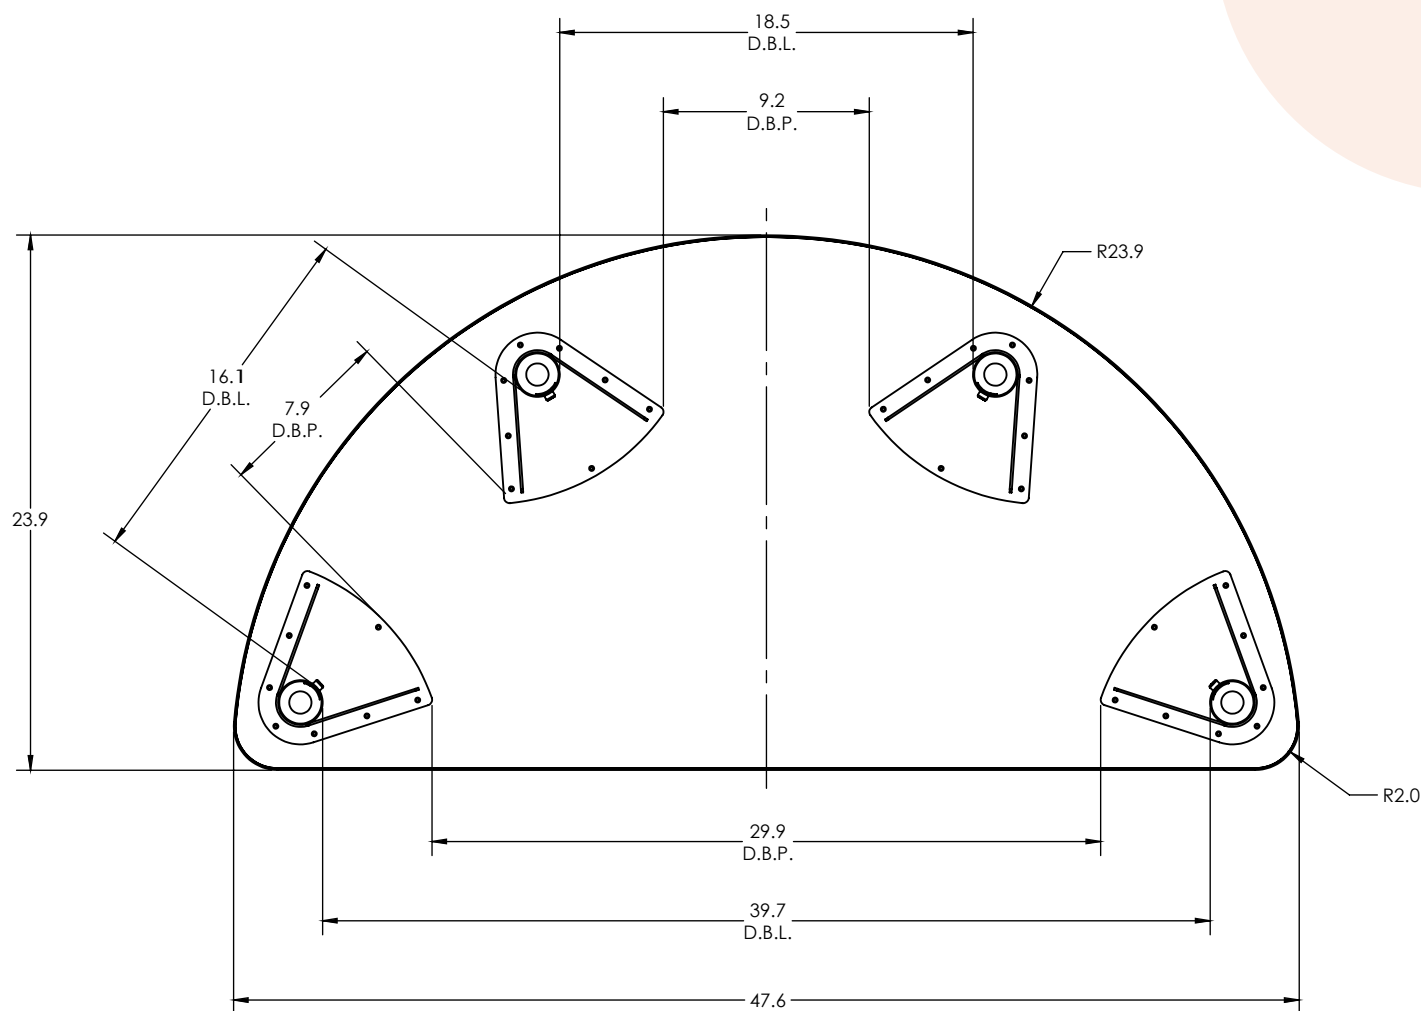


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-HR48E	24.0"	48.0"	15.7"	38.0"		X

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)




# Horseshoe

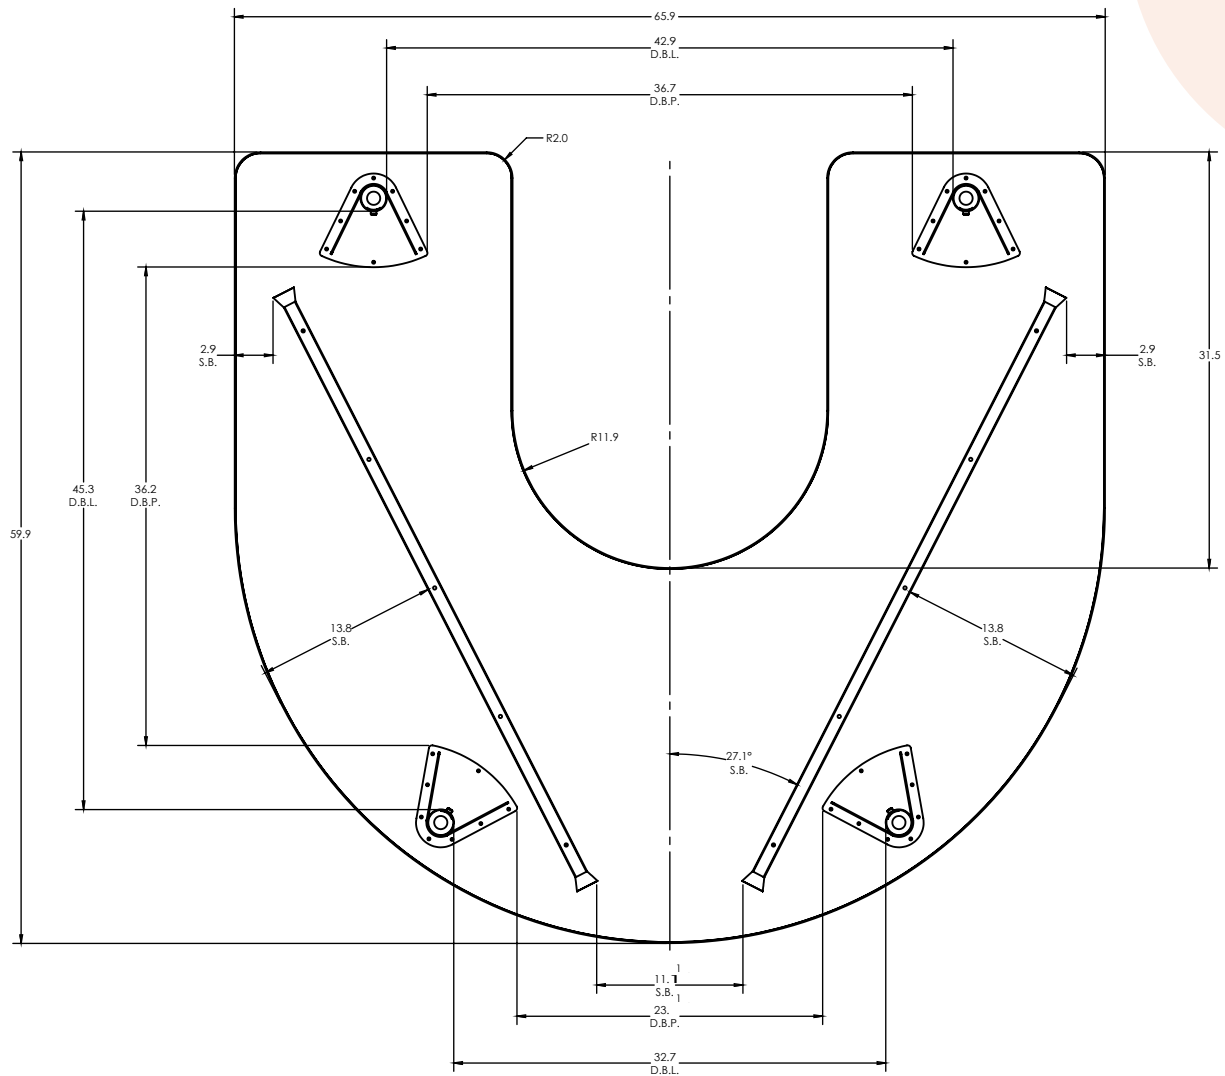


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-HS6066E	60.0"	66.0"	30.9"	41.0"	X	

**\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)**

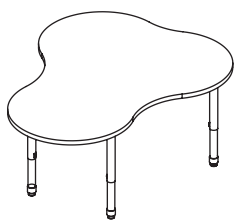


# Shape Tables

4P

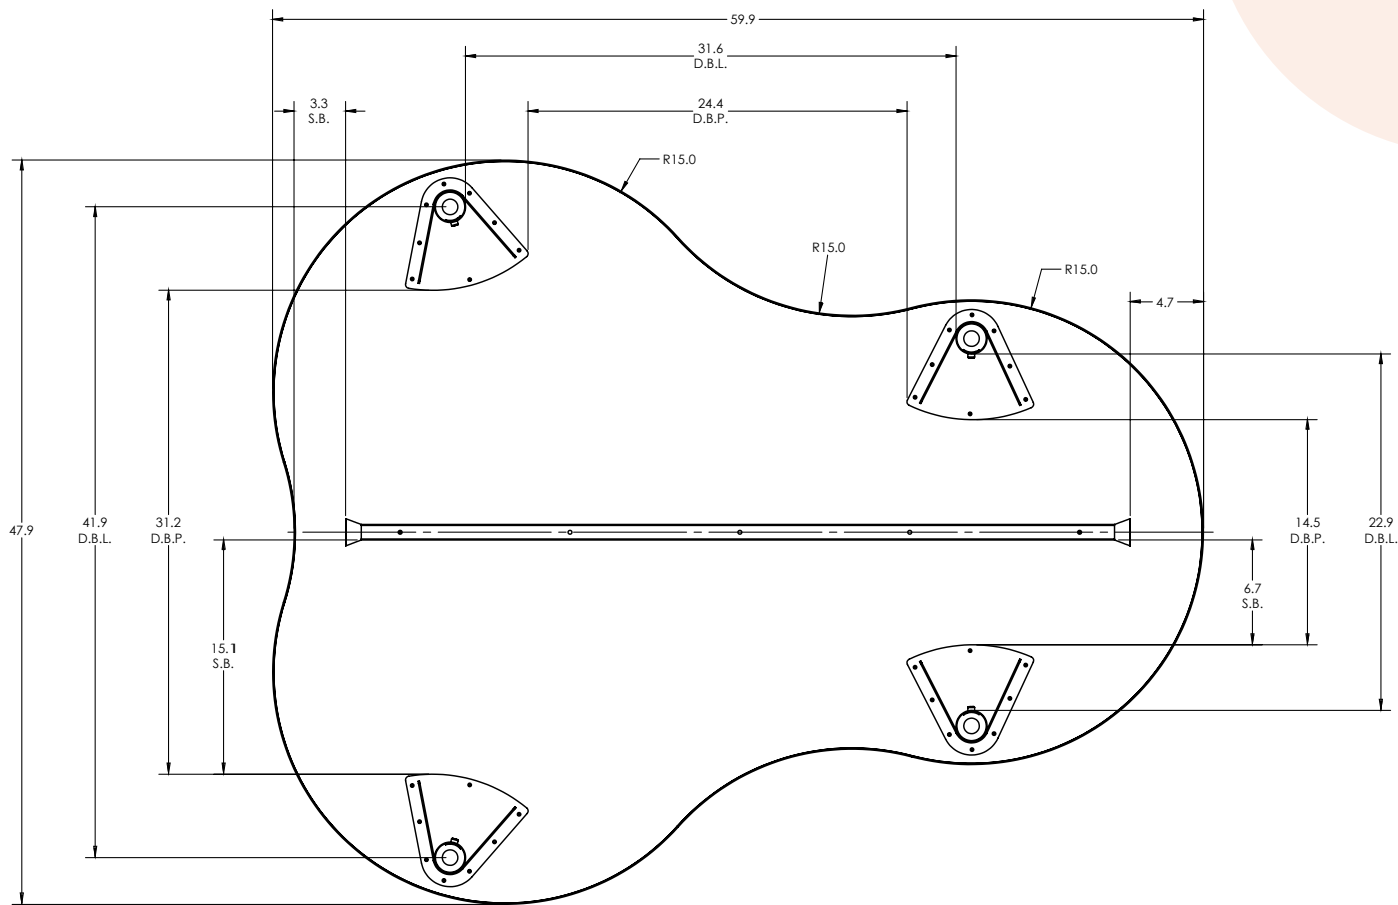


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-4P4860E	48.0"	60.0"	23.7"	39.6"	X	

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

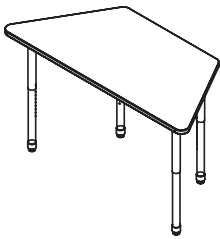


# Shape Tables

## Trapezoid

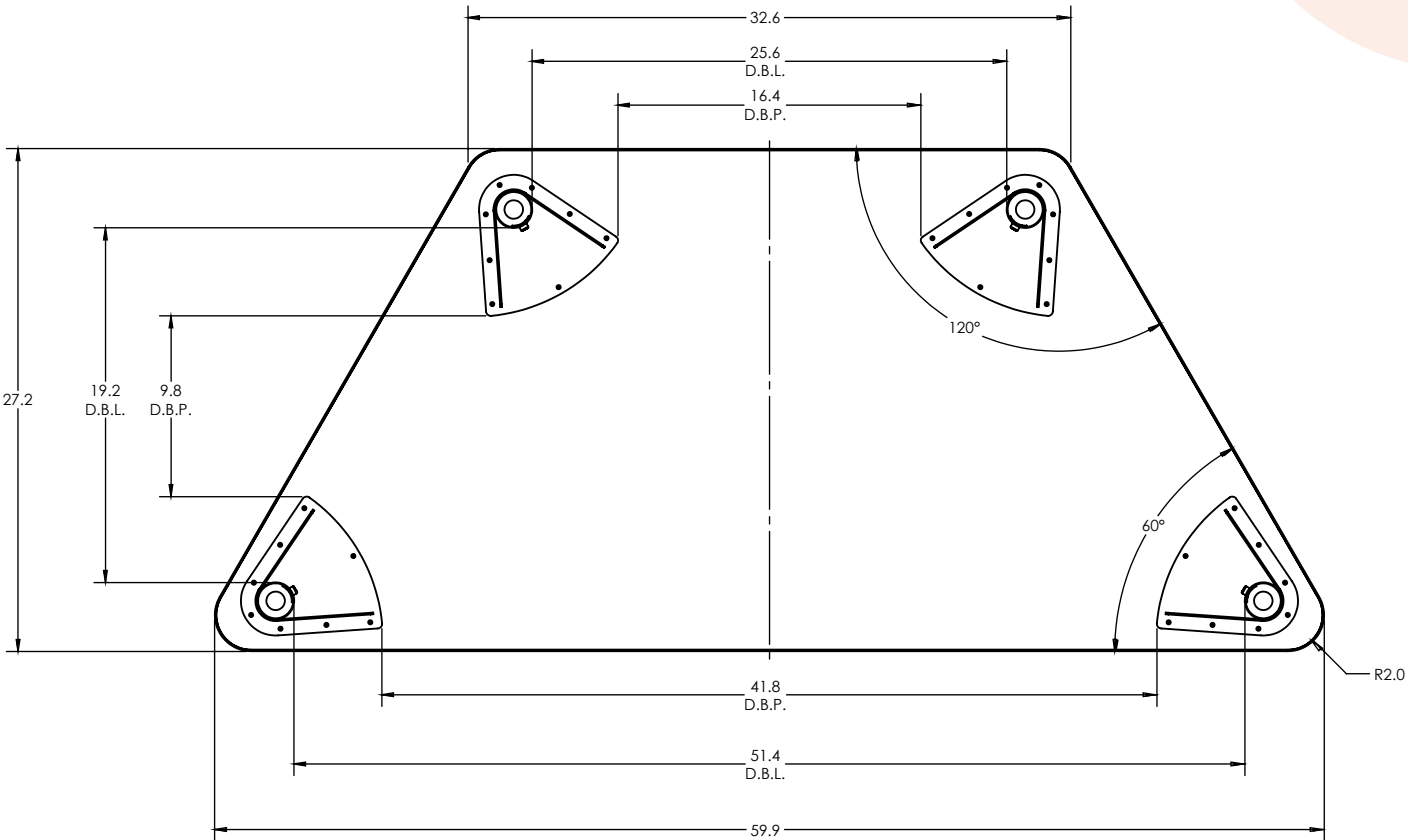


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-TZ3060E	30.0"	60.0"	21.0"	50.3"	X	

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

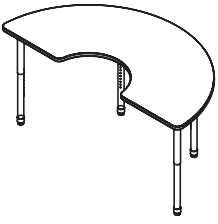

# Shape Tables

## Half-Moon

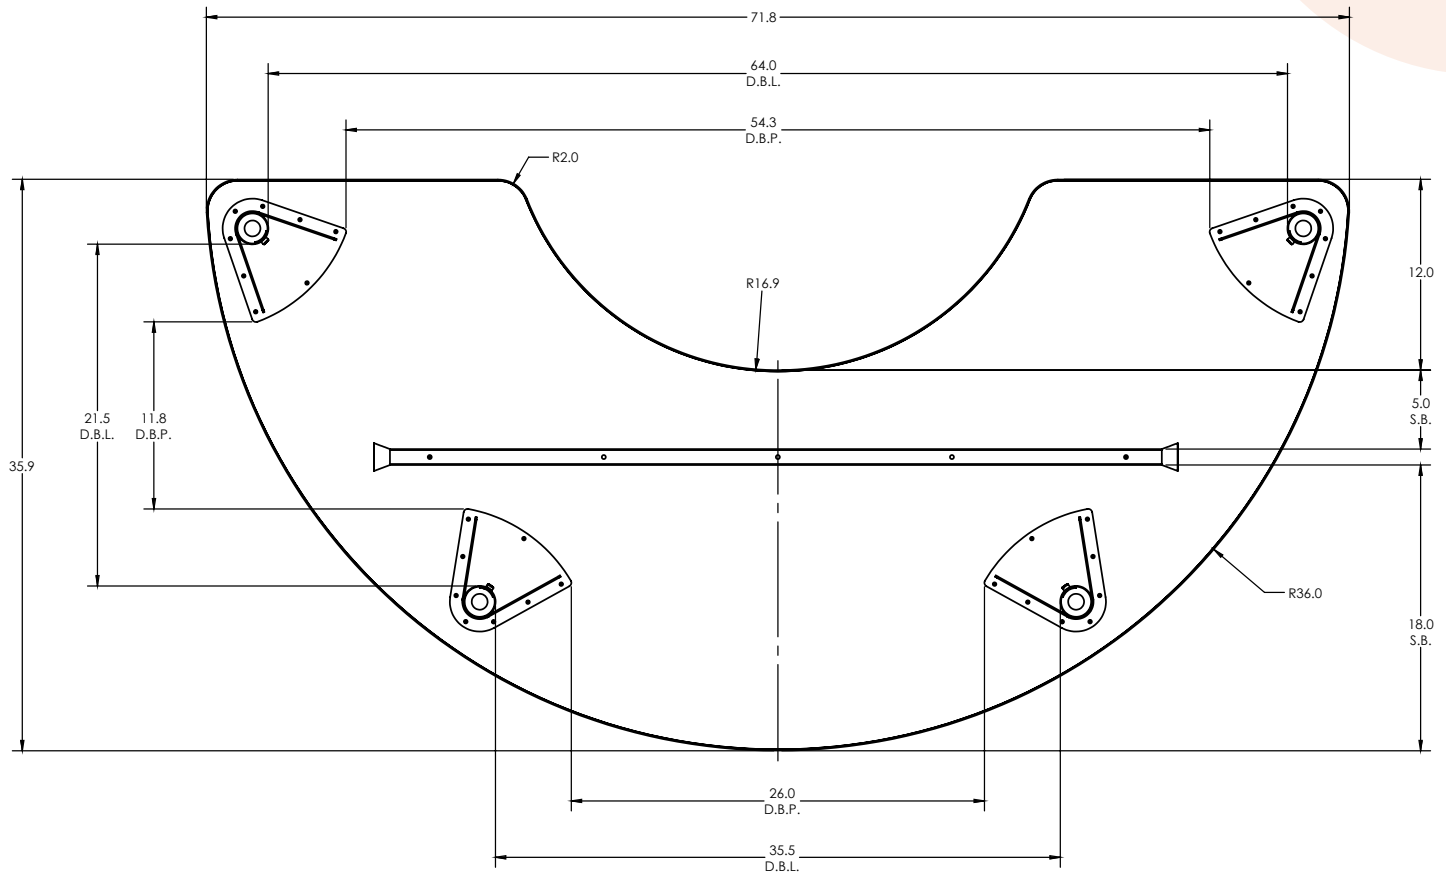


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-HM3672E	36.0"	72.0"	24.1"	60.0"		X

### Notes


\*D.B.L. (Distance Between Legs)

\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

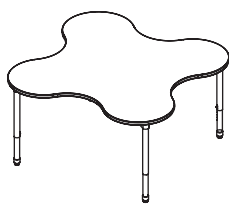


# Shape Tables

## Puddle

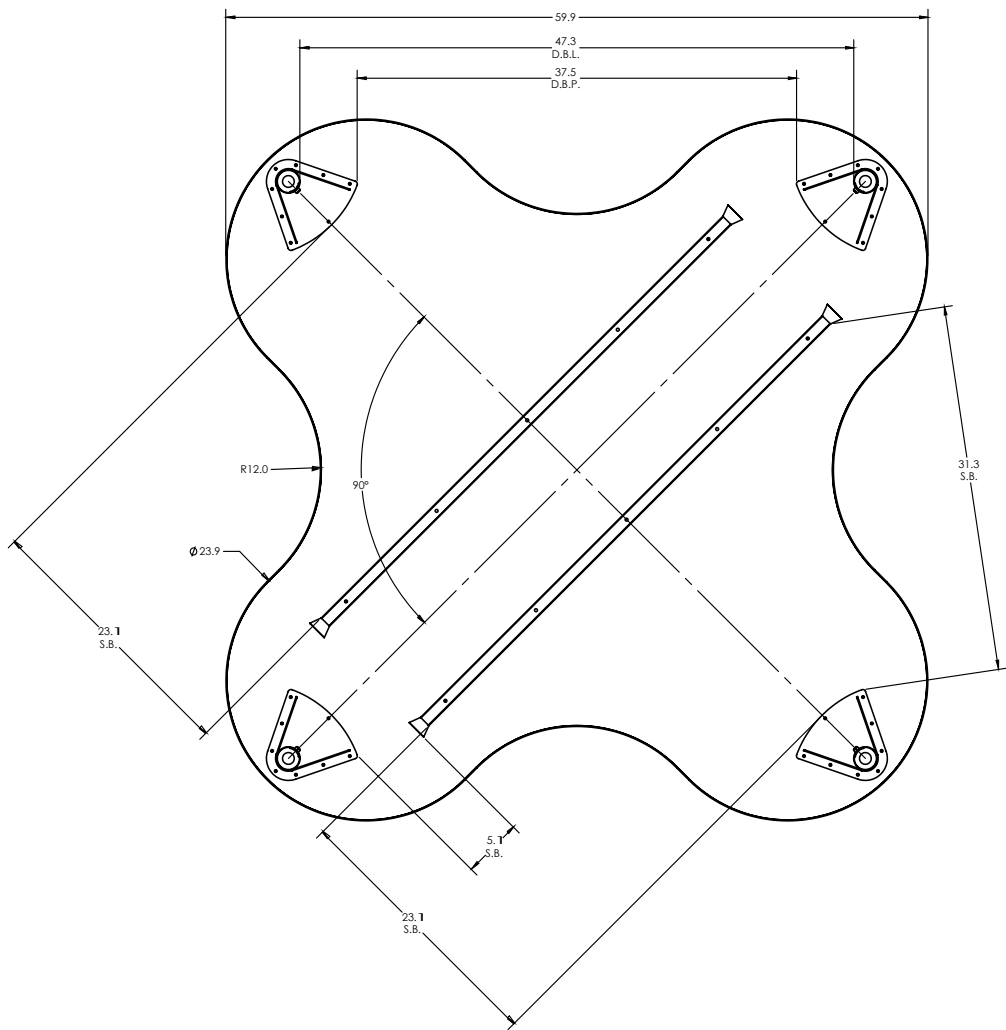


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-PD60E	60.0"	60.0"	44.9"	44.9"	X	

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

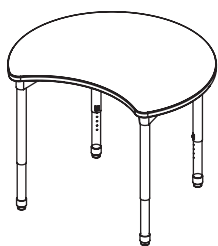

# Shape Tables

## Crescent

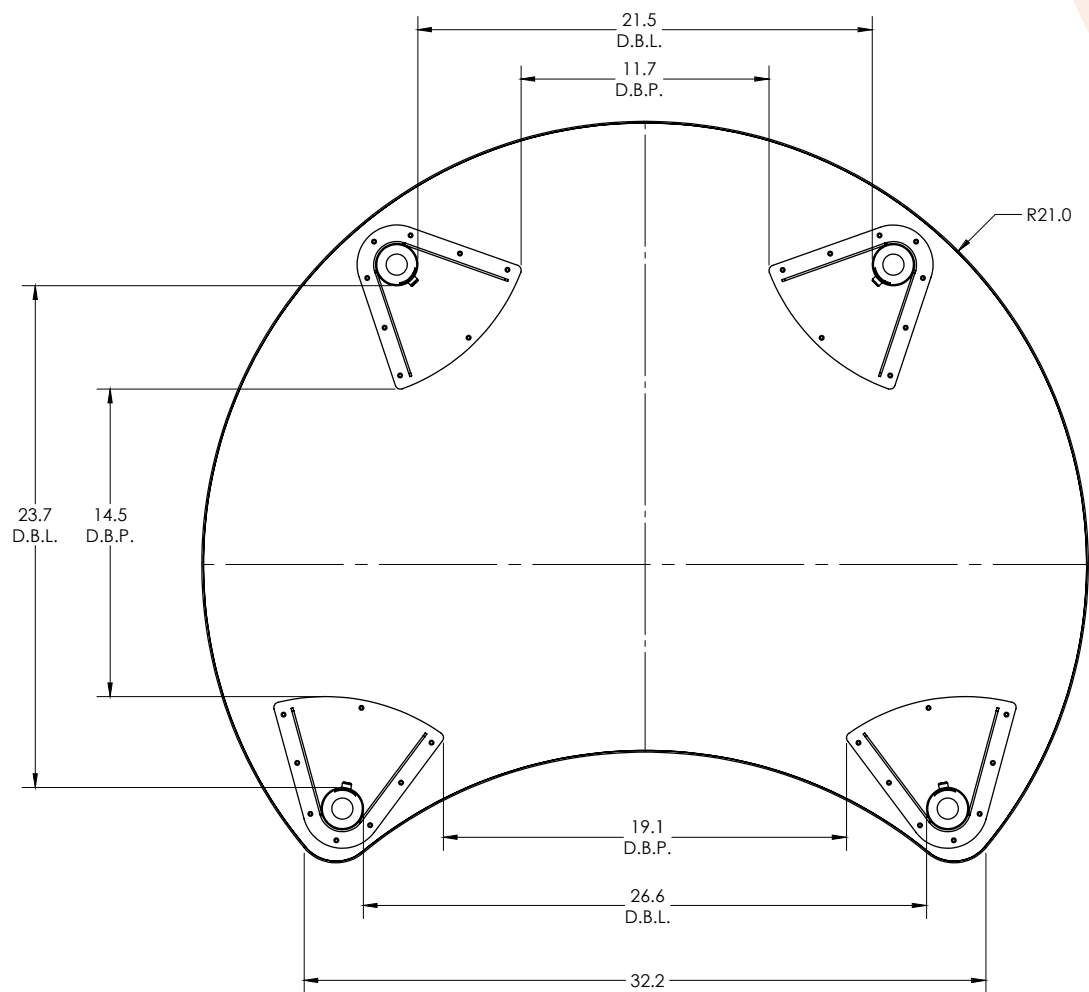


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-CR3042E	30.0"	42.0"	19.8"	24.7"		X

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)



# Shape Tables

## Multi-Media

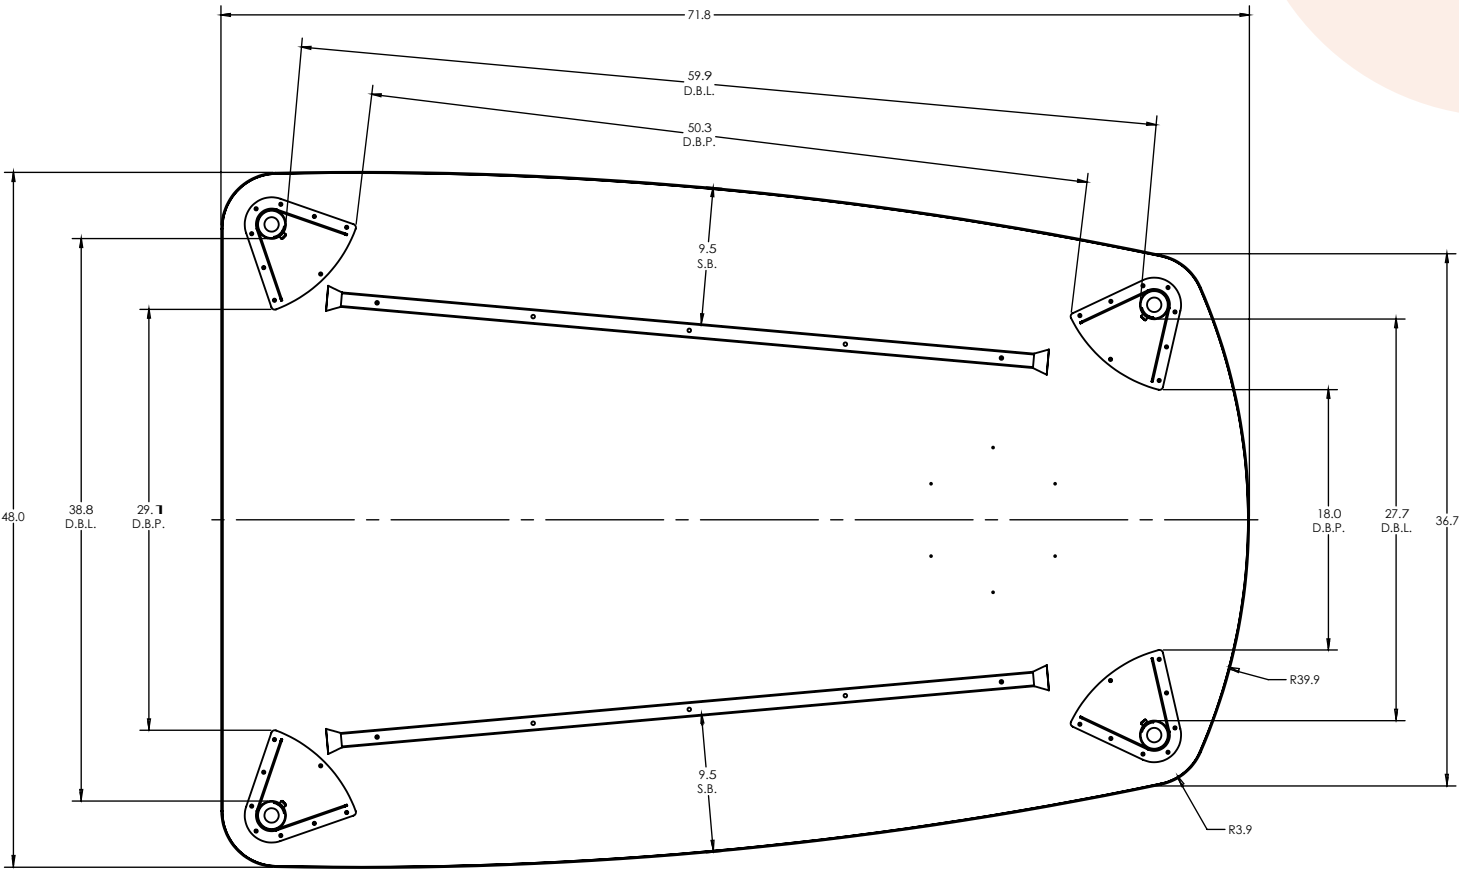


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-MM4872E	48.0"	72.0"	26.4"	58.3"	X	

**Notes**


\*D.B.L. (Distance Between Legs)

\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

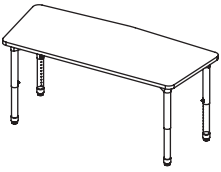

# Shape Tables

## Chevron

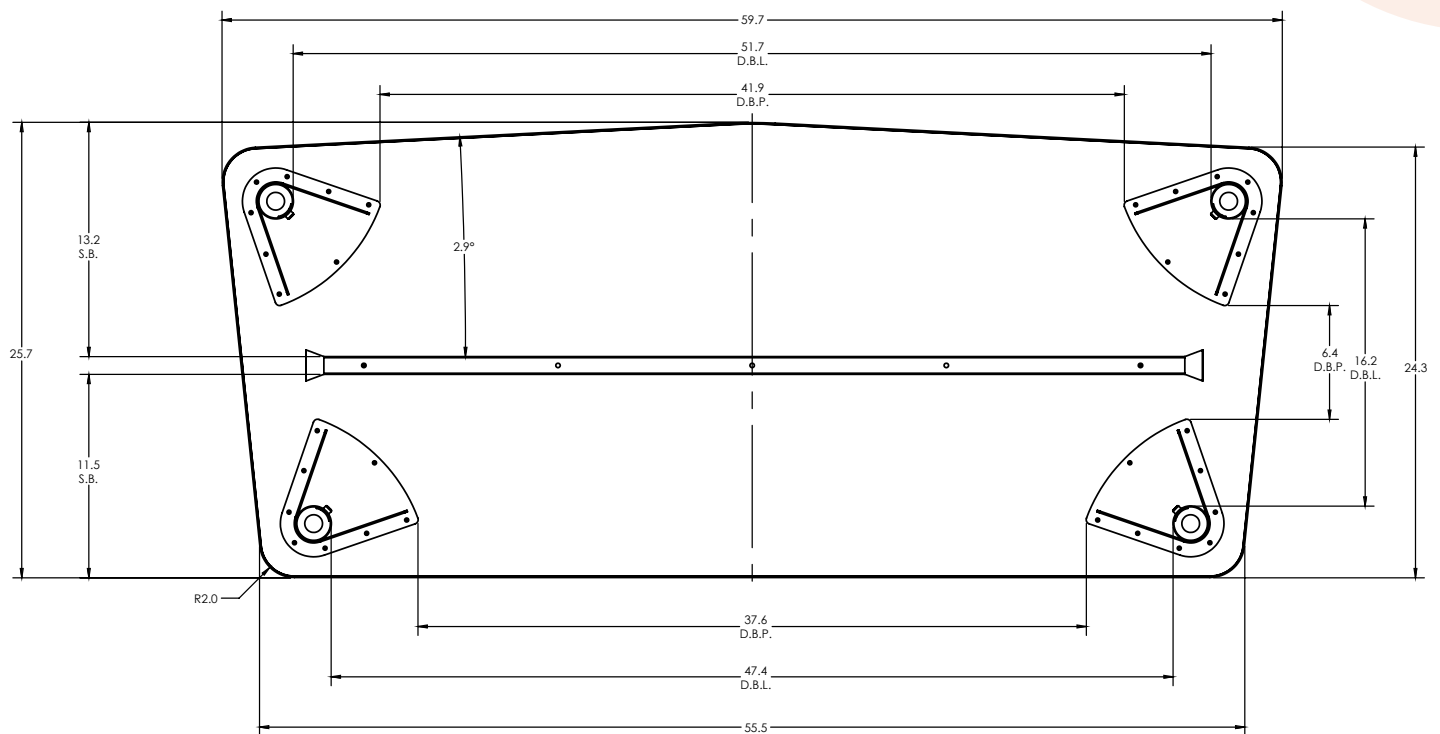


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-CV2460E	24.0"	60.0"	14.5"	38.5"	X	

### Notes

\*D.B.L. (Distance Between Legs)


\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)



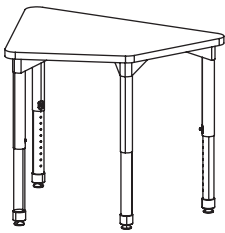


# Shape Tables

## Chain

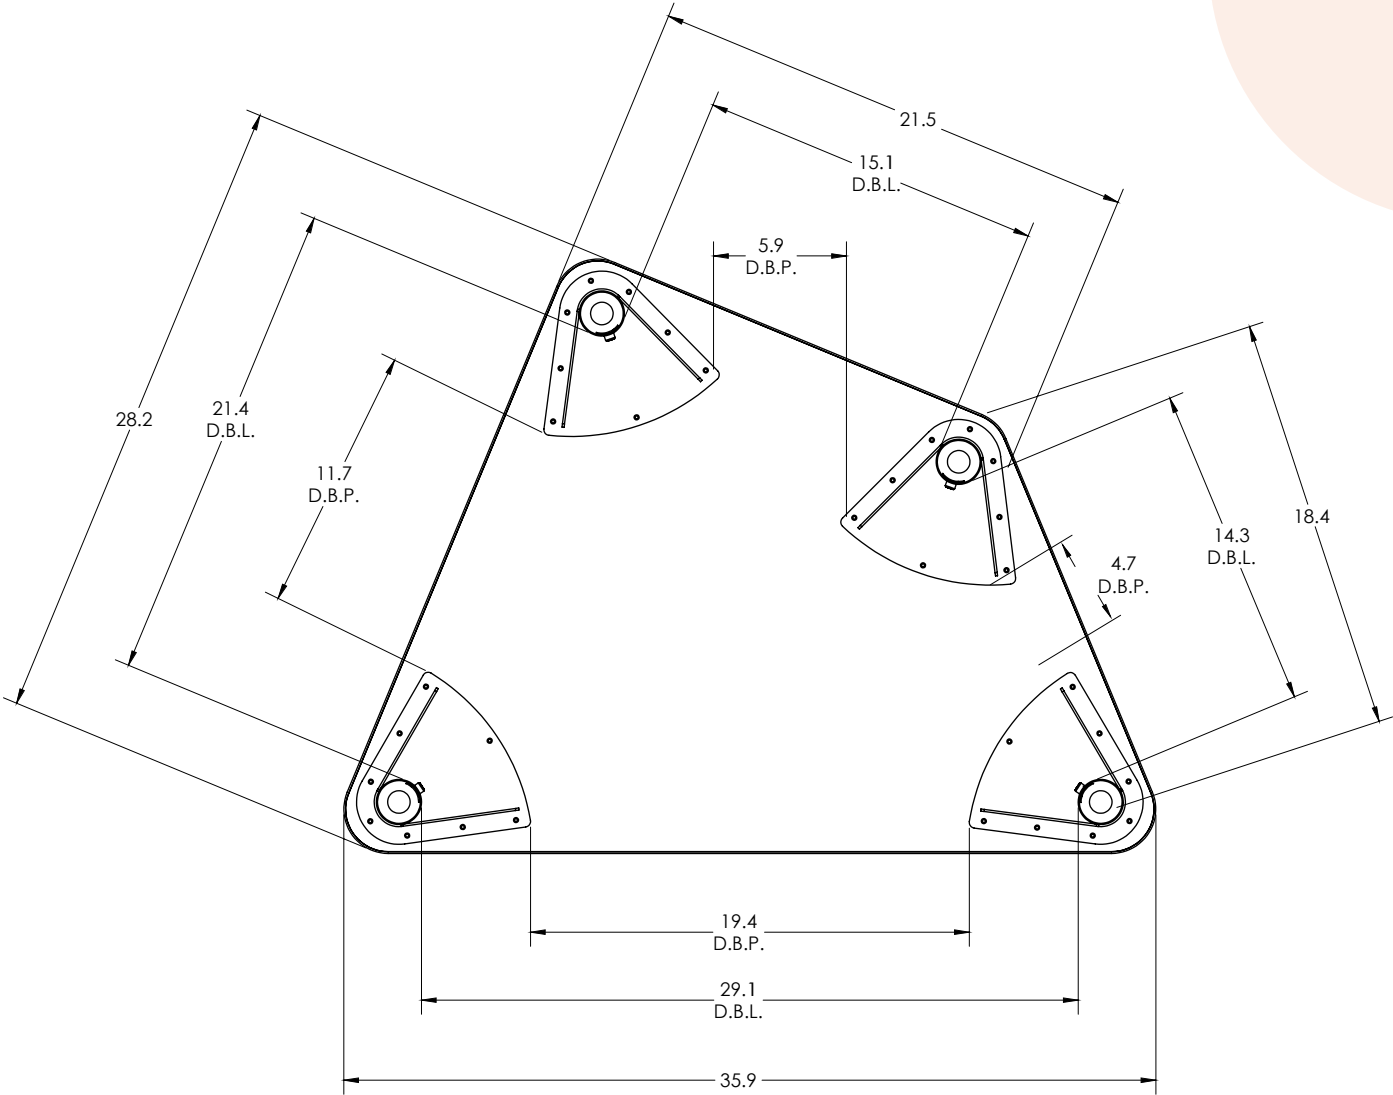


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-CH2636E	26.0"	36.0"	14.4"	29.1"		X

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

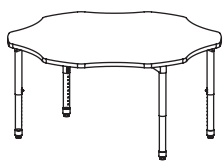


# Shape Tables

## Flower

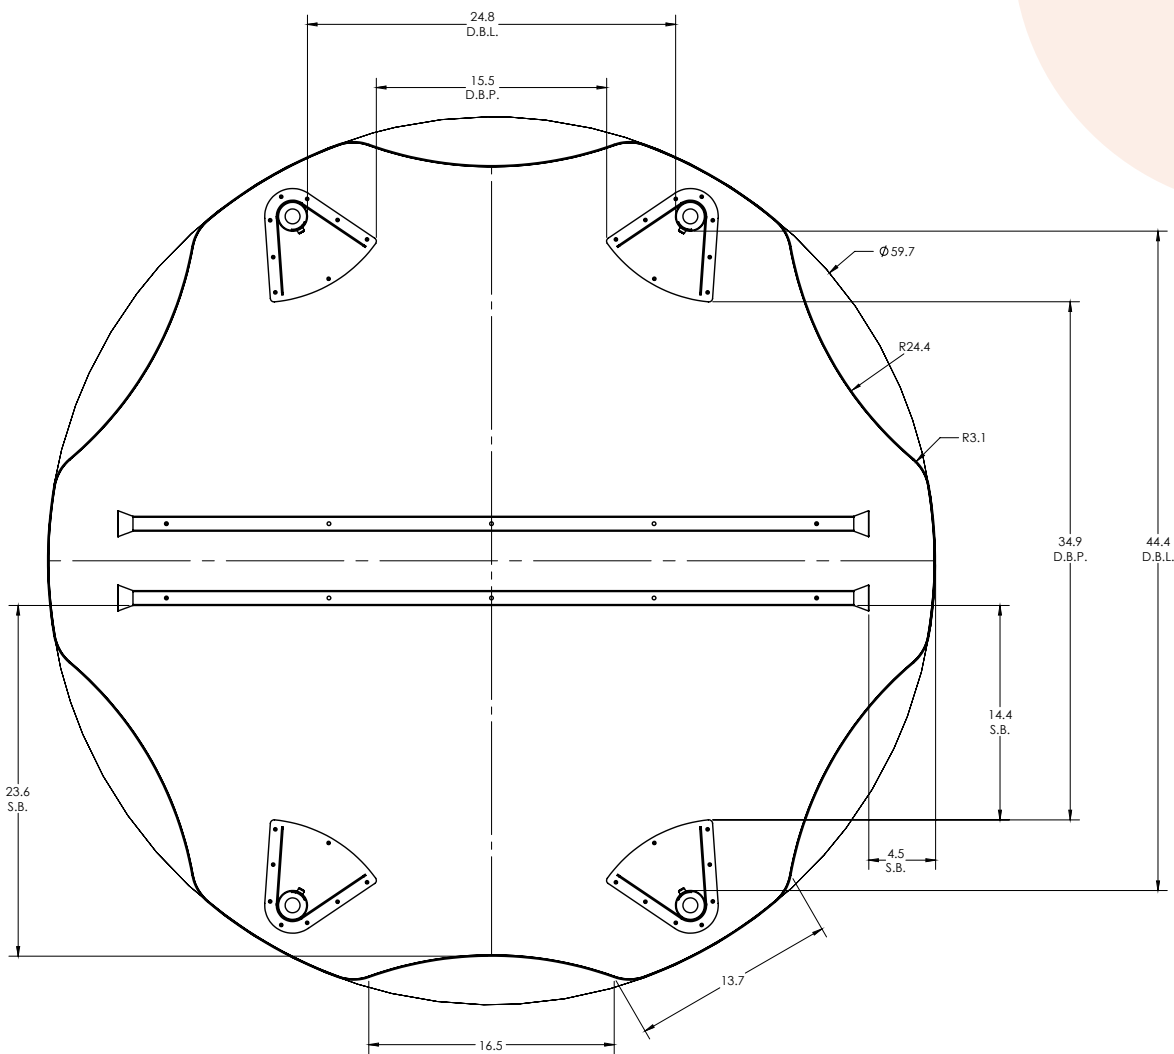


MODEL	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
		MIN	MAX	YES	NO
DTT-FL60E	60.0"	24.9"	44.5"	X	

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

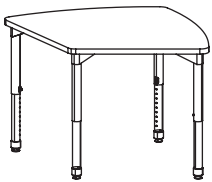

# Shape Tables

## Gem

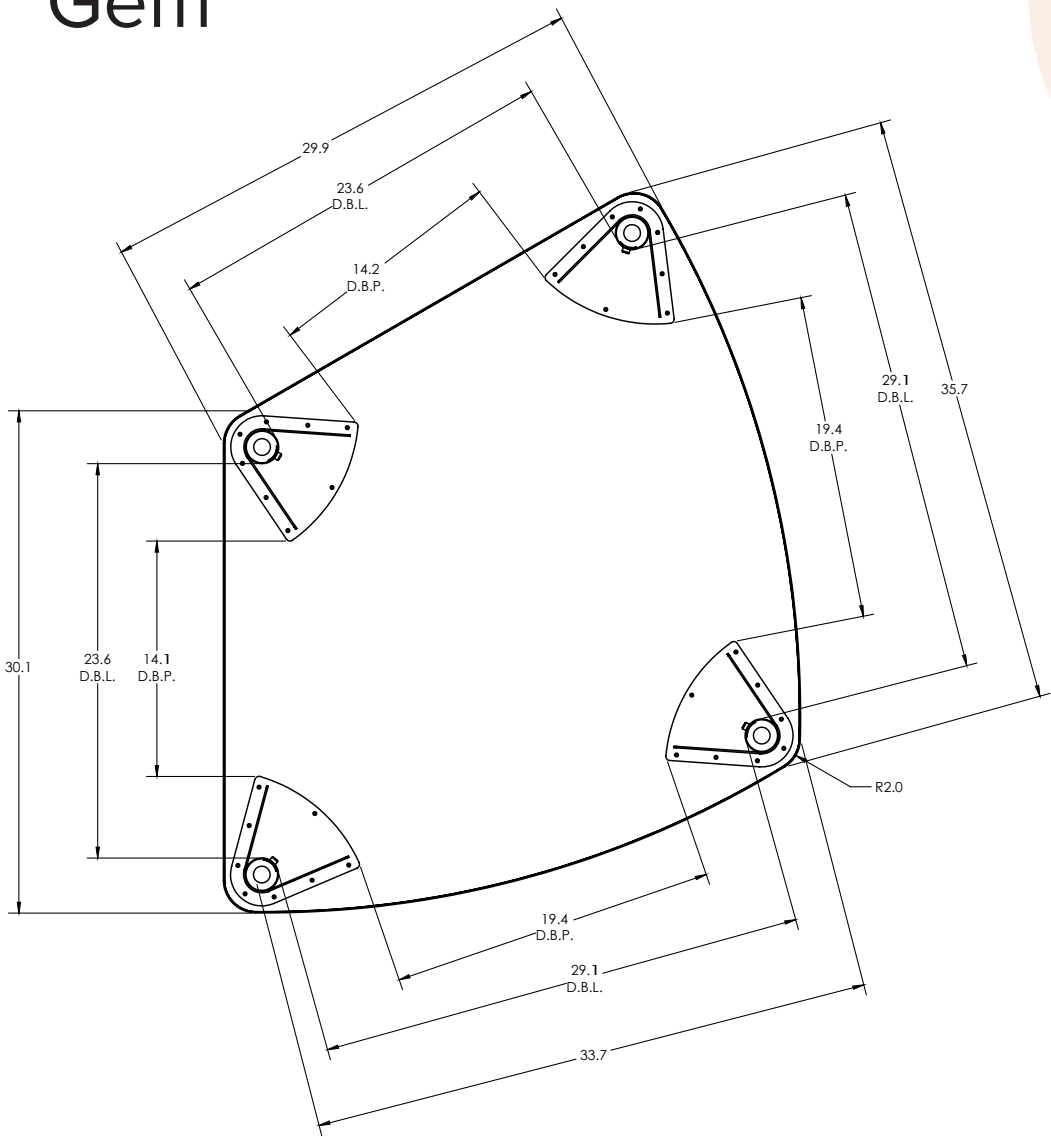


MODEL	TOP DEPTH	TOP WIDTH	D.B.L.*		A.D.A. SEATING ZONE**	
			MIN	MAX	YES	NO
DTT-GM3950E	39.0"	50.0"	23.7"	29.2"		X

**Notes**


\*D.B.L. (Distance Between Legs)

\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

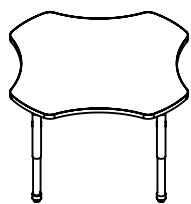


# Shape Tables

## Clover

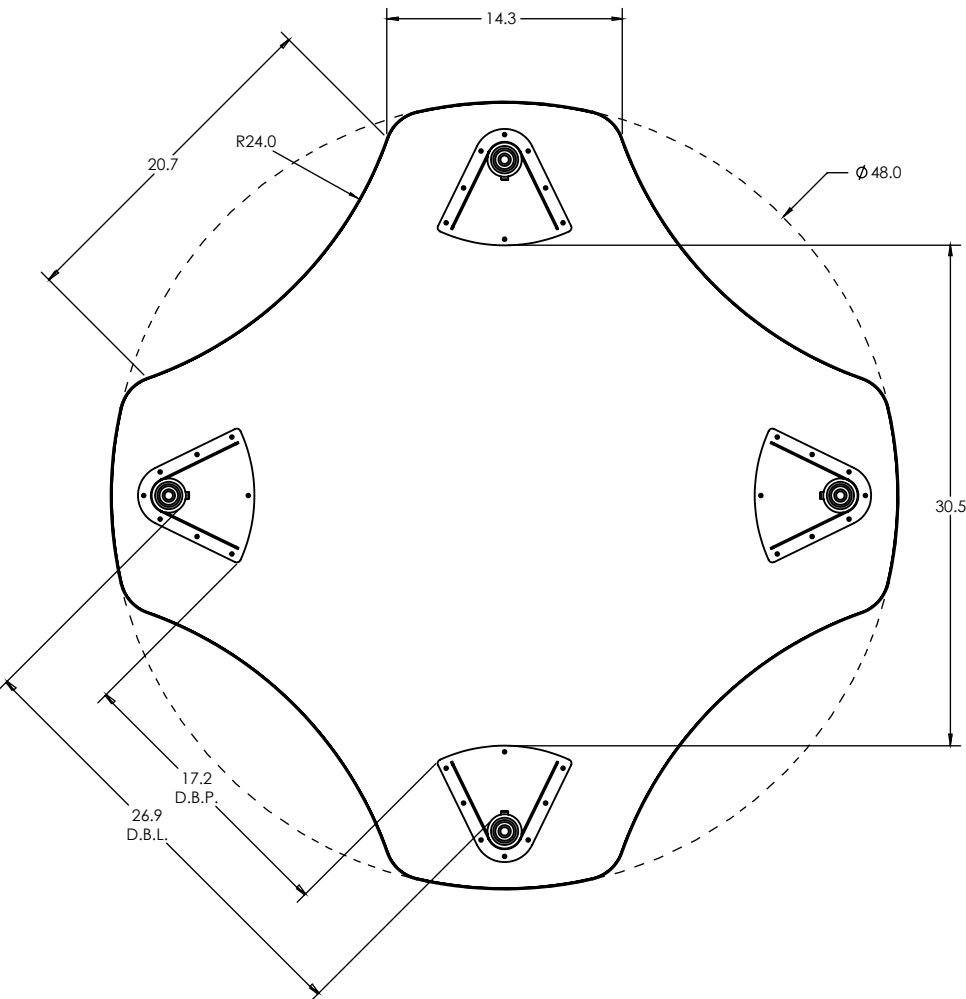


MODEL	TOP WIDTH	D.B.L.*	D.B.P.**	A.D.A. SEATING ZONE***	
				YES	NO
DTT-CL48E	48.0"	26.9"	17.2"		X

**Notes**  
\*D.B.L. (Distance Between Legs)  
\*\*D.B.P. (Distance Between Plates)  
\*\*A.D.A. Seating Zone (30.0" wide x 19.0" deep)

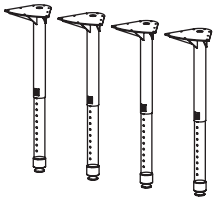


## Shape Tables

### Adjustable Post Legs

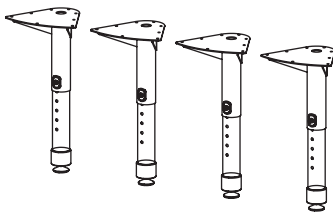


**15"–20"  
JUVENILE HEIGHT**

DTLP-4AJP

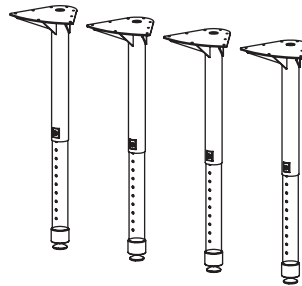


**19"–29"  
TABLE HEIGHT**

DTLP-4ATP

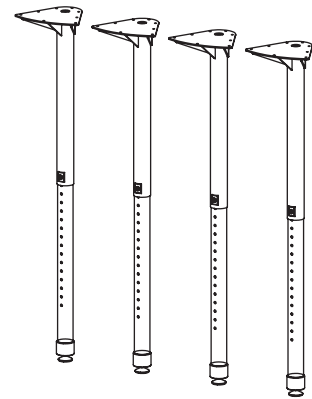

**27"–42"  
STANDING HEIGHT**

DTLP-4ASP

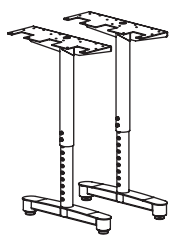

# Shape Tables


## T-Legs

### Shape Table | T-Legs


Choose the right T-Leg for your shape tables

Model	18"	24"	30"	36"
DTT-SQ36E			✓	✓
DTT-RC1848E	✓			
DTT-RC1860E	✓			
DTT-RC1872E	✓			
DTT-RC2436E		✓		
DTT-RC2448E		✓		
DTT-RC2460E		✓		


Model	18"	24"	30"	36"
DTT-RC2472E		✓		
DTT-RC3048E			✓	
DTT-RC3060E			✓	
DTT-RC3072E			✓	
DTT-RC3660E				✓
DTT-RC3672E				✓

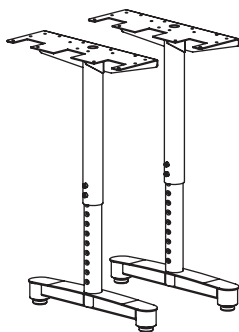


18" SPREAD

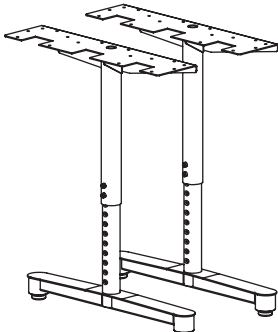


24" SPREAD

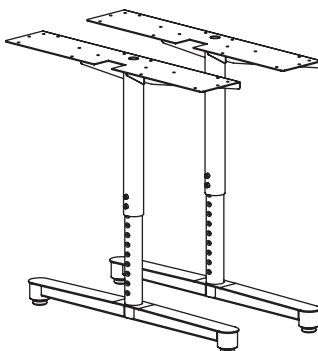

30" SPREAD

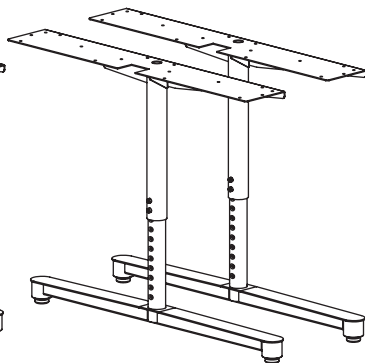


36" SPREAD

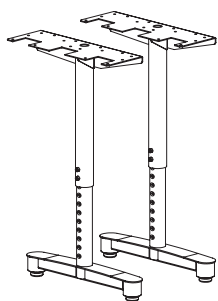


# Shape Tables


## T-Legs | 18" Spread

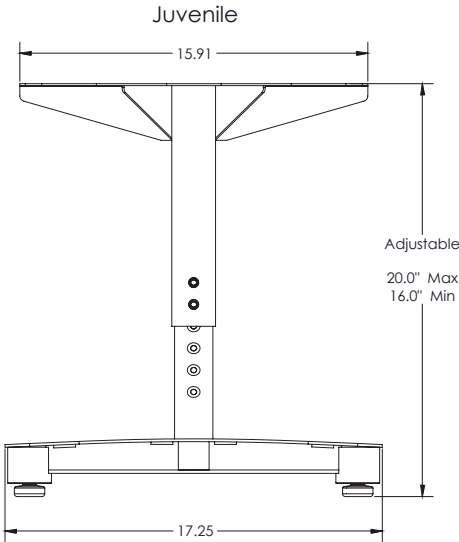


16"–20"  
DTLT-2AJ18

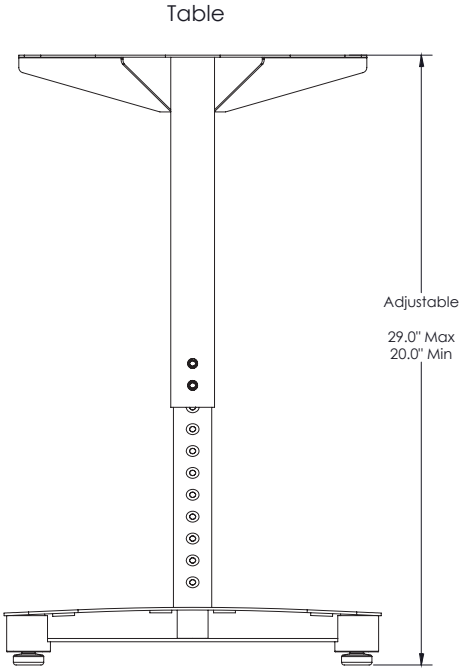

20"–29"  
DTLT-2AT18

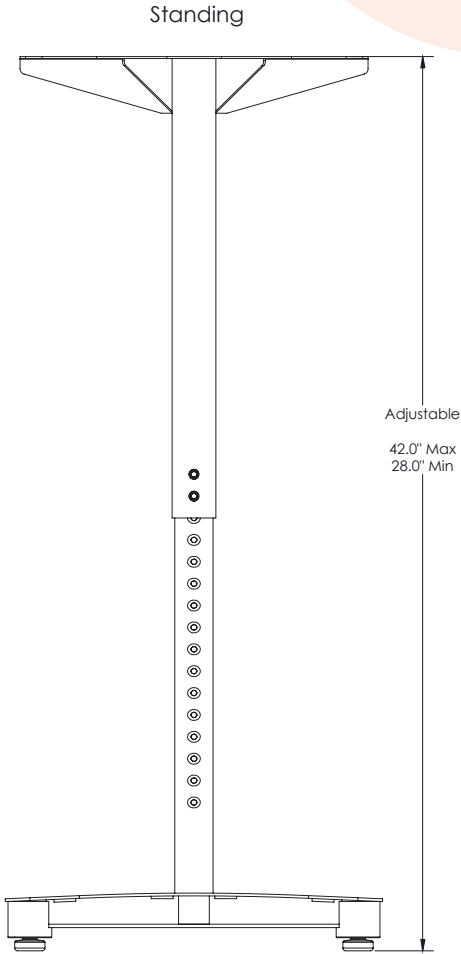


20"–29"  
DTLT-2AT18

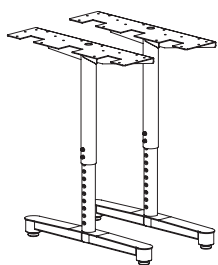


# Shape Tables

## T-Legs | 24" Spread

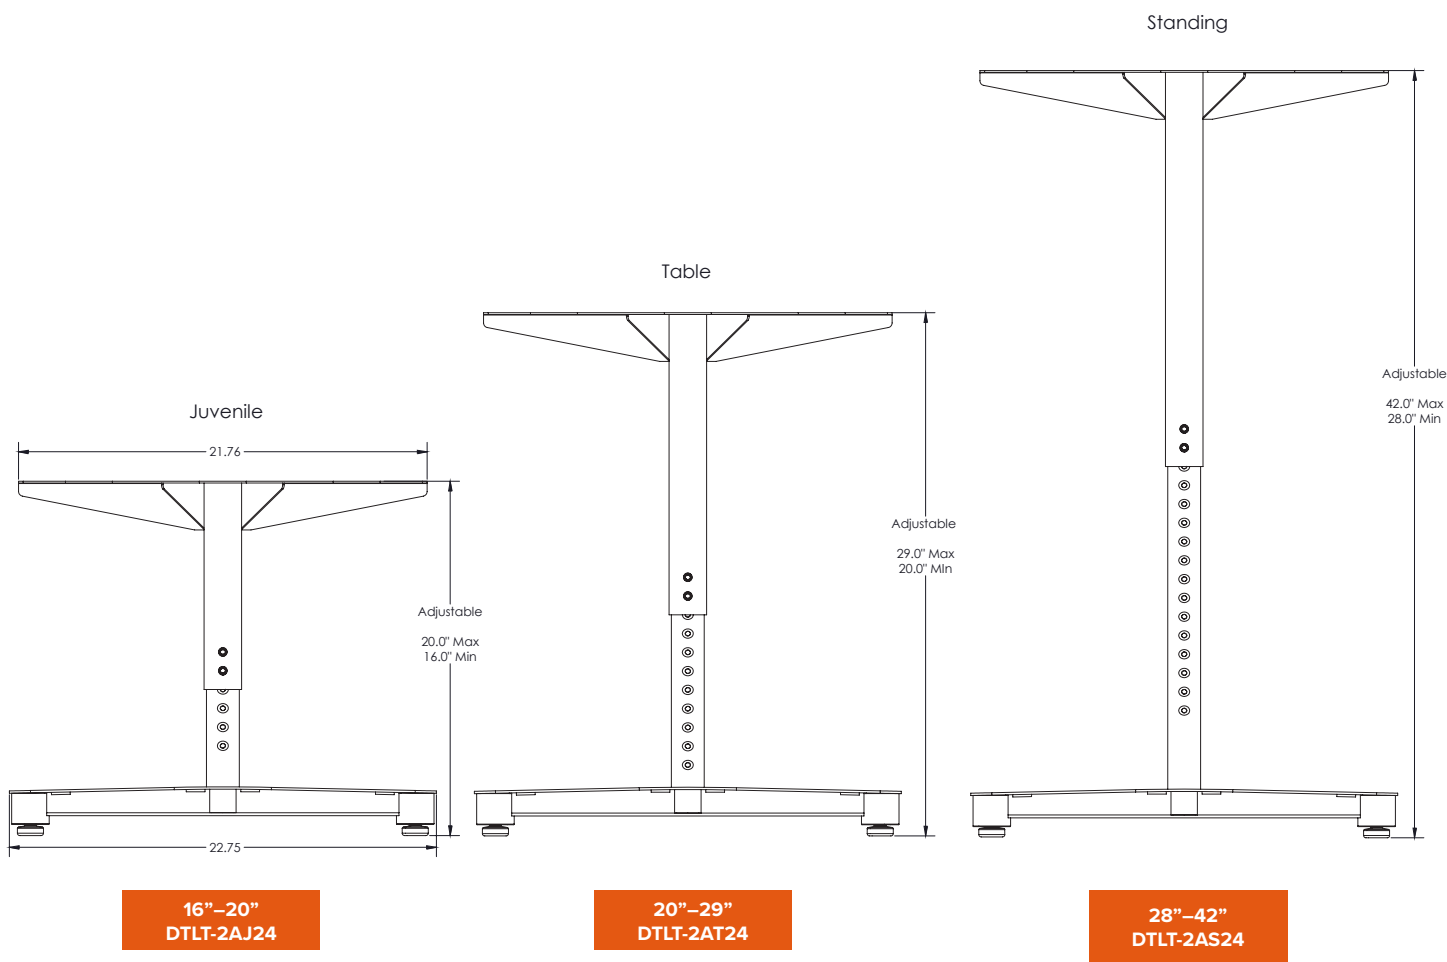




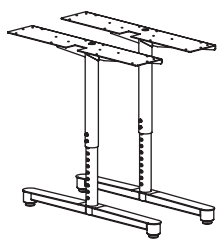


# Shape Tables


## T-Legs | 30" Spread

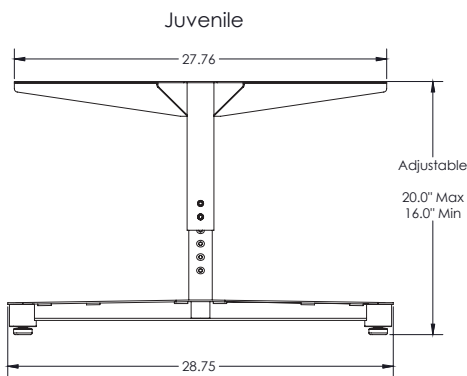


16" –20"  
DTLT-2AJ30

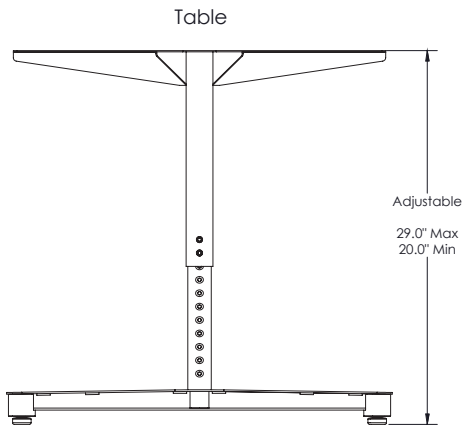

20" –29"  
DTLT-2AT30

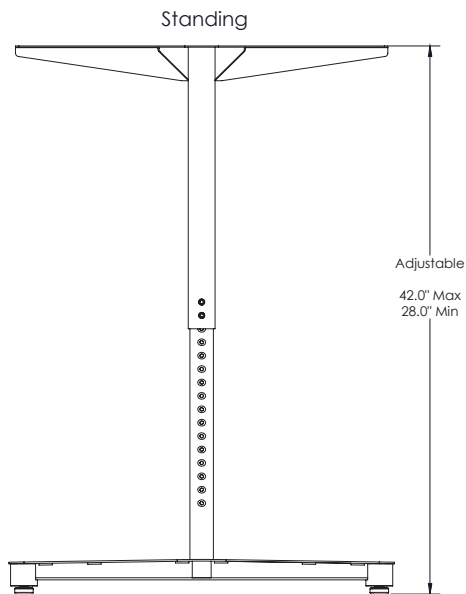


28" –42"  
DTLT-2AS30

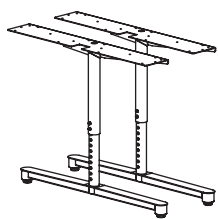

# Shape Tables


## T-Legs | 36" Spread

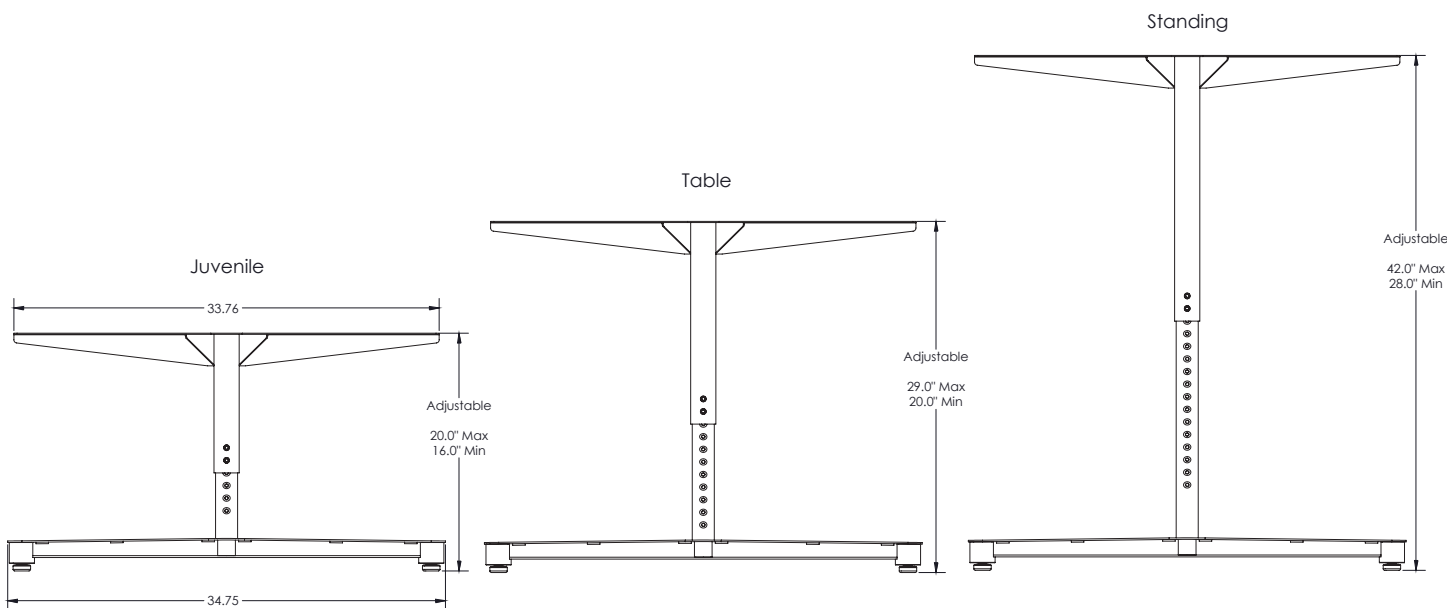

16"–20"  
DTLT-2AJ36


20"–29"  
DTLT-2AT36

28"–42"  
DTLT-2AS36

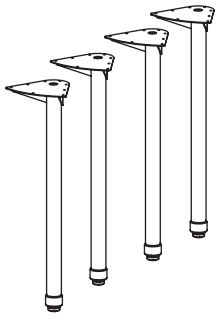


# Shape Tables


## Fixed Legs, 50mm Caster

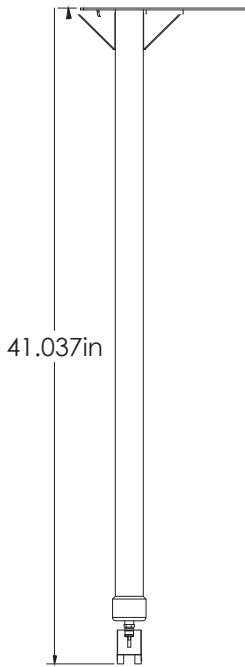


**42"**  
**DTLP-4F42**

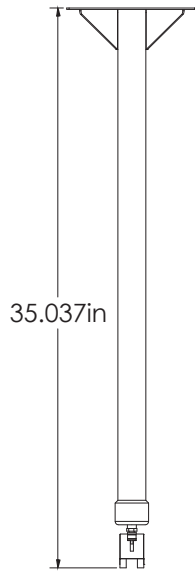


**36"**  
**DTLP-4F36**

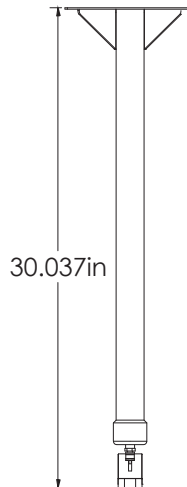

**29"**  
**DTLP-4F29**

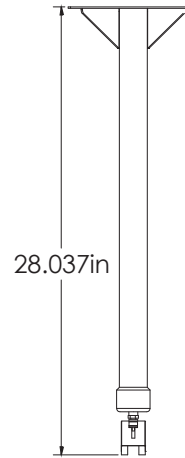


**27"**  
**DTLP-4F27**

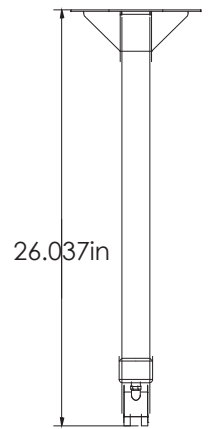


**25"**  
**DTLP-4F25**

- 50mm caster: 4 qty per set
- 8 qty DTLP screws per leg: 24 qty per set
- Fixed height, non-adjustable
- 16-gauge steel tube

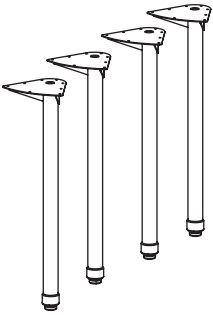


## Shape Tables

### Fixed Legs, Nylon Glide

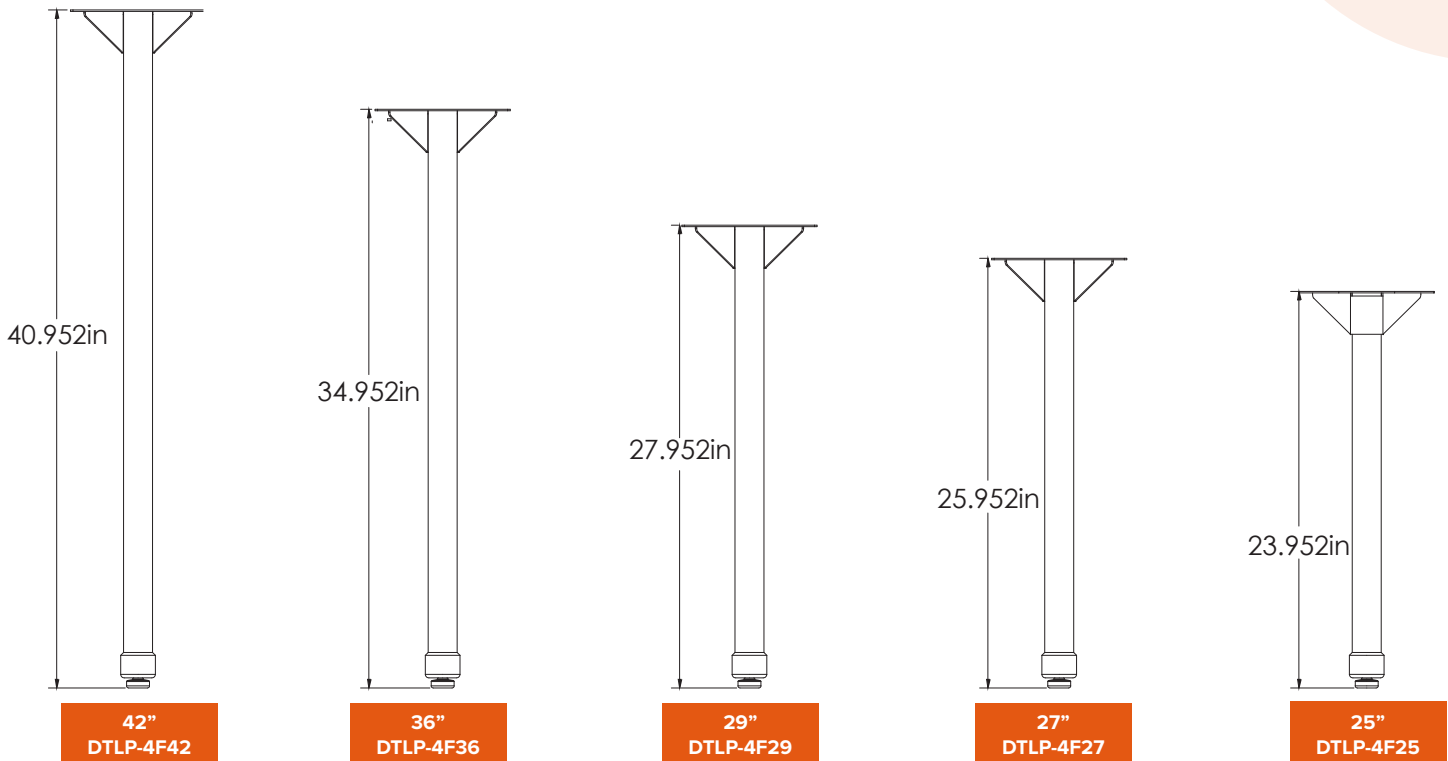


- Glide height at lowest point: 4 qty per set, glide adjustable
- 8 qty DTLP screws per leg: 24 qty per set
- Fixed height, non-adjustable
- 16-gauge steel tube

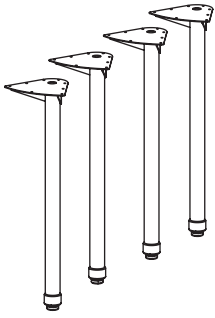

## Shape Tables

### Fixed Legs, Wheelbarrow

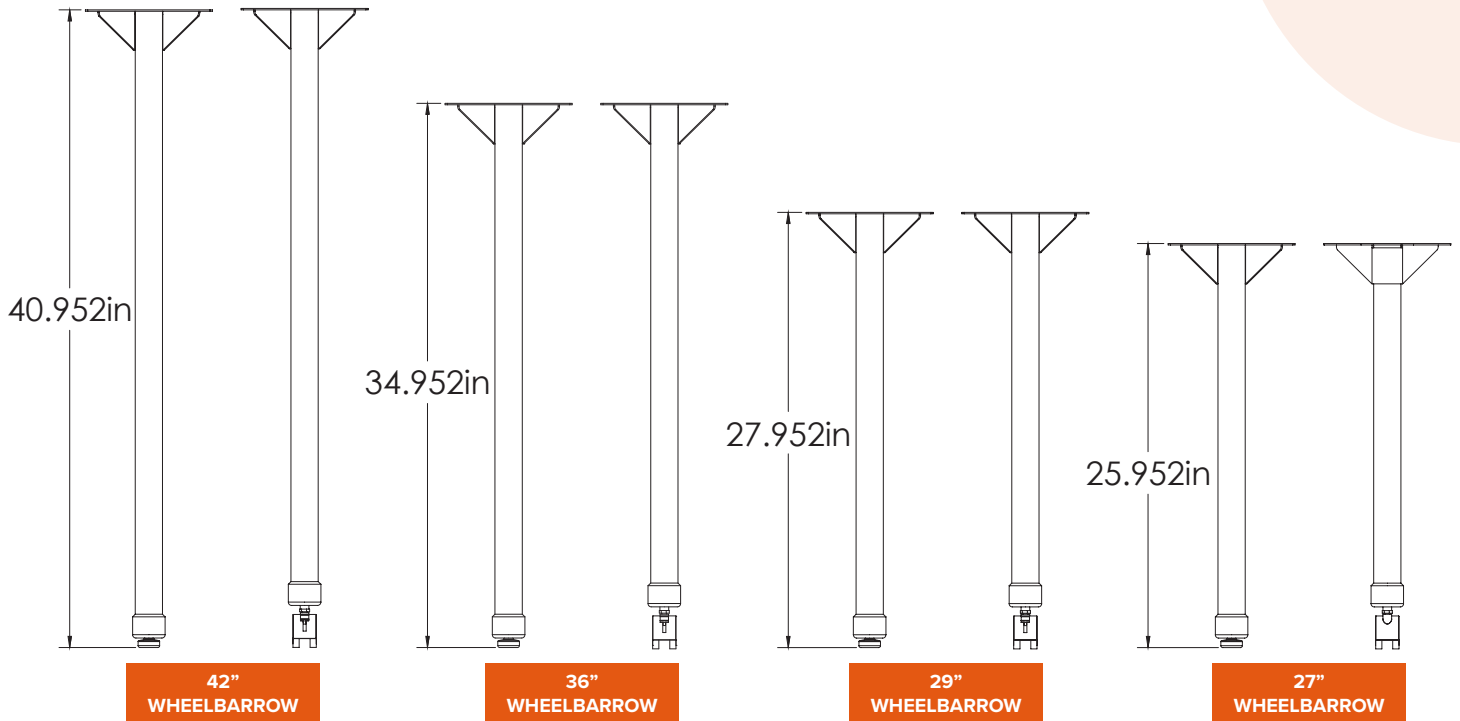

DTLP-4F42 WHEELBARROW  
 • DTLP-4F42.GLIDE  
 • DTLP-4F40.CASTER

DTLP-4F36 WHEELBARROW  
 • DTLP-4F36.GLIDE  
 • DTLP-4F34.CASTER

DTLP-4F29 WHEELBARROW  
 • DTLP-4F29.GLIDE  
 • DTLP-4F27.CASTER

DTLP-4F27 WHEELBARROW  
 • DTLP-4F27.GLIDE  
 • DTLP-4F25.CASTER

- Glide height at lowest point: 2 qty per set, glide adjustable.
- Caster non-adjustable: 2 qty per set, 50mm.
- 16-gauge steel tube
- Glides are adjusted to fit exact caster heights.
- Leg kits are packed as below.